

YASHICA



Y16

INSTRUCTION

BOOKLET


Description of the

CLIP-LOAD

YASHICA

Y16


Read the following description carefully until you become fully familiar with all these working parts.

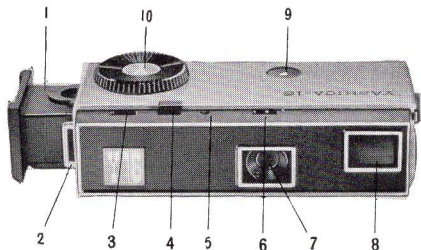

1. Film Magazine
2. Strap-holder
3. Shutter Speed Reading Window
4. Shutter Release Button
5. Cable Release Socket
6. Aperture Reading Window
7. Lens
8. Finder
9. Film Exposure Counter
10. Film Advancing Disc
11. Slide-Lock for Magazine
12. Built-in Flash Terminal
13. Finder Eye Piece
14. Shutter Speed Control Ring
15. Aperture Control Ring
16. Tripod Socket


A precision instrument capable of bringing you some of the finest photographs you have ever taken.

Please read the following pages carefully. Follow the easy, step-by-step recommendations.

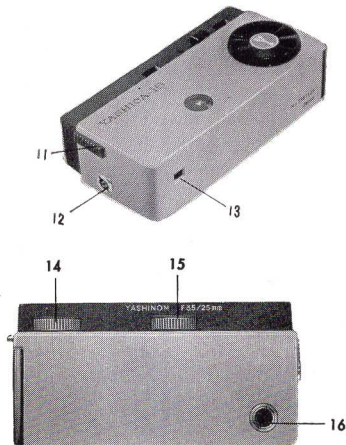

HOLDING THE CAMERA

The YASHICA Y16 is held between the forefinger and the thumb of the right hand, with the forefinger placed on the Film Advancing Disc and the thumb on the bottom of the camera. The camera is also held with the left hand in a similar manner as above. The Shutter Release Button is operated with the middle finger.

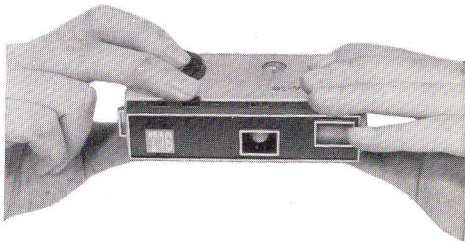

**LOADING
THE
CAMERA**



16mm roll film

24 exposure per roll in the CLIP-LOAD MAGAZINE

10 X 14mm size negative


Black and White or Color

1. Insert a new CLIP-LOAD MAGAZINE (loaded with black and white or color film) into the YASHICA Y16.
2. Make sure the side with the cogwheel is on top.
3. Advance the film by turning the Film Advancing Disc counter-clockwise until it stops. Press the Shutter Release Button.

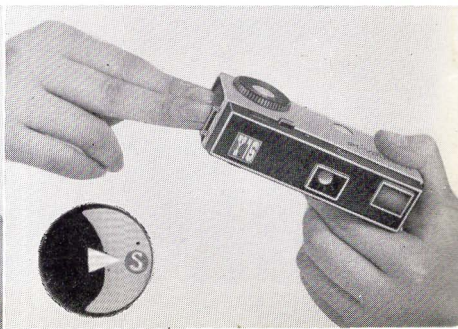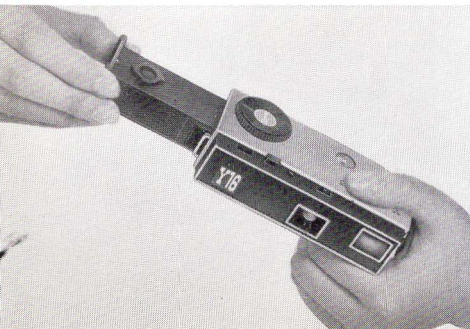

4. Repeat the operation of advancing film with the Film Advancing Disc and pressing the Shutter Release Button twice. The Exposure Counter will indicate "S" (start) opposite the white triangle. Now advance the film again, and the Exposure Counter Dial will register figure 1, which indicates that the film is in position for the first exposure and the camera is ready to take the first picture.

CLIP-LOAD MAGAZINE

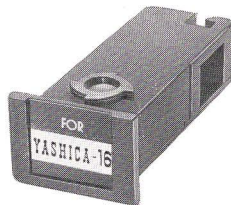


- FIRST** :- Turn this Film Advancing Disc counterclockwise until it stops.
- SECOND** :- Press this Shutter Release Button



The CLIP-LOAD MAGAZINE houses the film transport mechanism and 24 exposures of film. The magazine will take both the perforated and non-perforated type of 16mm film, available in black and white or color. Using additional magazines and loading them with different types of film will enable you to take photographs under all conditions with the YASHICA Y16. Changing magazines is done in a matter of seconds; **advance the last exposed frame of film by turning the Film Advancing Disc**, push the Slide Lock forward and the magazine will pop out from the camera, then insert the new magazine into the slot and you are ready to shoot.

REPEAT THIS OPERATION TWICE, AND ADVANCE THE FILM AGAIN — then the exposure Counter Dial will register figure 1

PICTURE TAKING PROCEDURE

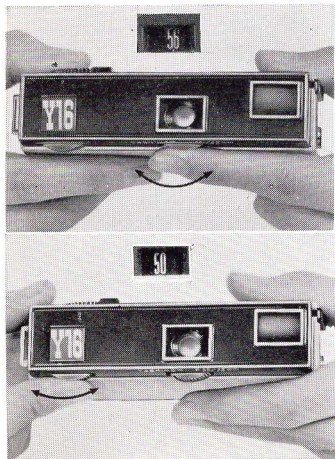

1. Turn the Aperture Control Ring to the left or to the right until the desired number appears in the Aperture Reading Window.
2. Turn the Shutter Speed Control Ring and set the pre-determined shutter speed. The shutter speed should appear in the Shutter Speed Reading Window.
3. Sight the subject through the viewfinder and when you have composed your picture gently press the Shutter Release Button.



Horizontal Holding

Vertical Holding

SHUTTER SPEED


The shutter speed controls the duration of the exposure. Shutter speeds on your YASHICA Y16 with its metal focal plane shutter are 1/25, 1/50, 1/100, 1/200 of a second and 'S'. The 'S' setting is for taking pictures with an exposure longer than one second. Use a tripod or brace when using the 'S'. It is advisable to set, before you advance the film and cock the shutter by turning the Film Advancing Disc.

The Shutter Speed Reading Window, Aperture Reading Window, and Film Exposure Counter are conveniently arranged on top of the camera, permitting you to check at a glance for any possible errors in the settings before clicking the shutter.

VARIABLE SLOW SHUTTER SPEED AND TIME SETTING

When the Shutter Speed Dial is set at 'S', the fine metal focal plane shutter of the YASHICA Y16 offers variable slow shutter speed and 'Time' setting, with its double tension action Shutter Release Button. If the Shutter Release Button is depressed to the bottom in one gentle continuous action, shutter speed will be about 1/10 of a second. Thus, variable slow shutter speeds are possible by the pressure application and time lag between the first and second tension on the button. For 'Time', the pressure on the button is removed after the shutter blades are open and then re-applied after the required exposure is made.

FILM WINDING

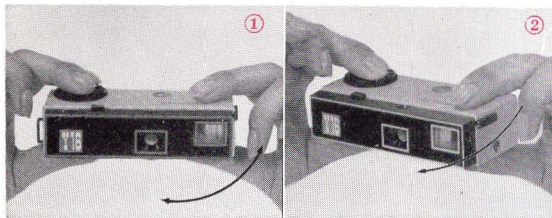

The Yashica Y16 incorporates a unique method of film winding. The film is wound by holding the camera between the forefinger and the thumb of the right hand, with the forefinger placed on the winding disc and the thumb on the bottom of the camera. The camera is then pushed forward with the left hand until it clicks. Bringing the camera back to its original position, the shutter release will be approximately under the middle finger of the right hand, and you are ready to shoot in an instant. This operation transports the film, cocks the shutter, and sets the exposure counter all automatically. This action prevents double exposures.



UNLOADING FILM

When the Exposure Counter indicates 24, IT IS THE LAST EXPOSURE.

Before removing the CLIP-LOAD MAGAZINE from the camera, **advance the last exposed frame of film by turning the Film Advancing Disc and clicking the shutter.** Repeat this operation once again. Then push the Slide Lock forward and the magazine will pop out.



Immediately wrap with the original wrapper, the CLIP-LOAD MAGAZINE, without removing the exposed film from it, and replace it in the film carton. This will prevent any possible light leakage and damage to the film.

Note: When the Slide Lock is released, the Exposure Counter will reset automatically to "S", or start.

THE LENS OPENING



f 3.5



f 4



f 5.6



f 8



f 11



•(f16)

The lens aperture controls the amount of light that will pass through the lens on to the light-sensitive film. YASHICA Y16, with its Yashinon lens, offers openings at f3.5, 4, 5.6, 8, 11 and •(16). Notice that the lower the number, the larger the opening. f3.5 is the largest opening, and •(f16) the smallest. To set the lens opening, turn the Aperture Control Ring by setting the desired number in the Aperture Reading Window.

TAKING FLASH PICTURES

Your YASHICA Y16 offers X synchronization.

As you become more proficient at taking pictures, you will want to acquire accessories that increase the versatility of your camera. One of the first accessories you will want will be a flash unit. Synchronization for flash is built-in.

A standard FC connector plugs into the flash terminal. The YASHICA Y16 Flash Gun attaches to the camera with a bracket that screws into the tripod socket.



CABLE RELEASE

SELF-TIMER



A Cable Release or a Self-Timer can be fitted to your YASHICA Y16. Screw the Cable Release into the Socket provided beside the Shutter Release Button. Your camera dealer will supply the proper Cable Release for your Y16.

FILTERS

Initially, you will find a yellow filter ideal for bringing out clouds in landscape pictures and for general uses. An UV filter is suitable for color photography and also to protect the lens. As you become more advanced you will want to use various filters, such as orange, green, etc. for different effects. The following special slip-on filters are available for your Y16.

Filter	Filter Factor	When used to	Film
UV	1	Outdoor photograph	Color & B/W
Y2 (Yellow)	2	Land and seascapes	B/W
O2 (Orange)	4	Darkens the sky	B/W
1A	1	Haze-cut	Color
82A	1.4	Early morning & eve.	Color
81B	1.2	Rain or overcast sky	Color
80A	3	Daylight film for tungsten light photo	Color



Accessories & EQUIPMENT

for the YASHICA WAY of 16mm
photography

FILM : (loaded in daylight CLIP-LOAD
MAGAZINE)

Y16 Black and White Film

Y16 Color Film

Film Loader

FOR PICTURE TAKING :

Filter

Flash Gun

FOR FILM DEVELOPING :

Developing Tank

FOR VIEWING :

Slide Viewer

Slide Projector

etc.

EXPOSURE

Exposure means finding the right combination of lens-opening (aperture) and shutter speed in relation to the sensitivity (ASA) of your film. (ASA indicates American Standard Association). For example if you are using a film of ASA 100 (XX type) sensitivity, your correct exposure will be according to the following table:

DAYLIGHT EXPOSURE TABLE

Your speed will be 1/100 with aperture numbers shown below.

	Bright Sun	Hazy Sun	Cloudy-Bright	Cloudy-Dull or Open Shade (4)
Light Subject (1)	f/16	f/11	f/8	f/5.6
Average Subject (2)	f/11	f/8	f/5.6	f/4
Dark Subject (3)	f/8	f/5.6	f/4	f/3.5

- (1) Light Subjects: Distant landscapes, near-by people with sea, beach and snow scenes in the background.
- (2) Average Subjects: Near-by people, house, gardens, buildings and places not in the shade. Advisable to use this class when light and dark objects are in about equal proportions.
- (3) Dark Subjects: People in dark clothing; trees, flowers, animals and large buildings.
- (4) Open Shade: Subjects shaded from the sun but lighted by a wide area of open sky. The less the open sky, the larger the lens opening.

If you are using an ASA 50 film, you should make a larger lens-opening or lower your shutter speed (1/50). When in doubt, follow the film manufacturer's recommendation, and you will be assured of good pictures.

This picture was taken
in available light; an ex-
ample of the excellent
result obtainable with
the YASHICA Y16.

Compare the enlarge-
ment with contact print.



Contact print



Enlargement

AN EXAMPLE OF THE WONDERFUL RESULT
OBTAINED WITH THE YASHICA Y16

*Wishing you good photography
with the Y16 !!*



CAMERA IDENTIFICATION

As soon as possible after you purchase your YASHICA Y16, fill in the information required below. Keep this booklet in a safe place. In case of loss or theft this information will prove valuable in recovering the camera.

YASHICA Y16 Serial Number _____

Purchased at _____

(Name of Film)

(Address)

Date of Purchase _____

OWNER _____

(Name)

(Address)

REVIEW:

- a Select your exposure combination
- b Set the lens-opening (aperture)
- c Set the shutter speed
- d Turn counterclockwise the Film Advancing Disc which automatically cocks the shutter and transports the film
- e Compose your picture through the viewfinder
- f Take the picture

CLIP-LOAD

SUBMINIATURE

CAMERA Y16



**YASHICA
CO., LTD.**

Printed in Japan