

HOW
TO
USE



YOUR
YASHICA





THIS IS YOUR YASHICA


A precision instrument capable of bringing you some of the finest photographs you've ever taken.

Please read the following pages carefully. Follow the easy, step-by-step recommendations.

- To fully exploit all the advantages of your Yashica
- To take better pictures with more confidence
- To maintain the flawless operation of the camera

Read the following descriptions carefully


familiar with all these working parts

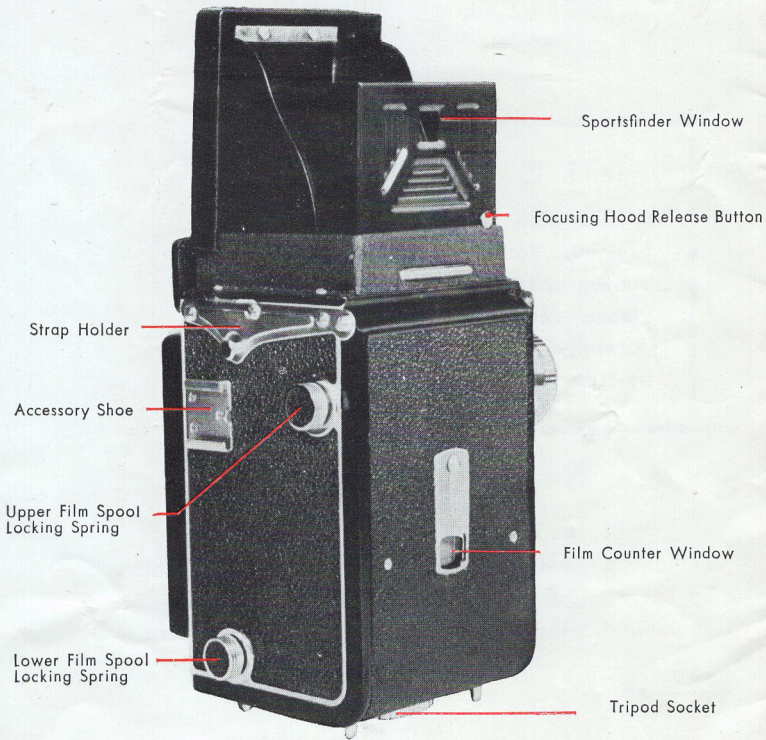

fully until you become fully

ts.

Model



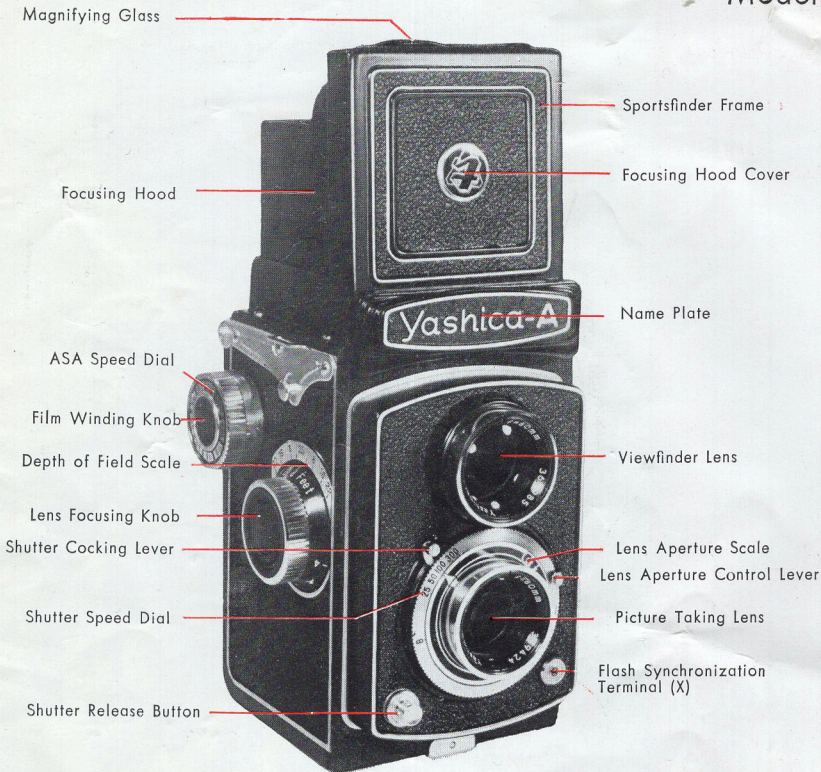


REMOVING THE CAMERA FROM CASE

To remove the camera for film loading raise the two metal Lock Slides.

Spread the sides of the case apart and lift the camera free.

Just snap off the bottom when removing the entire front element of the carrying case.

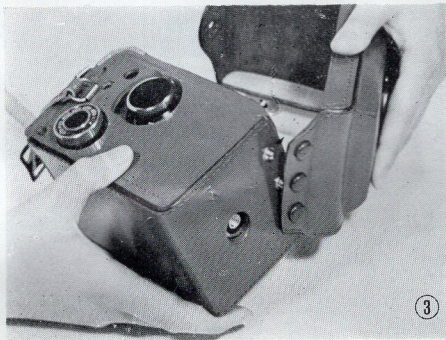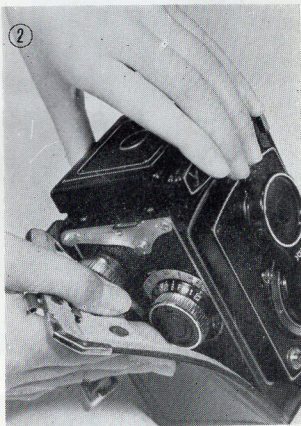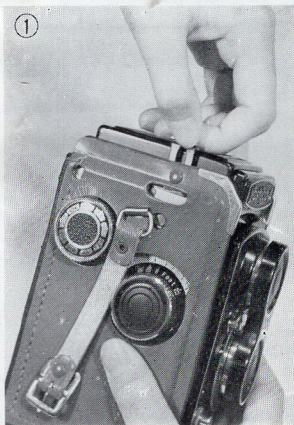

Your Yashica camera comes complete with a deluxe, leather eveready case. While the camera is in the case, all working parts are visible and ready to use. All you need to do is open the back-snap and lift the top of the case forward


LOADING FILM

120 size film



12 pictures per roll


in the popular 2 1/4 x 2 1/4 size

Black-and-White or Color

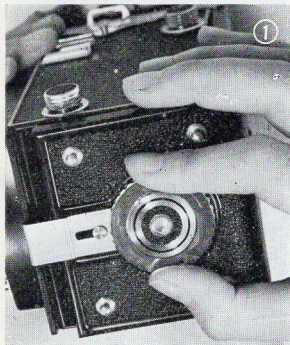


- (1) To unlock back cover, turn the tripod socket in the direction marked '0'. Then open the Back Cover by swinging it out.
- (2) Remove the Take-Up Spool in the Lower Film Chamber by pulling out the Lower Film Spool Locking Spring.
- (3) Place the Take-Up Spool in the Upper Film Chamber by pulling out the Upper Film Spool Locking Spring.
- (4) Place a new roll of size 120 film in the Lower Film Chamber.

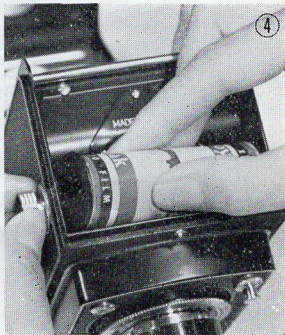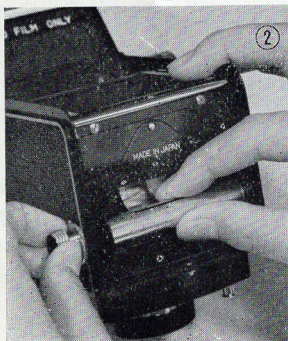

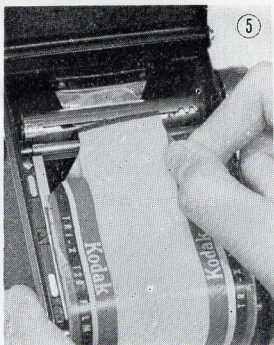



(5) Gently draw out the film leader. Thread the film leader into the wider slot of the Take-Up Spool in the Upper Film Chamber, then turn the Film Winding Knob. Make sure that the film leader is placed evenly.

(6) Turn the Film Winding Knob three or four times so that the film leader is held securely on the Take-up Spool.

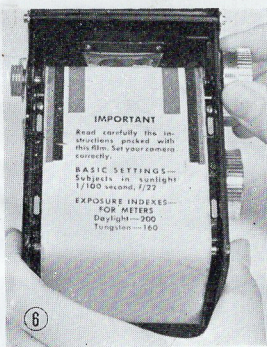

(7) To close the Back Cover, turn the lock in the 'C' direction (clockwise) until it stops.






(8) Carefully and gently turn the Film Winding Knob until the Film Counter Window shows number '1'. You are now ready to take the first picture.

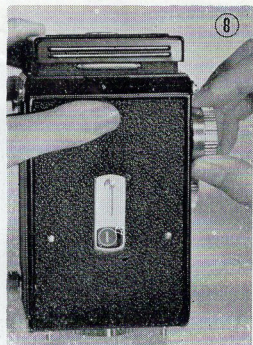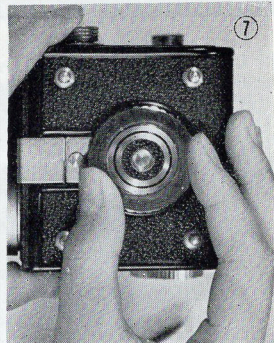

Caution: When loading or unloading film, stand in a shadow—never in strong, direct sunlight.

PICTURE TAKING PROCEDURE


- (1) Open the Viewfinder Hood by lifting it at back. Press the Viewfinder Hood down to close it.
- (2) Set the Lens Aperture Control Lever to the desired number on the Lens Aperture Scale.
- (3) Set the Shutter Speed Dial on the required speed to the Shutter Speed Indicator.
- (4) Push down the Shutter Cocking Lever. Be sure not to change Shutter Speed after the shutter is cocked.

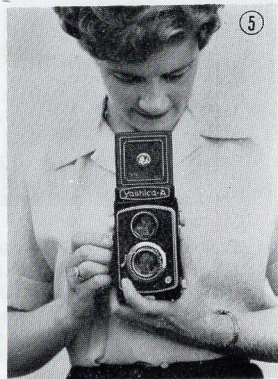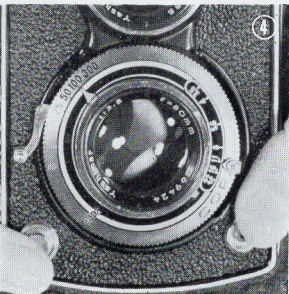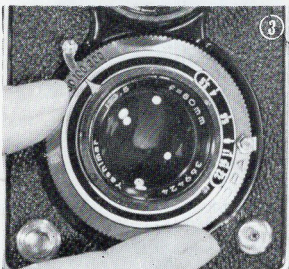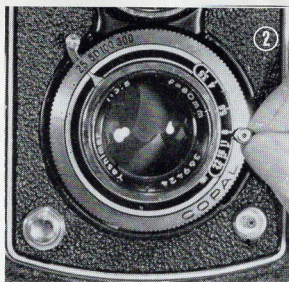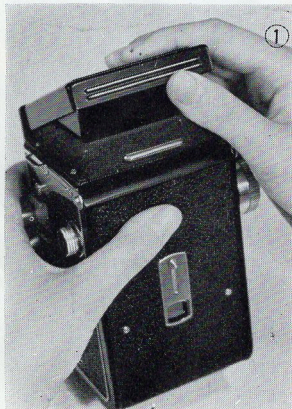

- (5) Now gently release the Shutter by pressing the Shutter Release Button.


MAGNIFYING GLASS

Assures more accurate focusing.

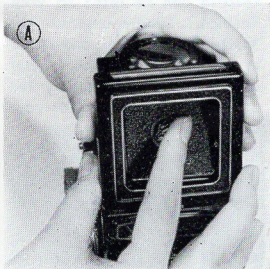

Ⓐ Raise the Magnifying Glass by pressing the front of the Focusing Hood Cover inward, holding the Focusing Hood so that it does not close. When using the Magnifying Glass, place your eye as close to the Magnifying Glass as possible.

Ⓑ Always make sure that you have first lowered the Magnifying Glass before closing the Focusing Hood.

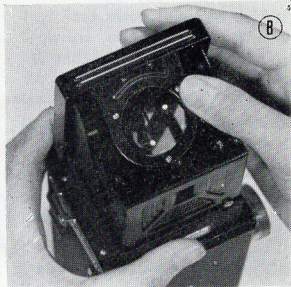


SPORTS FINDER

Sight your subject through the Sportsfinder Window.



Depress the Focusing Hood Cover until it clicks into place. Lift the Yashica to your eye level.

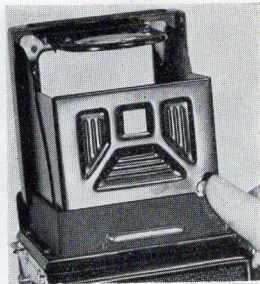



Push the Release Button when close it.

TAKING FLASH PICTURES

As you become more proficient at taking pictures, you will want to acquire accessories that increase the versatility of your Yashica. One of the first accessories you will want will be a flash unit.

Your Yashica is ready and waiting. Synchronization for flash is built-in. A standard PC connector plugs into the flash terminal. Your camera dealer will be glad to supply the proper flash attachment for your camera.

Your Yashica A offers X synchronization for short peck bulbs—SM and SF—and for Electronic Flash.

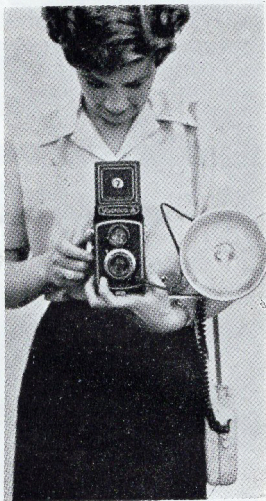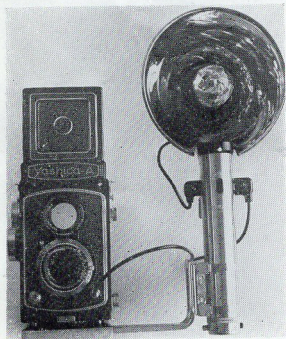

To calculate exposures for flash pictures, follow the bulbs manufacturers simple recommendations.

CABLE RELEASE

A standard, overlap-type Cable Release can be fitted to your Yashica. Simply unscrew the Shutter Release Ring and screw in the Cable Release. Your camera dealer will supply the proper Cable Release for your camera.



SELF-TIMER

To be attached to the Shutter Release Button after unscrewing the Shutter Release Button Ring. It enables you to take self-portraits, group pictures with you in them, which gives you ample time to move from behind the camera into the picture. Naturally, the camera must be mounted on a tripod or braced on a support.

*You see the picture
before taking*

UNLOADING FILM


After taking all 12 pictures turn the Film Winding Knob about 6 turns, to take up the remaining film. Then open the camera and remove the film.



Your Yashica is a twin-lens reflex camera. The lower lens takes the picture. The upper lens is for focusing and composing on the ground glass viewing screen.

To begin, open the Focusing Hood by lifting it at the back. Now point your Yashica at the subject.

Rotate the Focusing Knob until your subject on the ground glass screen is sharp. At the same time compose your subject on the ground glass as you would like to see it in the final picture.

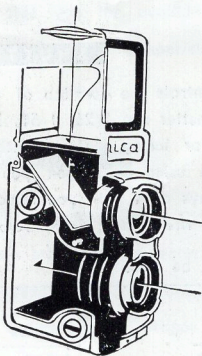**COMPOSING**

is unusually simple on the Yashica's ground glass viewing screen. The 4 red guide lines help you for properly composing your pictures.

In addition to focusing, there are two other basic adjustments on any fine camera: the LENS APERTURE or OPENING and the SHUTTER SPEED.

THE LENS OPENING

The Lens Aperture controls the amount of light that will pass through the lens onto the light-sensitive film. Your Yashica-A, with its Yashimar lens, offers openings at f: 3.5 4 5.6 8 11 16 22



Notice that the lower the number, the larger the opening. F 3.5 is the largest opening, f : 22 the smallest.

To set the lens opening, move the Aperture Control Lever to the desired number on the Aperture Scale.

SHUTTER SPEED

The Shutter Speed controls the duration of the exposure. Shutter speeds on your Yashica-A with its fine Copal Shutter are 1/25, 1/50, 1/100, 1/300th of a second and B.

The 'B' setting is for taking pictures with an exposure longer than 1/25 second. Use a Tripod or Brace when using B. When you press the Shutter Release Button on the 'B' setting the shutter stays open until you release pressure on the button.

It is advisable to set the shutter speed before you cock the shutter at all times.

Camera may be Hand Held

Use a Tripod or Brace

Average Pictures
1/25 1/50 1/100

Action
Pictures
1/300

Time
Exposure
' B '

EXPOSURE

As you know, some films are more sensitive to light than others. The ASA (American Standard Association) rates films as to their relative light sensitivity.

(These ASA ratings are packed with the film manufacturer's recommendations.)

For example: It is possible to use any of the following settings:

1/200th at f: 4 1/25th at f: 11

1/100th at f: 5.6 1/10th at f: 16

1/50th at f: 8 1/5th at f: 22

It is generally advisable to use, the smallest aperture permissible to utilize the fullest 'zone of sharp focus' or depth-of-field. (See page 11)

As you become more familiar with your Yashica and take a variety of picture-types, the selection of the most advisable shutter speed and lens-opening combinations comes more rapidly.


As we mentioned previously, all 6 combinations give you the available exposure and the selection of the best combination is a technique that comes with experience.

EXPOSURE METER

When using the exposure meter outdoors—especially at beaches, point the meter down slightly when taking the light reading, to avoid the intensely bright sky or water.

Selecting the proper lens opening and shutter speeds are not normally a simple matter. However, it measures the light and helps you determine the proper settings—easily and rapidly. Available at your camera dealer.

HOLDING THE CAMERA

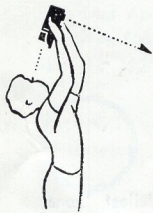

When fences or other obstructions are in your way you can hold your Yashica over head, focusing and viewing from below.



Hold the camera steady, then gently, push the Shutter Release Button.



For low objects rest the Yashica on the ground.



Steady the camera on your knee when taking a picture from a lower level.




Use the Sportsfinder for taking picture on the eye level.

DEPTH-OF-FIELD

When you focus the camera on a subject there is a certain distance in front and back of the subject within which other objects will also appear sharp. This is known as the "Depth-of-Field", and it varies with the lens aperture. The smaller the aperture the greater the Depth-of-Field; it is much larger at $f:22$ than at $f:3.5$.

At the focusing knob is a scale which will indicate the Depth-of-Field when the camera is focused at various distances. You will notice that on either side of the $f:3.5$ figure is a similar set of numbers which represent lens apertures. When the camera is focused on your subject look for the aperture you are using on either side of the scale to determine the Depth-of-Field. Thus, if the camera is focused at 10 feet and the lens aperture is $f:8$, the Depth-of-Field (area in which all objects are sharp) is from about 8 ft. to 13 ft.

You can also use the depth-of-field scale to use your Yashica as a fixed-focus camera. In this case set the infinity mark on the distance scale opposite the lens aperture being used. If the aperture is $f:8$ you will notice that all objects from about 25 feet to infinity will be sharp.

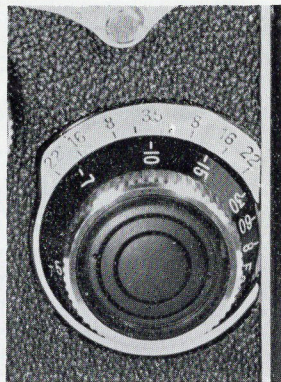

F I L T E R S

Your Yashica-A accepts sunshades and filters adapter rings in convenient push-on mounts that readily fasten to the 'taking' lens. A complete range of filters and supplementary lenses are available in the popular 32mm size.

Initially, you will find a yellow filter ideal for bringing out clouds in landscape pictures and for general uses. As you become more advanced, you may want to use various filters, such as orange, green, etc. for different effects. Your camera dealer will give you complete information.

Notice !

Be sure to replace the lens Cap when your camera is not in use. Keep your camera away from dust and moisture. For cleaning the lens surface to remove dust or dirt, always wipe very lightly by using clean gauze or lens cleaning cloth. Do not wipe the lens with a dirty handkerchief. When you are not using your camera for a long period do not leave the shutter set. In such cases place the lens cap over the lens to avoid exposure, and release the shutter.

REVIEW :

- a Select your exposure combination
- b Set the lens opening (aperture)
- c Set the shutter speed
- d 'Cock' the shutter
- e Focus on the ground glass screen
- f Compose (on the ground glass or through the sportsfinder)
- g Take the picture
- h Advance the film



YASHIMA OPTICAL IND. CO., LTD.

Tokyo, Japan

Printed in Japan