

 
 
"START" CAMERA Junior

PULL—PRESS—CLICK


... and you're ready to shoot a good picture

Features :

- Lens : SM (Single Meniscus)
 Focus : 42 m/m
 Shutter : I (Instant) 1/30 sec.
 & B (Bulb)
 Film : Bolta Size 24 × 24 m/m
 12 Exposures.

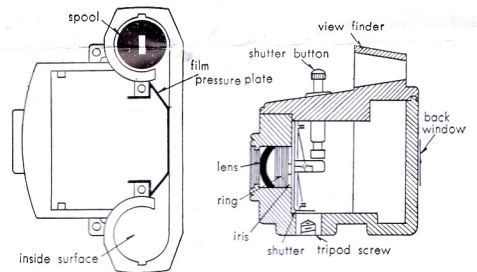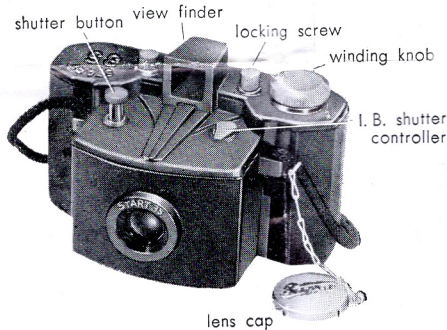

How to load the film :

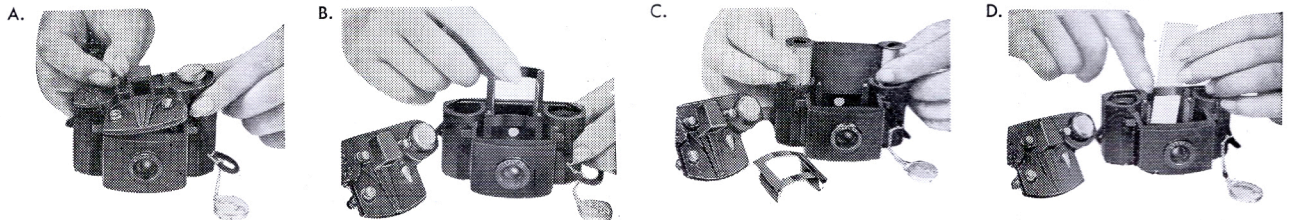

- A. Loosen two camera locking screws fixed on both sides of the view finder by turning counter-clockwise, then take off top cover.
 B. Take out the film pressure plate from the inside of the camera chamber.
 C. Fix one end of the film on the take-up spool, then set them back in the chamber. In this instance, the inside surface of the film should be facing the lens.
 D. Insert the film pressure plate into its original location to press the leader of the film. To prevent the leader paper being torn by the edge of the pressure plate, it is advisable to use a small piece of card to secure easy installation of the pressure plate. Card may be inserted between the leader paper and the pressure plate in the same manner as you use a shoe horn, and take the card out after the pressure plate is properly installed.
 E. While turning the winding-knob slightly clockwise, place the top cover back easily until a slight click. Then, screw down the locking screws tightly, and turn the winding-knob until the mark (1) appears in the red-window.

How to make exposure :



Negative plate

In the outdoor light, camera must be about 2 meters from the object; in case a picture of the full length of a person, about 4 meters. Then, take off the lens-cap, set the indicator of the shutter-controller on the mark I, and hold the camera firmly.

Looking at the image through the finder, push the shutter button down with your forefinger.

When taking a picture in the dark or cloudy outdoors, set the indicator on the mark B and push the button down, and instantly release it. In this case, the speed of the shutter is 1/2 second.

In the case of indoor exposure, release the shutter button after a second or two according to the situation.

When "B" shutter is used, the camera must be used on a tripod or set firmly.

After taking a picture, do not forget to wind the winding-knob until the next number appears in the red-window.

Enlargement



Manufactured by
IKKOSHA CO., LTD.
 4792 OHI-KANOEZUKA,
 SHINAGAWA, TOKYO,
 JAPAN