
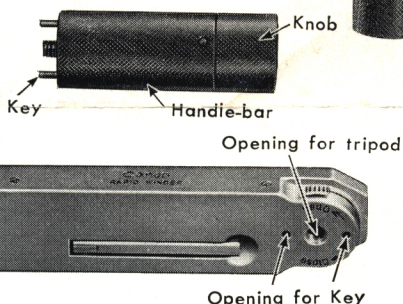


CANON RAPID WINDER


The Canon Rapid Winder is attachable to Canon cameras with serial number above 50,200 in place of the base plate. A pull on the trigger of the Rapid Winder transports the film and sets the shutter simultaneously without taking your eye off from the rangefinder eyepiece, thus giving great facility in shooting pictures in rapid sequence.

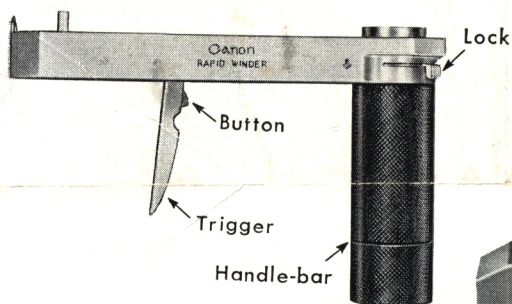


HOW TO ATTACH

The Canon Rapid Winder can be attached to your Canon Camera in the manner similar to covering the base plate. It is recommended you practice the steps given hereunder with empty camera before loading fresh film.


If you have already taken pictures without the Winder and then want to attach it to the camera it must be done in a darkroom to prevent the film from being exposed to light.

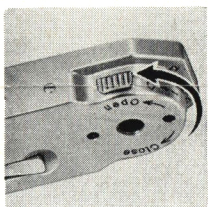


1. First, place the lock at the "open" position. This can be done by pushing the lock down a little.

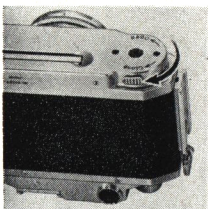


2. Take off the base plate and attach the Rapid Winder to the camera. Set the lock at the "close" position.

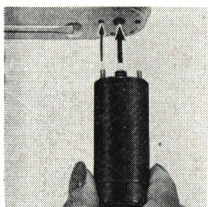

3. Insert the two pins of the handle-bar into the openings and turn the knob.

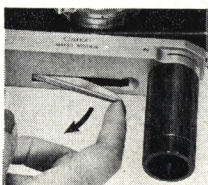

4. Pull out trigger and raise it as far as it will go.

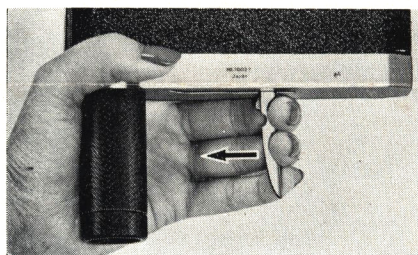

5. Release shutter and pull the trigger in the direction of the handle-bar with your left hand, as far as it will go, placing palm against the handle-bar as a guide. Thereby the film will be wound and the shutter set. As film-winding might not be completed with the first pull, be sure to pull the trigger once again as far as it will go.

6. After you have familiarized yourself with the above steps load your camera in the same manner described in the instruction book.

- Notes :**
- Before you pull the lever, be sure that it has been returned to the primary position.
 - To fold in the trigger, push the button, as you move it.
 - Even though the Rapid Winder is attached to the camera, you can wind film by turning the film winding knob, if necessary.
 - We have available a special hard leather carrying case and a soft zippered leather carrying case in which you can keep your camera attached with Rapid Winder.