


# DIRECTIONS FOR ATTACHING NO. 20 CABLE RELEASE TO VEST POCKET KODAK.

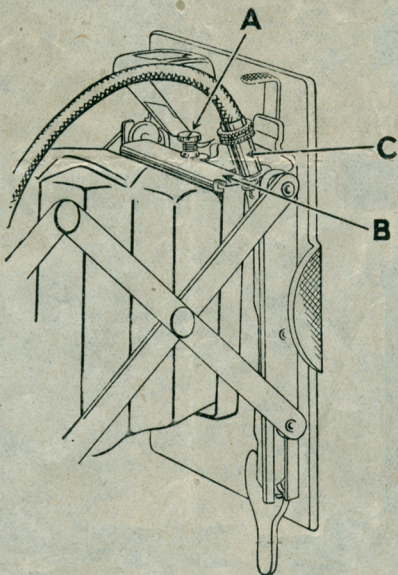

In above illustration, the No. 20 Cable Release is shown in position ready for use, on the Vest Pocket Kodak.

An attachment plate (B) which holds the Cable Release (C) in position over the lower lug of shutter trigger, is held in place on the top rim of the metal bellows frame by a set screw (A).

To attach, first turn the set screw (A) to the left until the end of the screw is flush with the under side of lug into which it turns.

Set the attachment plate (B) against the rim of the bellows frame and press firmly on the plate until the grooved part slips evenly into place.

Fasten in position by turning set screw, to tighten.

When properly set, the end of plate to which the Cable Release (C) is attached, will rest over the lower part of the shutter trigger and the shutter can be operated by pressure on plunger at the opposite end of the Cable Release.

To avoid kinking or making a sharp bend in the Cable, which will prevent its working freely, remove the Cable from the Kodak whenever it is required to completely close the Kodak. The part (C) unscrews from the plate, which may remain in position on the rim and will not interfere with closing the Kodak.

EASTMAN KODAK COMPANY.