XA 1 & ELECTRONIC FLASH A9M OLYMPUS OLYMPUS

Characteristics

- Full-frame 35mm Capsule Camera with automatic "solar power" exposures.
- Fabulous looks, fantastically easy to use.
- Tiny streamlined design for perfect pocketing.
- The Dust Barrier gives perfect protection from dust and dirt on all optical surfaces.
- Fixed focus, so there is no need for focusing. Focus range is 1.5 meters (5ft.) to infinity.
- A red warning mark appears and the shutter locks when there is insufficient light for exposure.
- Superbly affordable.

Notes

- This camera needs no batteries because the exposure meter is electrically operated by sunlight or other light source. (A9M needs one 1.5V size AA battery.)
- Do not leave the camera in high temperatures of 50°C (122°F) or more, or in high humidity
- The camera may not operate normally when used in extremely low temperatures of −20°C (−4°F) or less.
- Do not leave near a TV set or other appliances with a strong magnetic field, or inside a steel container.
- Filters and tripods cannot be used with the XA1

Electronic Flash A9M.

- A compact, lightweight electronic-flash unit. Guide number is 9 (in meters) or 30 (in feet) at ASA 100.
- It integrates with the XA1 to form a single entity in external appearance and operates as easily as those built into the camera.
- Other XA-series flash units (A11 and A16) are also compatible in full-flash mode.

X-Synchro Contacts-

Flash Retaining Socket-Accepts screw of A9M.

 Flash Diffuser Window Flash beam covers the 35mm lens angle.

Mea

Flash Clamping Screw

To attach A9M to XA1, insert the guide pin into the guide pin hole and turn clamping screw clockwise.

Charge Lamp—

Lights up when fully charged. To terminate flash photography, turn the power switch to "off", or set the flash lever back to the original position.

ON · OFF Switch

Lens

Super compact 35mm F4 lens. Deluxe 4group 4-element construction, using highquality optical glass.

• Flash Lever-

Setting the flash lever to "Flash" switches on the A9M, initiates charging and sets the camera to flash mode. Returning the flash lever to the original position switches off the A9M and sets the camera to EE mode.

Electric Eye (Light sensor)

Operated electrically by sunlight (or other strong light) so batteries are not needed.

Strap Eyelet

• Guide Pin-

camera.

Positions A9M to camera flank for fast

connection. The internal pin completes

ON/OFF circuit between flash and

Clamping Screw

A clockwise turn fastens A9M to camera.

Viewfinder Eyepiece

A red warning mark appears and the shutter release locks when light conditions are too dark for EE exposure. A flash unit should be used in such cases (the shutter release can be pressed to see whether or not the red warning mark appears, before winding the film).



Rear Film Winder-



Actual size

Flash Guide Pin Hole

Accepts guide pin of A9M. Setting the flash lever to "Flash" thrusts out a pin recessed in this hole.

Rewind Crank • Rewind Knob Camera Back Release

Pull out knob gently to unlock, more strongly to open camera back. (With Dust Barrier in closed position).

• Non-Slip Finger Grip -

Dust Barrier is opened or closed quickly by pressing finger tip against this part.

Dust Barrier

Protects the lens, viewfinder and even rear eyepiece window. Opening the Dust Barrier unlocks the shutter release, and all camera functions are ready for action. Closing it locks the shutter release. (A safety mechanism allows the camera back to be opened for film loading/unloading, unlocking related functions).

Exposure Counter

Automatic reset, progressive type with dial calibrated; S..12.4 and all even numbers to 36, E.

Shutter Release Button

Located in the natural position for index finger operation. The shutter release locks when light conditions are not suitable for EE exposure.

MANUAL Scale

X Synchro Contacts

2.3m (7.5ft) for ASA100 film and 4.5m (15ft) for ASA400 film.

Battery Chamber Cap

Holds one 1.5V "penlight" battery, including Ni-Cd. An alkaline battery will provide approx. 180 flashes.

ASA Film Speed Lever

Film speeds ASA 100 and 400 are

Rewind Button—

Press when rewinding the film. Returns to its original position when the rear film winder is operated.



XA1 & ELECTRONIC FLASH A9M

Soft Case L / Hard Case L



Exclusively for use with XA-series camera with Electronic Flash and weight.

Main Specifications

Camera type: 35mm lens-shutter camera. Exposure range: EV 9~17 (ASA 100). Power source: Solar powered selenium photo cell. Film format: 35mm standard cassette (24 x 36mm). Film advance: Rear winding thumbwheel (360°). Built-in Dimensions, Weight: $104 \times 65 \times 40$ mm $(4.1" \times 2.6" \times 10^{-5})$ Lens: D. Zuiko 35mm F4, 4 elements in 4 groups. 1.6") 190 g. (6.7 oz.) prevention against double advance and double ex-Shutter: Programmed between-lens-shutter (F4·1/30 sec. posure. ~F22·1/250 sec.). Exposure counter: Progressive type with automatic reset. Film rewind: Crank type with rewind release button. Viewfinder: Bright frame finder, 0.5x. Red signal indicates Flash mounting: Exclusive flash unit A9M attaches to under-exposure. Focusing: Universal focus (from 1.5m or 5feet to infinity). camera in seconds. A11 or A16 can also be used. Exposure control: Automatic by built-in selenium cell Lens/finder barrier: Sliding Dust Barrier. When cover is fully opened, you can take pictures. When the Dust meter. Shutter locks to prevent under-exposure. Applicable ASA film speeds: ASA 100 and 400. Barrier is closed, shutter locks

 Electronic Flash A9M Unit type: Electronic flash unit. *Measured from interface light" battery. Guide number: 9 (ASA 100, meters). or 30 (ASA 100, Connection to camera: XA1 exclusive mount: Power switch: Flash lever on XA1 switches "ON" or "OFF". Power source: 1.5V AA "penlight" battery x 1 (including. Applicable ASA film speeds: ASA 100 and 400. Number of flashes: Approximately 180 with one 1.5V Ni-Cd battery). Dimensions and weight: $60 \times 39^* \times 36.5$ mm $(2.4" \times$ AA "penlight" battery. Recycle time: Approximately 7 sec. with 1.5V AA "pen- $1.5"* \times 1.4"$) 50 g. (1.8 oz.) without battery.

XA1 W/Electronic Flash A9M Stock NO. 102-506

XA Series Soft Case Stock NO. 108-460

XA Series Hard Case Stock NO. 108-461 XA Series Neck Strap 2

Stock NO. 108-463

XA Series Neck Strap 4 Stock NO. 108-464