




Parts List

Corrected to DECEMBER 1962

KODAK MOTORMATIC 35F CAMERA and Field Case



ORDER PARTS FROM APPARATUS PARTS SERVICE
EASTMAN KODAK COMPANY, ROCHESTER 4, N.Y.

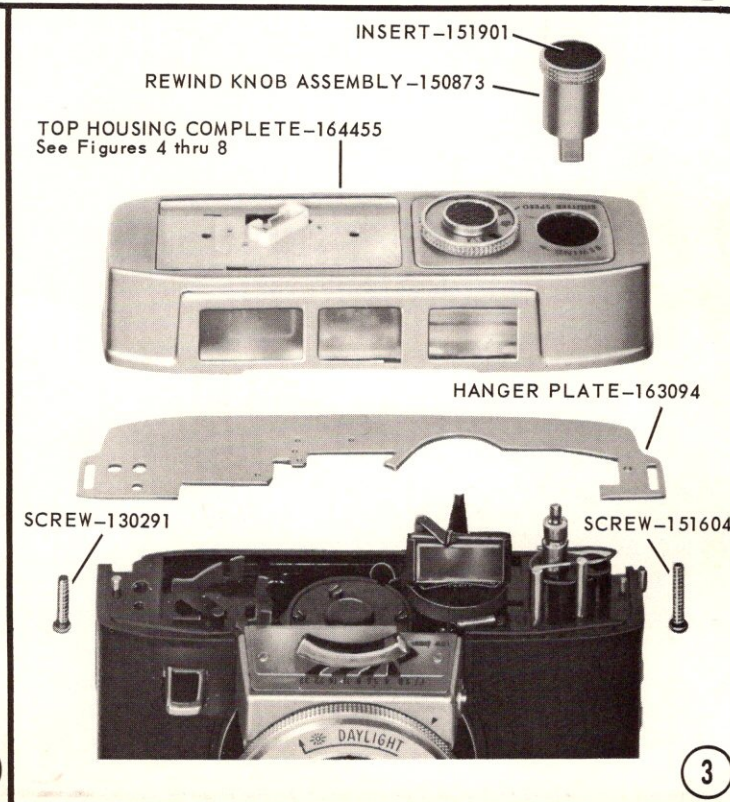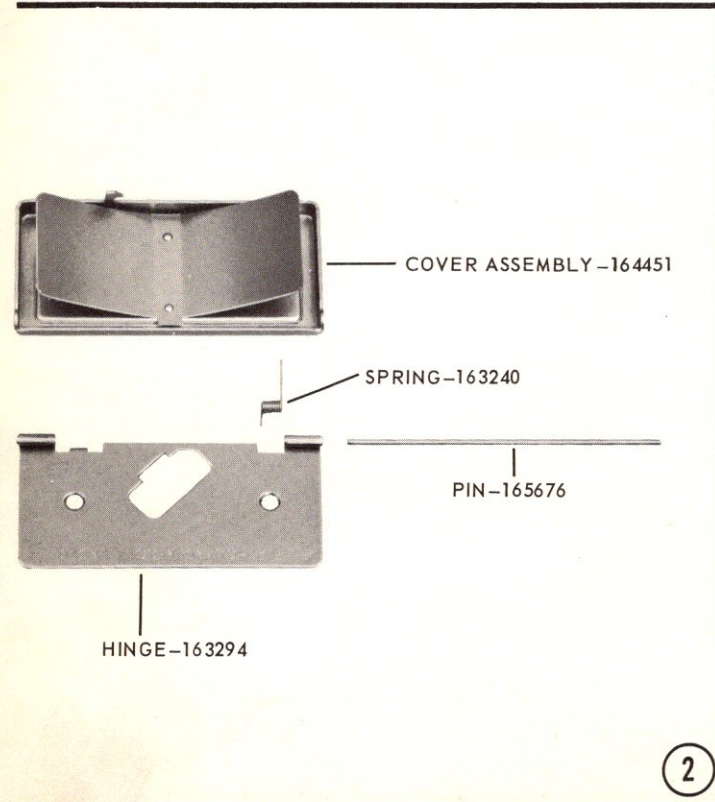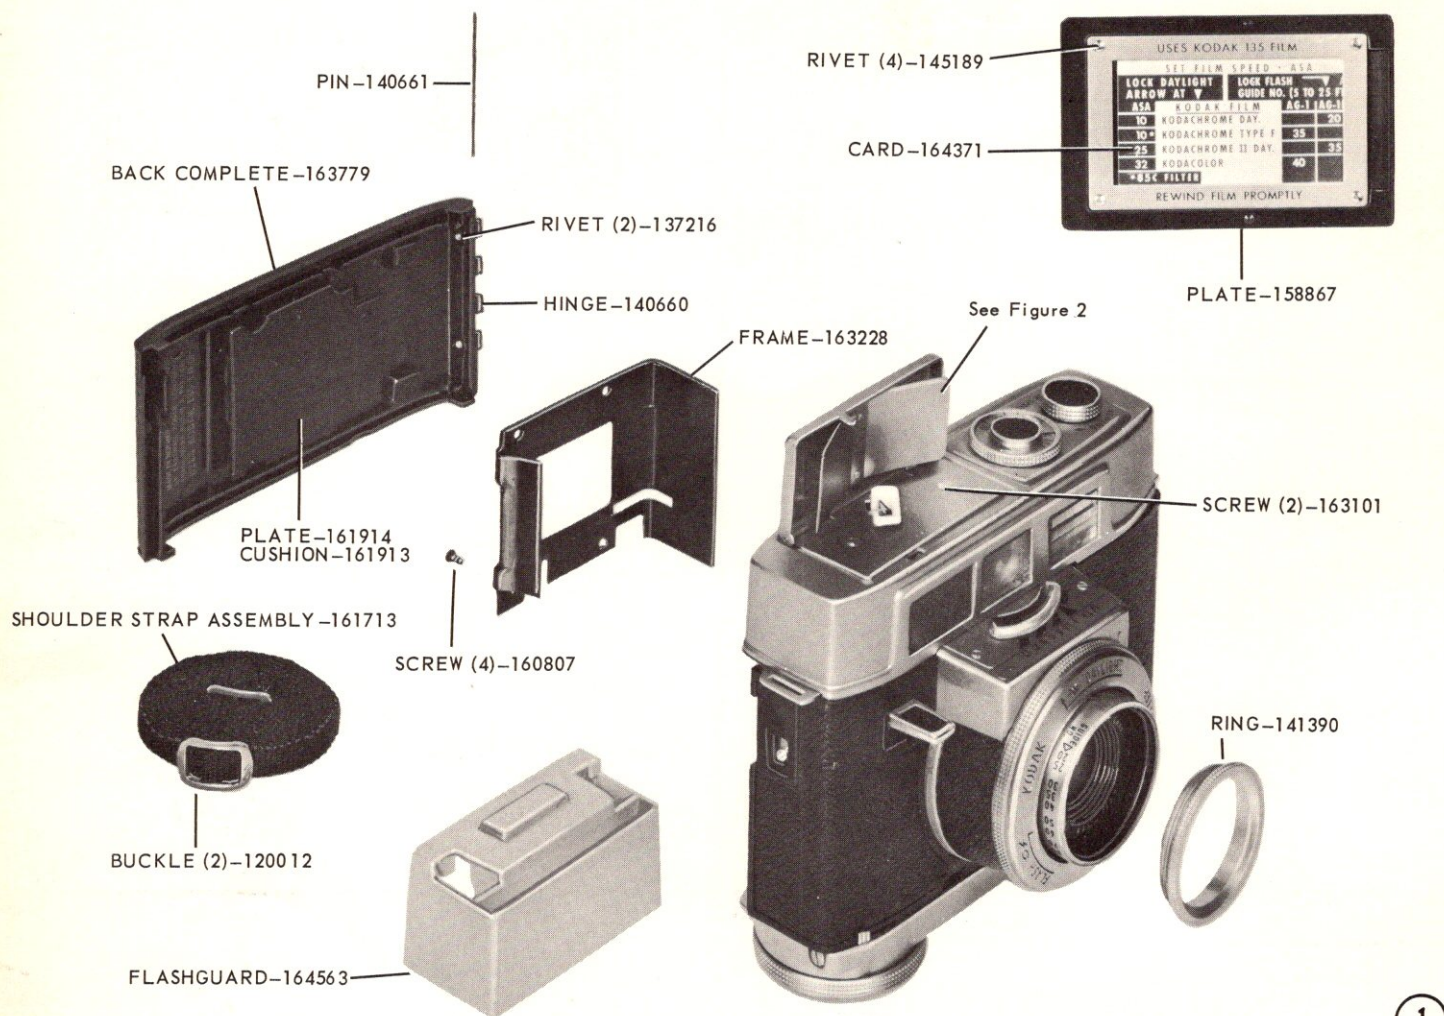

INSERT-157567



BUTTON-160362

PLATE-163237



WASHER-158219


KNOB AND PLATE
ASSEMBLY-163780



SEE FIGURES 5 THRU 8



WASHER-131152

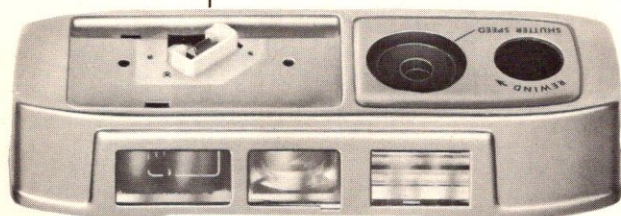

DRUM-157479




SPEED CAM ASSEMBLY-164264



4

SEE FIGURE 6

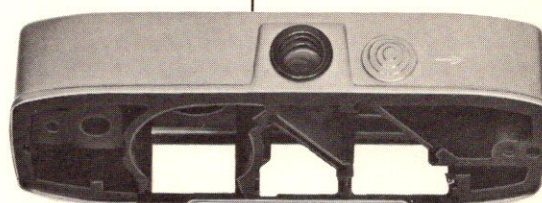

SPRING-150893



WINDOW-163225



Install with this section
at lower left hand corner
This surface
faces front of
camera



LENS-153181



SPRING-142084



SPRING-150926



 
 
This edge toward
bottom of camera



SPRING-152176



SPACER-152177



WINDOW-150924

RETICLE-165356




5

PANEL-162982




VIEWFINDER COVER ASSEMBLY-163764
See Figure 7

SCREW-152432

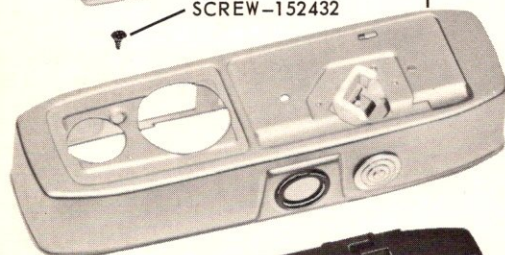

SEE FIGURE 8

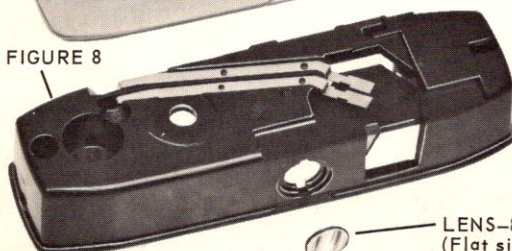

LENS-833449
(Flat side toward
back of camera)




RETAINER-143439



6

COVER
Available only as
Cover Assembly-163764

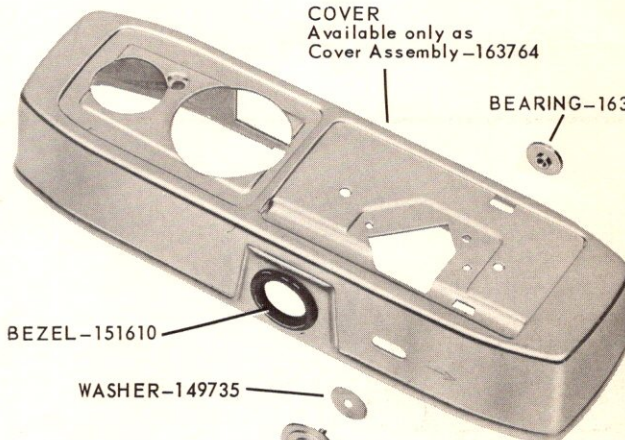

BEARING-163241



BEZEL-151610

WASHER-149735



SOCKET-163295



BUTTON-163242



RIVET-136390



LATCH-164636



SPRING-163239








STUD-163292




VIEWFINDER COVER
ASSEMBLY-163764

7

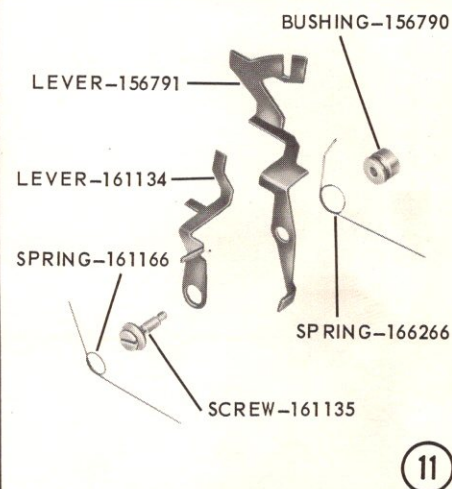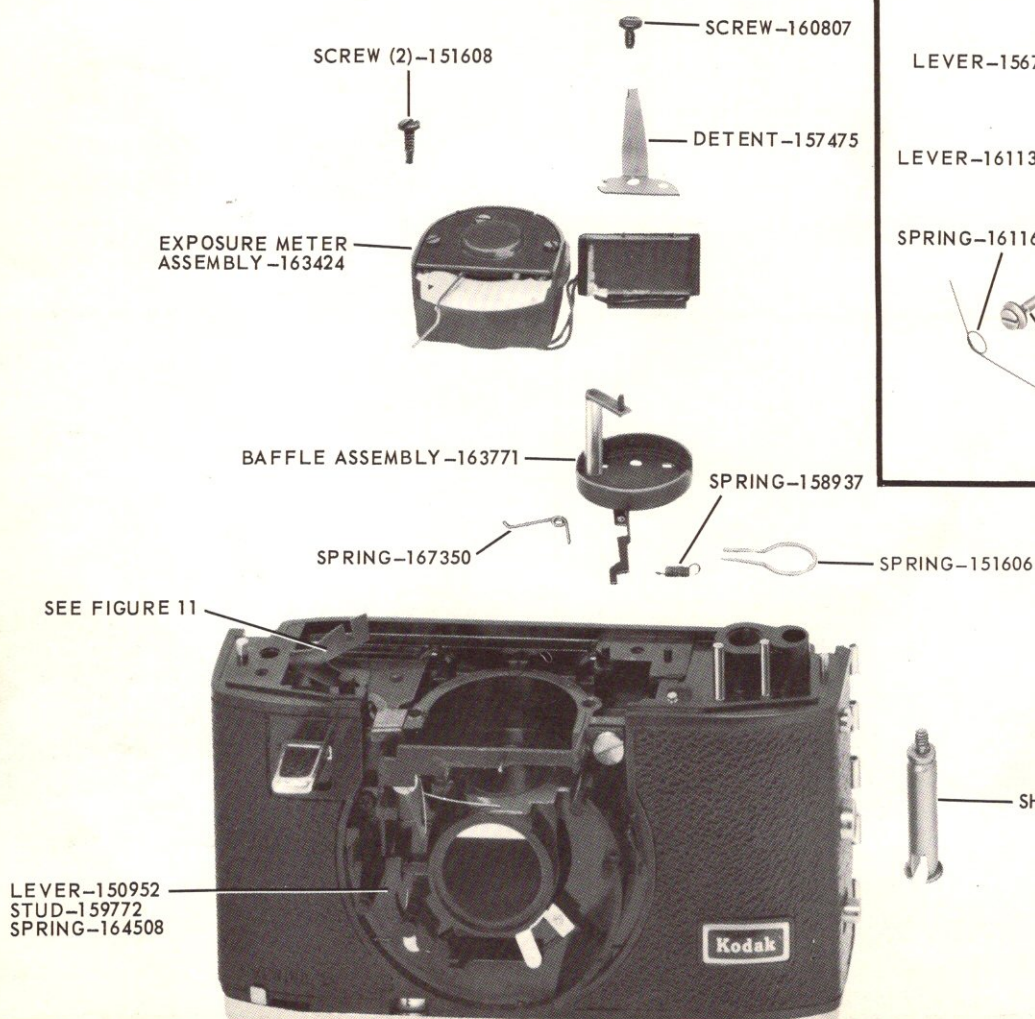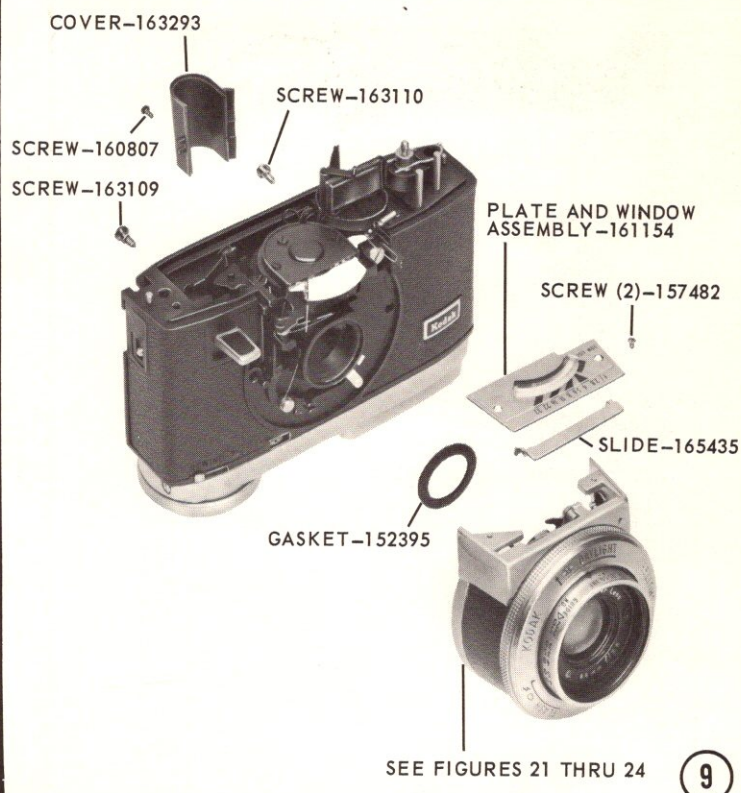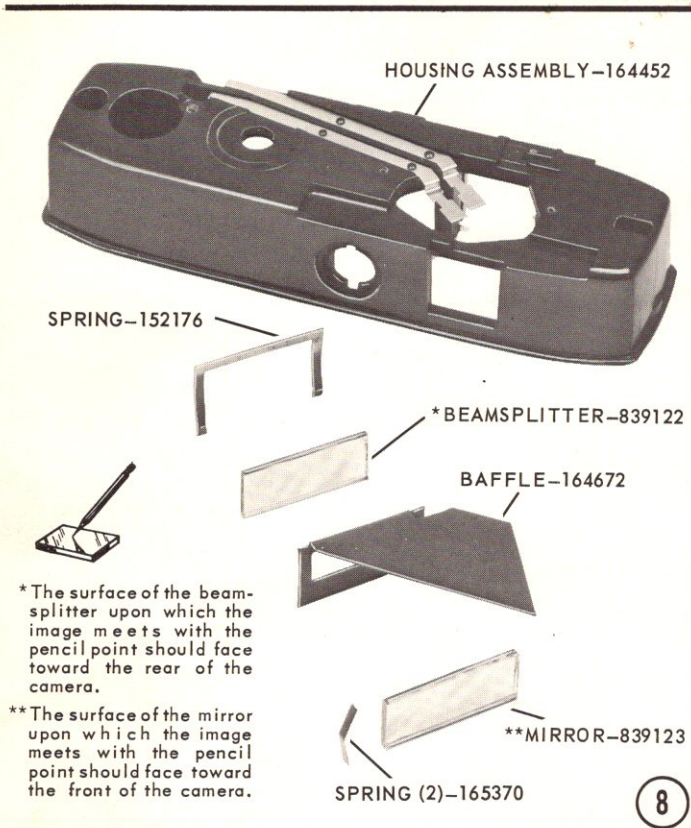


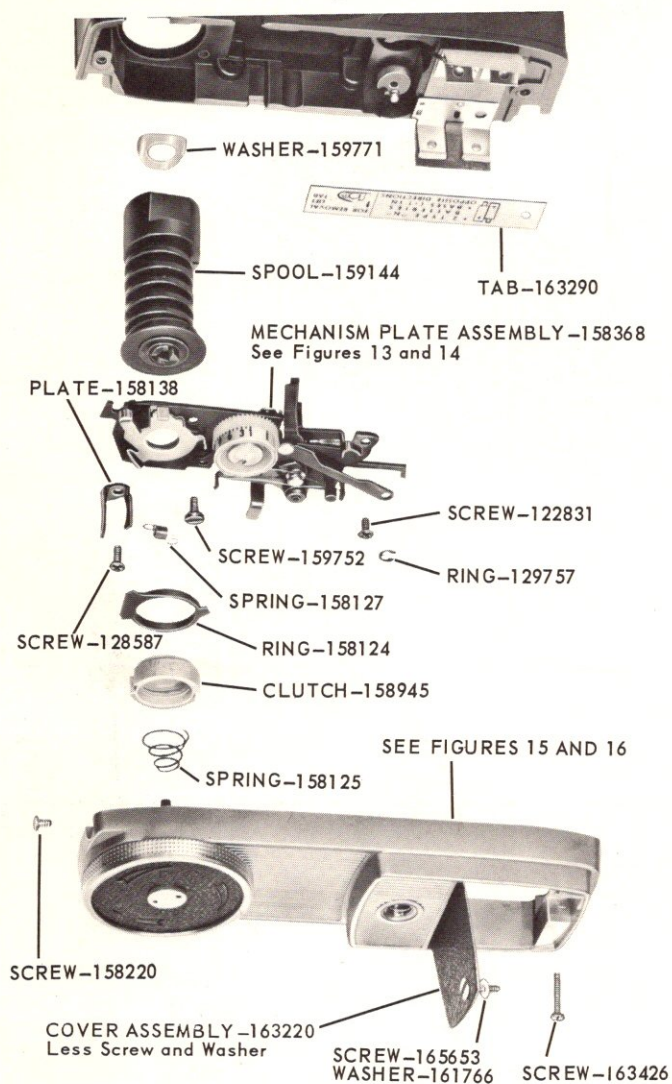

12

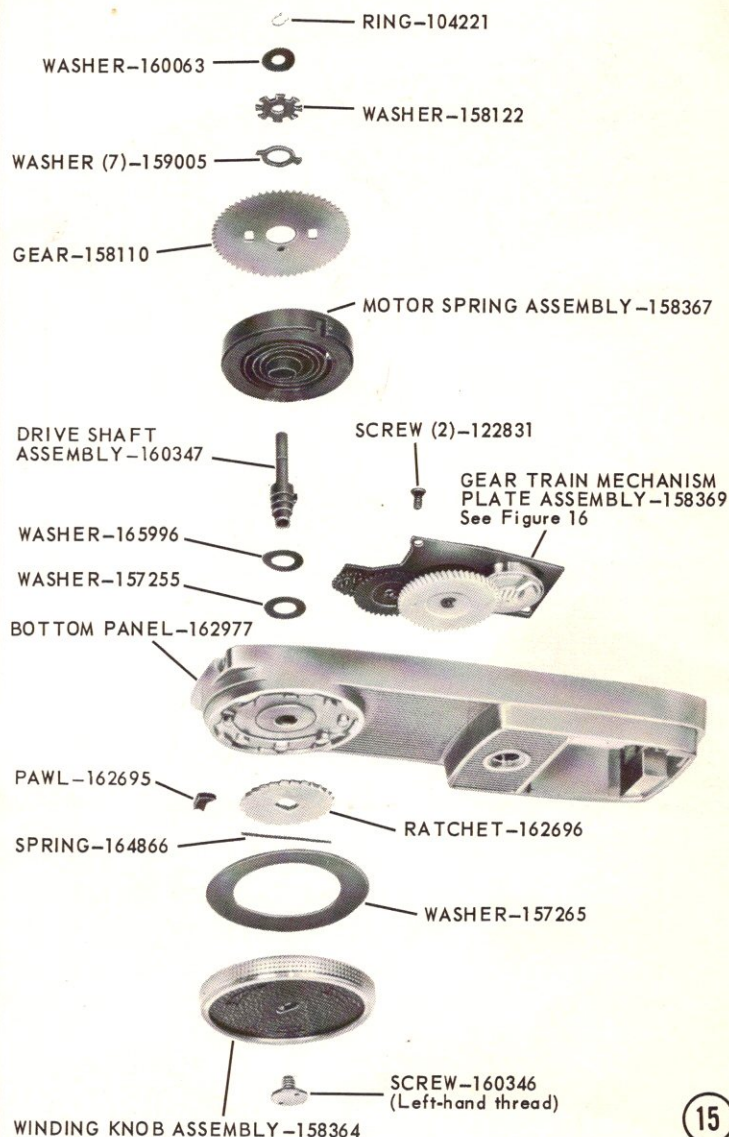


15





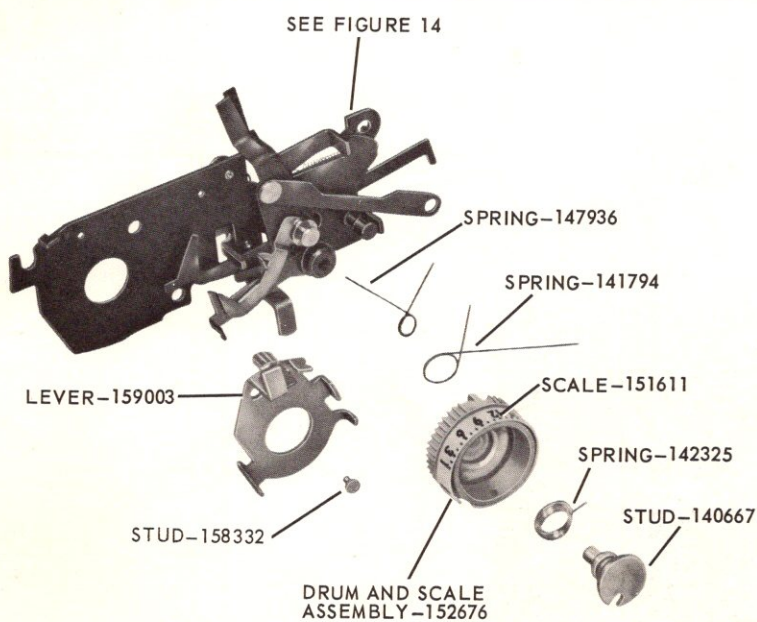



MECHANISM PLATE ASSEMBLY-158368

13

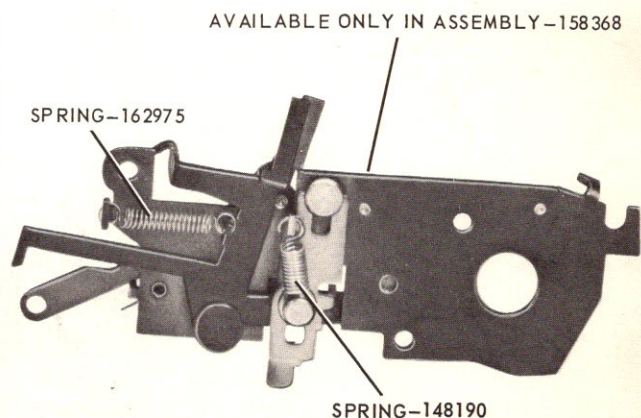


14

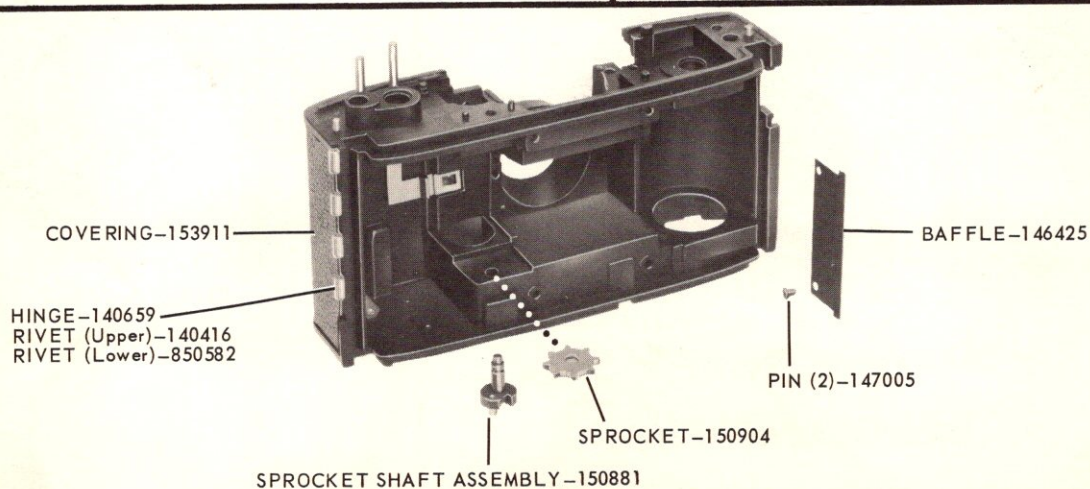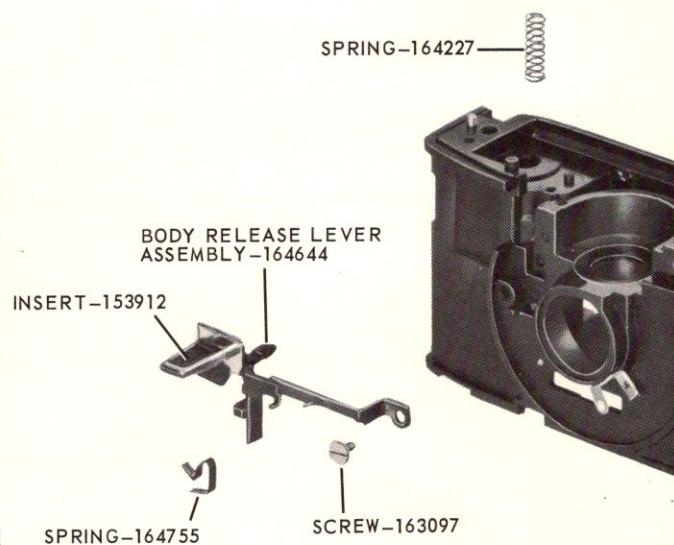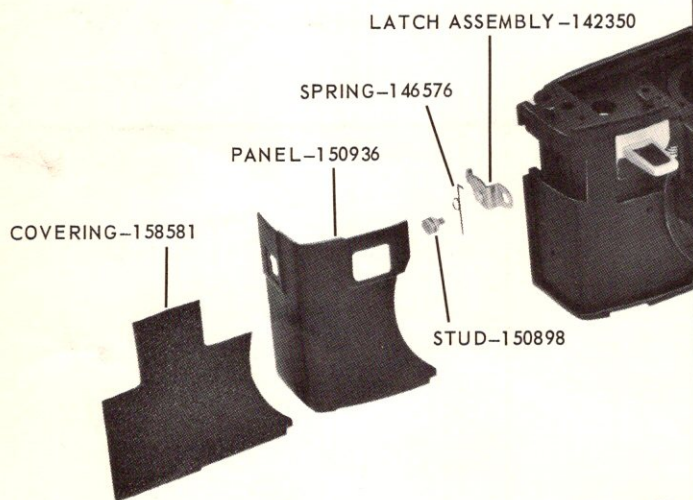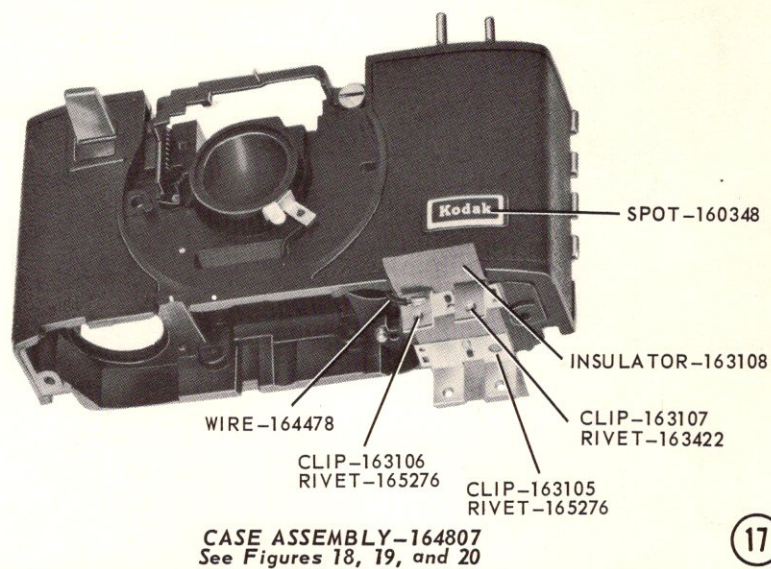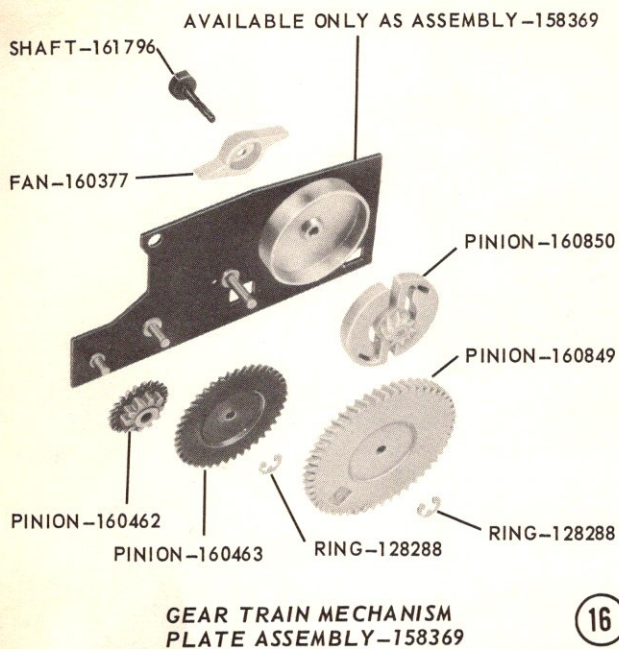


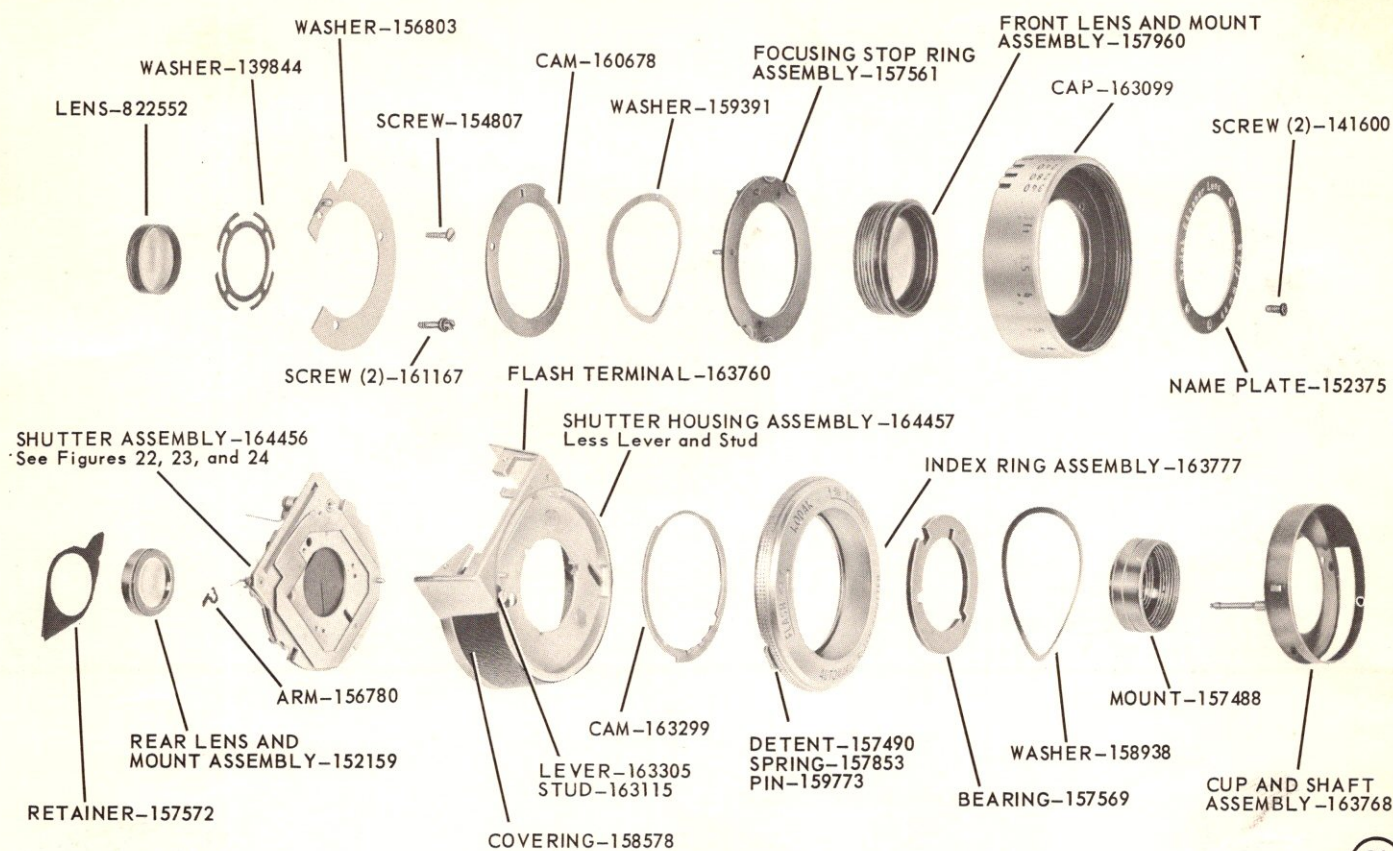

21

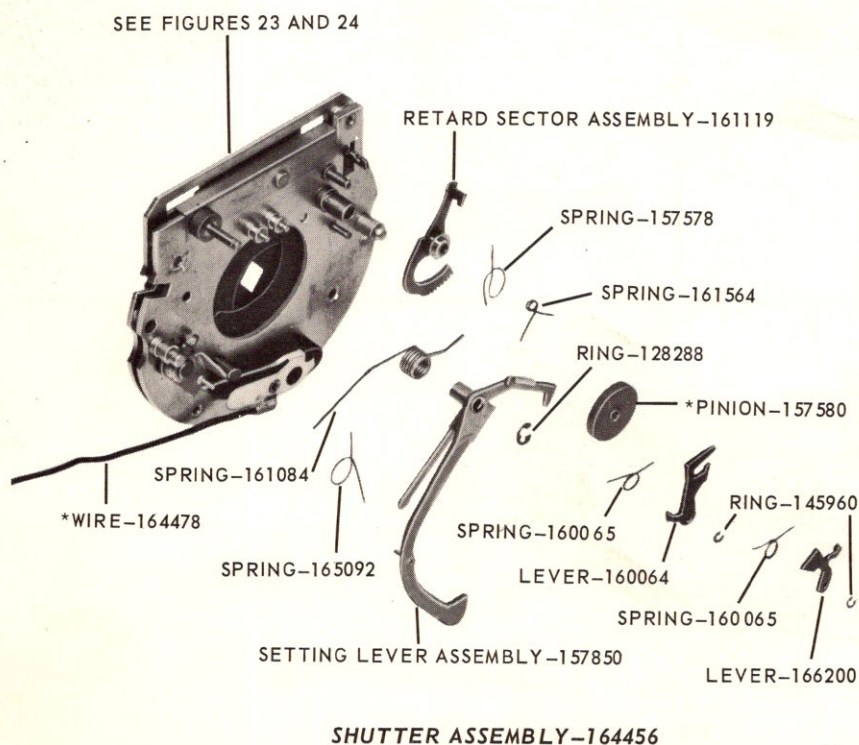


22

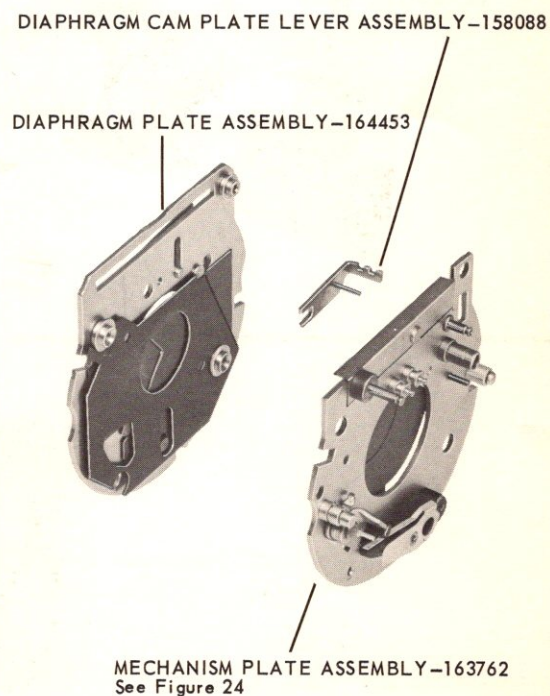


23

*Not included in Shutter Assembly-164456

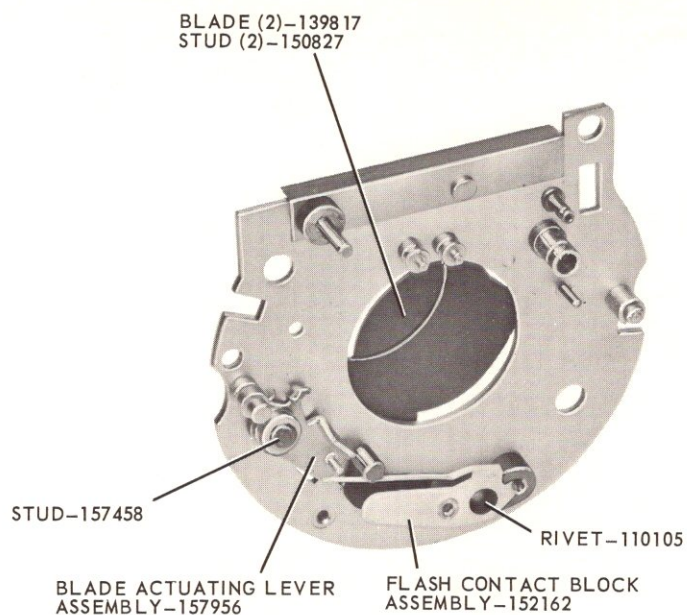

MECHANISM PLATE ASSEMBLY-163762

24

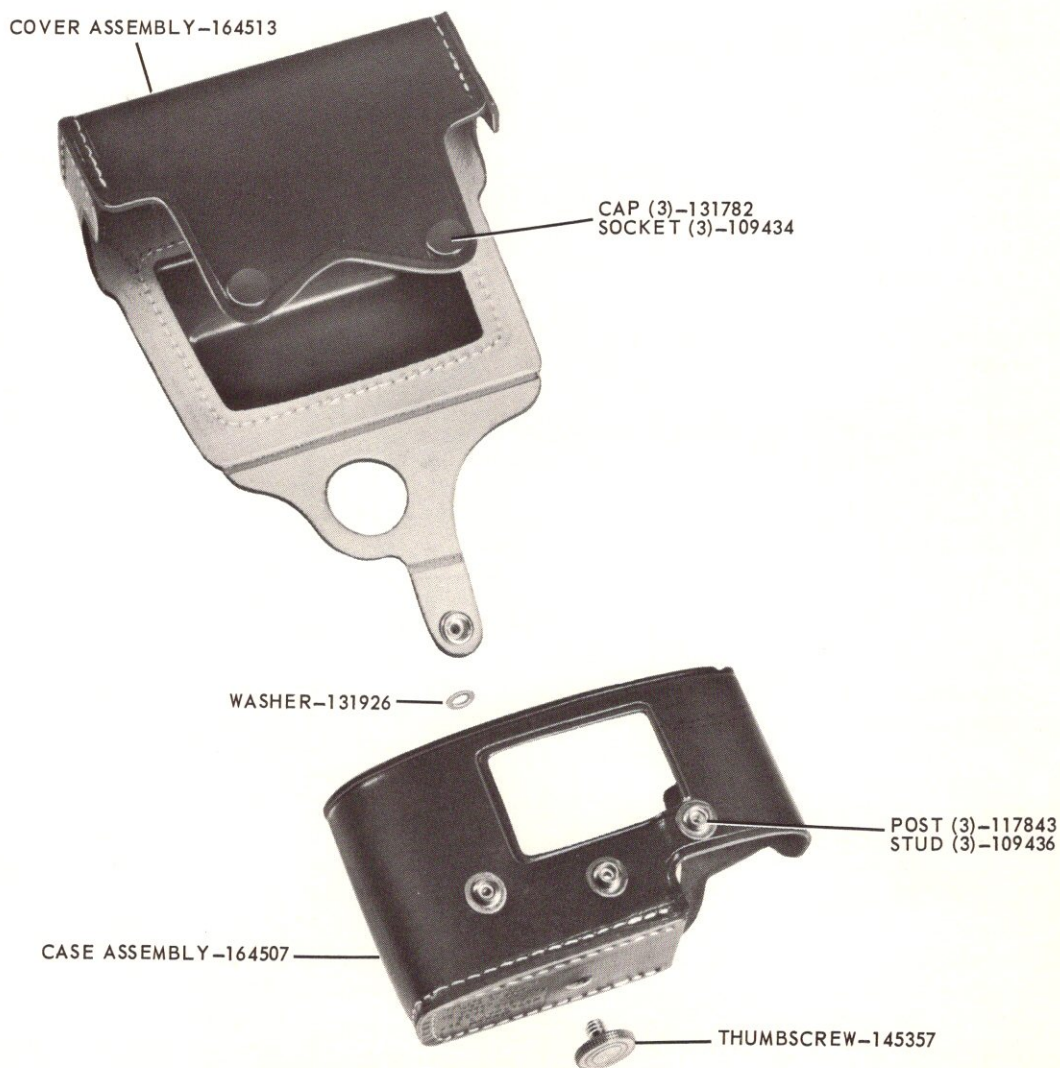

FIELD CASE

25

PART NO.	PART NAME	FIG.	PART NO.	PART NAME	FIG.
104221	Ring - Retaining, ext, beryllium copper, Truarc No. 5100-12 or equiv.	15	152375	Name Plate - Lens mount.	21
110105	Rivet - Flash contact block.	24	152395	Gasket - Rear lens mount.	9
120012	Buckle - Shoulder strap.	1	152432	Screw - Tap., Type B, flat hd, No. 2 x 3/16.	6
122831	Screw - Mach, flat hd, 2-56 x 3/16. . .	12	152676	Drum and Scale Assembly	13
128288	Ring - Retaining, ext, Truarc No. 5133-6 or equiv.	16	153181	Lens - Negative finder.	5
128587	Screw - Mach, flat hd, 2-56 x 1/4 . . .	12	153911	Covering - Case, left.	20
129757	Ring - Retaining, ext, Truarc No. 5133-9 or equiv.	12	153912	Insert - Body release	19
130291	Screw - Mach, min hd, 4-40 x 1/2 . . .	3	154807	Screw - Front mount clamping	21
131152	Washer - Film speed knob	4	156780	Arm - Range indicator grip	21
136390	Rivet - Lamp socket	7	156790	Bushing - Focus indicator lever . . .	11
137216	Rivet - Hinge.	1	156791	Lever - Focus indicator.	11
139817	Blade - Shutter.	24	156803	Washer - Focus cap tension	21
139844	Washer - Negative lens retaining. . . .	21	157255	Washer - Drive shaft.	15
140416	Rivet - Hinge to case, upper.	20	157265	Washer - Winding knob	15
140659	Hinge - Case	20	157458	Stud - Blade actuating lever	24
140660	Hinge - Back	1	157475	Detent - Speed cam.	10
140661	Pin - Hinge	1	157479	Drum - Photocell masking.	4
140667	Stud - Counter	13	157482	Screw - Meter index plate, short. . .	9
141390	Ring - Filter retaining.	1	157488	Mount - Negative lens	21
141600	Screw - Mach, min hd, brass, 0-80 x 1/8	21	157490	Detent - Flash computer	21
141794	Spring - Check pawl	13	157561	Focusing Stop Ring Assembly	21
142084	Spring - Negative lens retainer.	5	157567	Insert - Shutter speed knob.	4
142325	Spring - Counter drum	13	157569	Bearing - Flash computer cam	21
142350	Latch Assembly	18	157572	Retainer - Rear lens assembly	21
143439	Retainer - Eye lens.	6	157578	Spring - Sector.	22
145189	Rivet - Card plate.	1	157580	Pinion - Retard	22
145960	Ring - Retaining, ext, beryllium copper, Truarc No. X5133-4 or equiv.	22	157850	Setting Lever Assembly.	22
146425	Baffle - Light.	20	157853	Spring - Detent.	21
146576	Spring - Latch	18	157956	Blade Actuating Lever Assembly. . . .	24
147005	Pin - Light Baffle.	20	157960	Front Lens and Mount Assembly	21
147936	Spring - Counter pawl	13	158088	Diaphragm Cam Plate Lever Assembly.	23
148190	Spring - Mechanism release slide . . .	14	158110	Gear - No. 1	15
149735	Washer - Dial release button	7	158122	Washer - Key.	15
150827	Stud - Blade pivot.	24	158124	Ring - Clutch release	12
150873	Rewind Knob Assembly	3	158125	Spring - Drive clutch.	12
150881	Sprocket Shaft Assembly	20	158127	Spring - Rewind	12
150893	Spring - Viewfinder window	5	158138	Plate - End	12
150898	Stud - Latch.	18	158219	Washer - Shutter speed plate	4
150904	Sprocket - Film	20	158220	Screw - Bottom panel	12
150923	Lens - Photocell.	5	158332	Stud - Release lever	13
150924	Window - Reticle	5	158364	Winding Knob Assembly.	15
150926	Spring - Reticle window.	5	158367	Motor Spring Assembly	15
150936	Panel - Front.	18	158368	Mechanism Plate Assembly	12
150952	Lever - Interlock	10	158369	Gear Train Mechanism Plate Assembly.	15
151604	Screw - Mach, min hd, 4-40 x 5/8 . . .	3	158578	Covering - Shutter housing.	21
151606	Spring - Rewind shaft	10	158581	Covering - Case, right.	18
151608	Screw - Meter	10	158867	Plate - Card holder.	1
151610	Bezel - Viewfinder eye lens	7	158937	Spring - Speed lever	10
151611	Scale - Counter	13	158938	Washer - Spring tension.	21
151901	Insert - Rewind knob.	3	158945	Clutch - Drive	12
152159	Rear Lens and Mount Assembly.	21	159003	Lever - Rewind	13
152162	Flash Contact Block Assembly	24	159005	Washer - Drive shaft slip.	15
152176	Spring - Photocell lens	5	159144	Spool - Take-up	12
152177	Spacer - Photocell lens	5	159391	Washer - Tension.	21
			159752	Screw - Mechanism stop plate.	12
			159771	Washer - Take-up spool, tension. . . .	12
			159772	Stud - Interlock lever	10
			159773	Pin - Flash detent.	21

EASTMAN KODAK COMPANY • ROCHESTER 4, NEW YORK

424-1-63-SH-B

Printed in the United States of America

Kodak