

Nikon

PISTOL GRIP FOR NIKON MOTOR DRIVE

WITH BUILT-IN MICROSWITCH AND CONNECTING CORDS

The trigger-action pistol grip, attached to the Nikon F or SP camera, permits convenient and stable shooting especially when using the Nikon Motor Drive. It also gives a great convenience when using a bulky long focus lens in conjunction with the camera.


Before attaching the camera or lens to the grip, release the lock screw found on the side, to take out the top screw (Fig. 1).

This top screw, separated from the grip, is to be screwed into the tripod socket on the camera or lens bottom (Fig. 2) and tightly secured by using a coin or the like. Set the camera or lens in position on the top of the grip and then fasten the lock screw tightly (Fig. 3)


The longer cord from the bottom of the grip is connected to the battery case and the shorter one to the Motor Drive attached to the camera (Fig. 4). Connection and disconnection should securely be made holding not the cords but their thick moulded ends.

With the S-C switch found on the side of the grip being depressed at the S side, pushing of the trigger will release the shutter and springing back will advance the film for the next exposure.


With the S-C switch being depressed at the C side, consecutive shooting will be carried out as long as the trigger is kept pushed. At the instant the trigger springs back, the shooting will stop and the film advance one picture frame. When not operating the Motor Drive or using the camera without the Motor Drive, connect the screw threaded hole found on the rear side of the grip (Fig. 5) to the shutter release button on the camera directly with a coupling cable which is available on order.

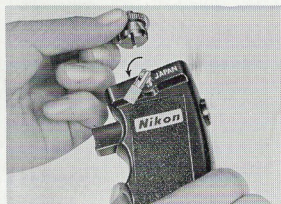


(1)

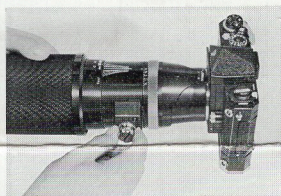


(2)

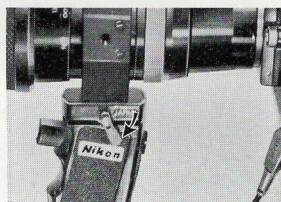

(3)

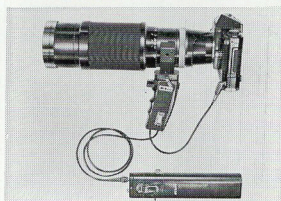

(4)

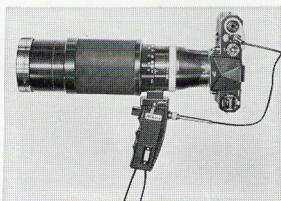

(5)

NIPPON KOGAKU K. K.

Tokyo, Japan

Printed in Japan

モータードライブ (F-36, F-250, S-36型) 用

マイクロ スイッチ付 グリップ

このグリップは、モータードライブの操作をグリップの引金により行なえるようにしたもので、手持撮影が楽で確実にできます。またズームレンズのような大きいレンズを使用する場合は特に有効です。

カメラまたはレンズへの取付け

- ☆ まずグリップの側面のクランプを回してゆるめ、取付けネジを抜き外します。(第一図)
- ☆ この取付けネジをカメラ又はレンズの三脚ネジ部へねじこみます。取付けネジは硬貨等を用いてしっかりと締め付けて下さい。(第二図)
- ☆ ピストルグリップを正しい方向に向けて取付けた後クランプを回してしっかりと締め付けます。(第三図)


コードの接続

- ☆ 長い方のコードを電池ケースに、短い方をモータードライブに差しこみます。(第四図)
- コードの先端のプラグはどちらも根元まで確実に差しこんで下さい。
- コードの抜き、差しは必ずモールド部分を持つて行なして下さい。


撮影

- ☆ グリップ側面のS-Cスイッチを一コマ撮り(S)連続撮り(C)のいずれかに倒しておきます。
- ☆ 一コマ撮り(S)のときは、引金を押せば、シャッターが切れ、引金を戻せば、フィルムを巻上げます。
- ☆ 連続撮り(C)の時は、引金を押し続けている間中は撮影が行なわれ、引金を戻せば、フィルムを巻上げて、止ります。


なお、グリップの背面にあるネジ穴は、モーターを使わない場合(たとえば、モータードライブなしカメラに単にピストルグリップとして取付ける場合、あるいは、電池が消耗してモータードライブが働かない場合など)に、連動リリース(別販売)を取付けるためのものです。

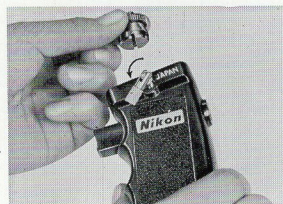


(第一図)

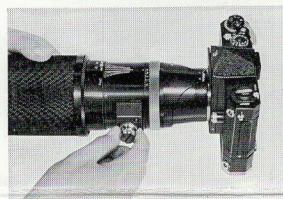


(第二図)

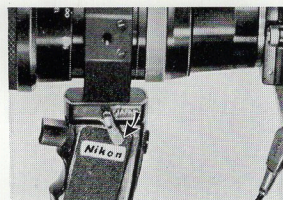

(第三図)

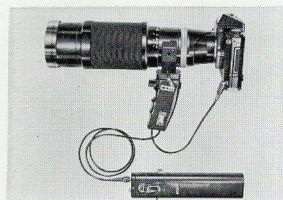

(第四図)

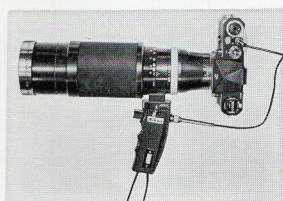

(第五図)