

Corrected to NOVEMBER 1959

PARTS LIST No. 5529

KODAK AUTOMATIC 35 CAMERA and FIELD CASE

WESTERN N. Y. CAMERA
635 HERTEL AVE.
BUFFALO 7, N. Y.



KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

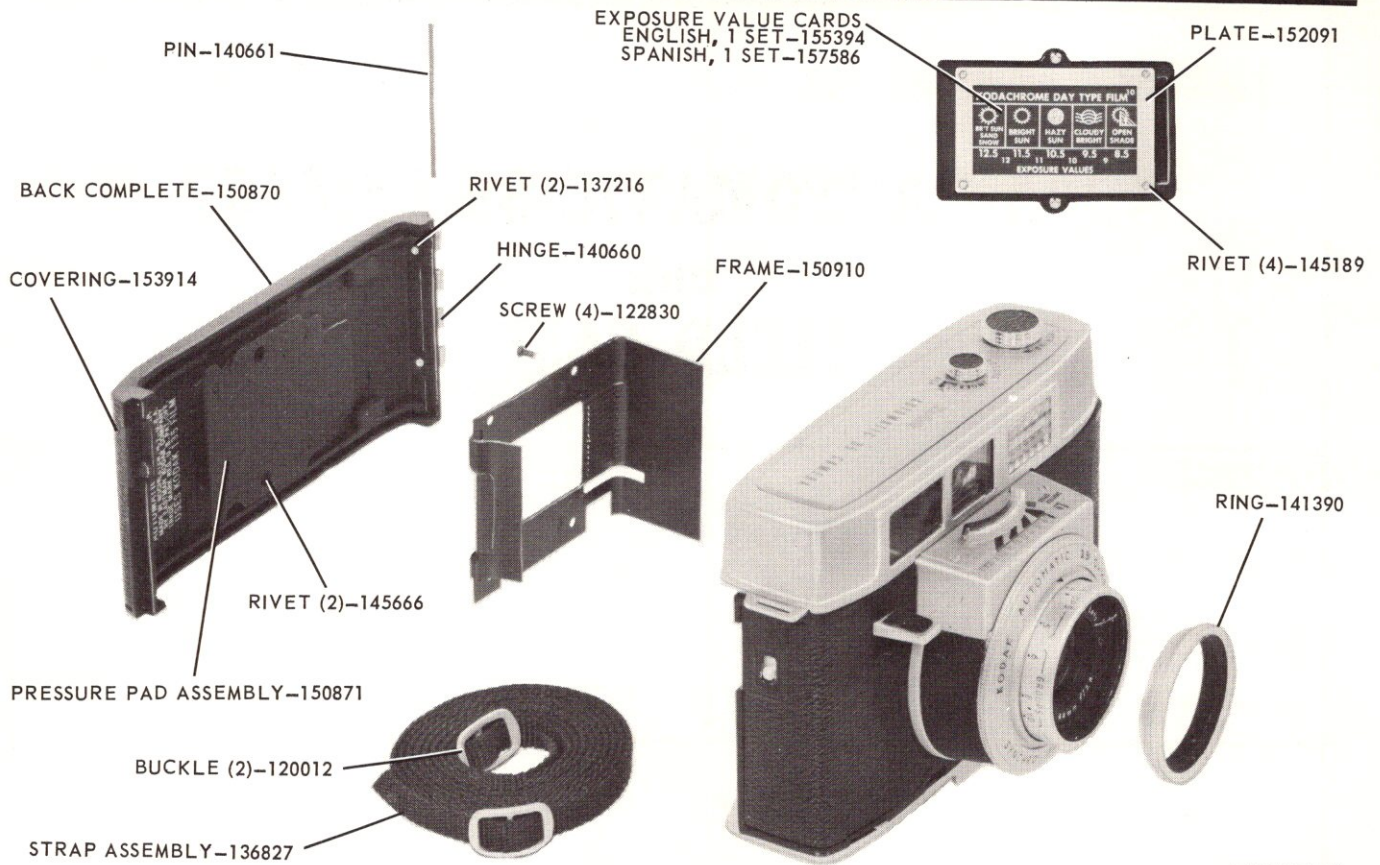


FIGURE 1



FIGURE 2


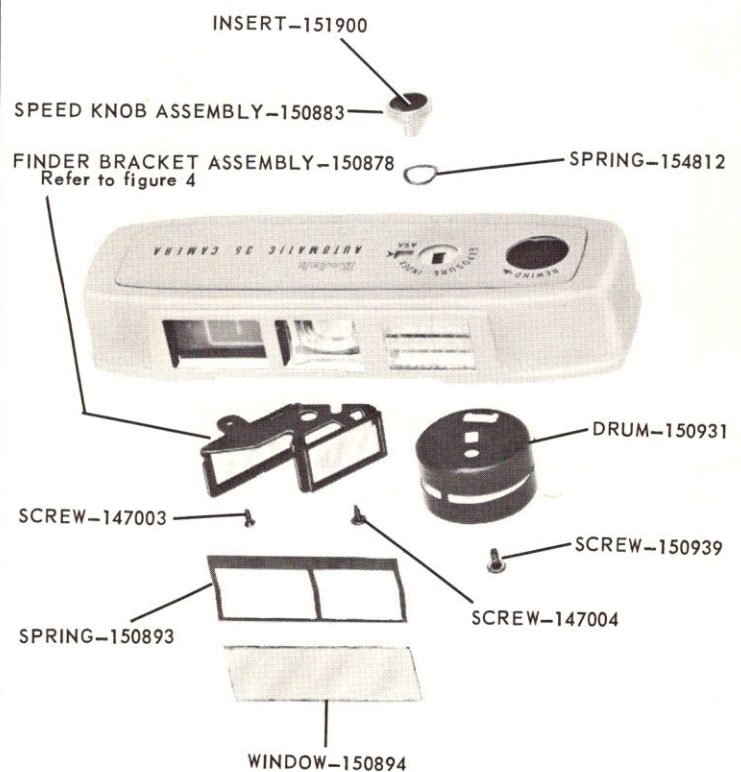


FIGURE 3

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

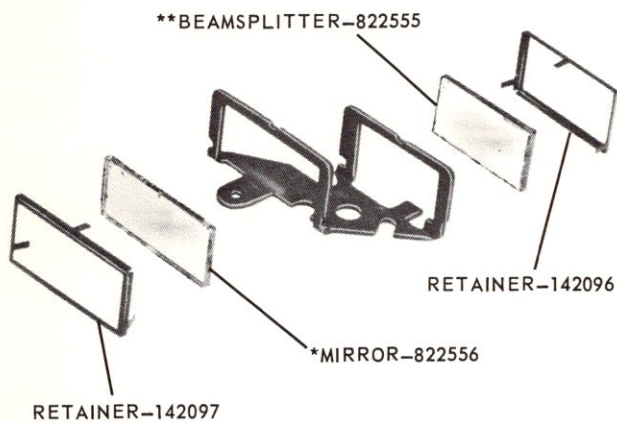

**The surface of the beamsplitter, upon which the image meets with the pencil point, should face toward the rear of the camera.

*The surface of the mirror, upon which the image meets with the pencil point, should face toward the front of the camera.

FINDER BRACKET ASSEMBLY-150878

FIGURE 4

TOP HOUSING ASSEMBLY-152678
Refer to figure 6

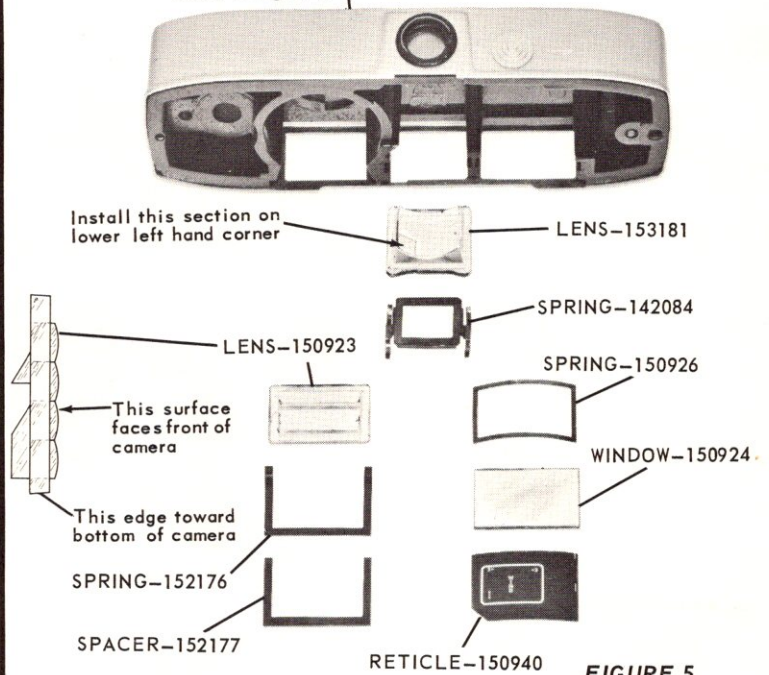


FIGURE 5

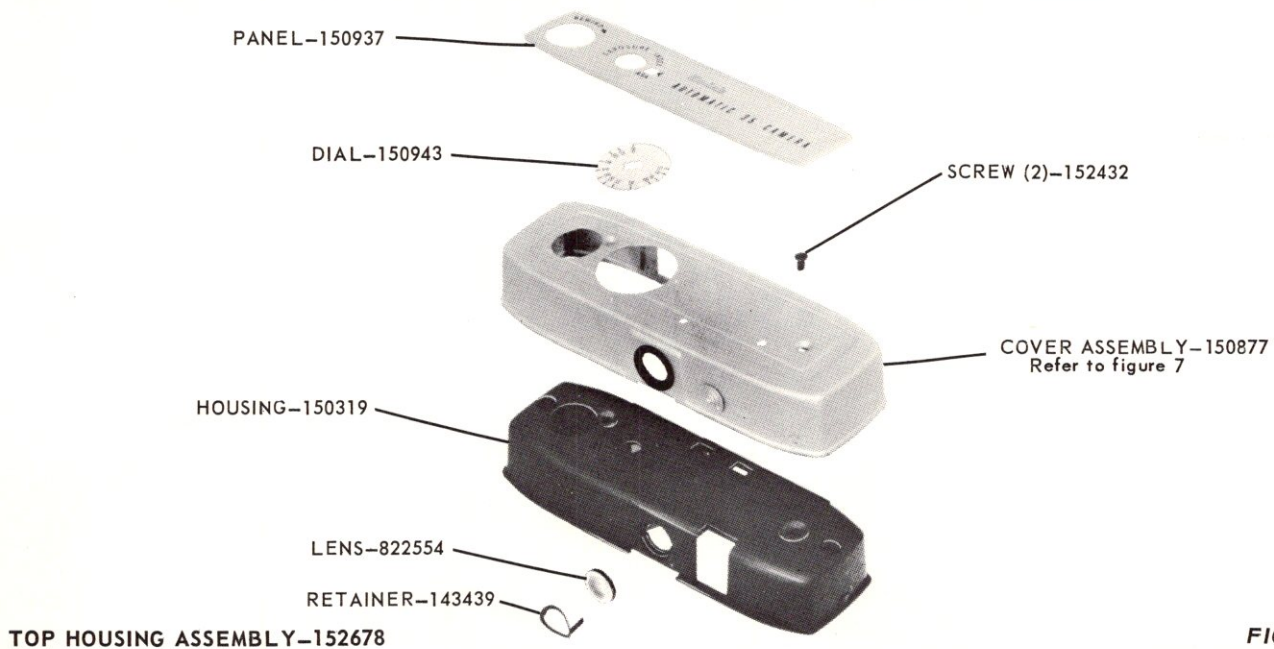


FIGURE 6

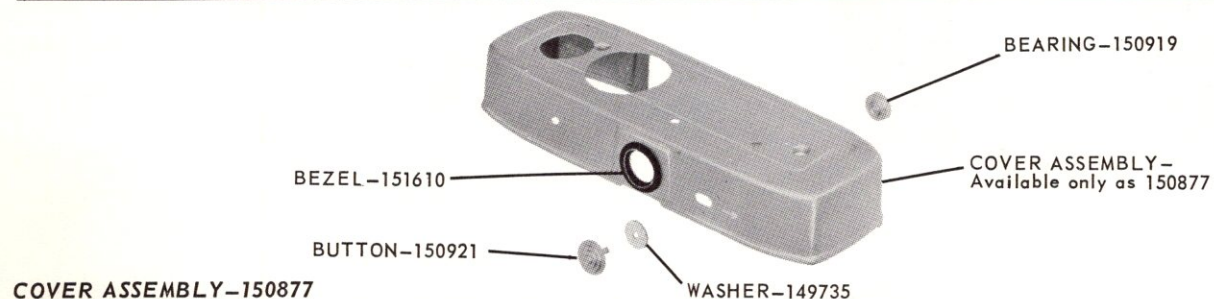


FIGURE 7

Always give PART NUMBER and NAME when ordering parts

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

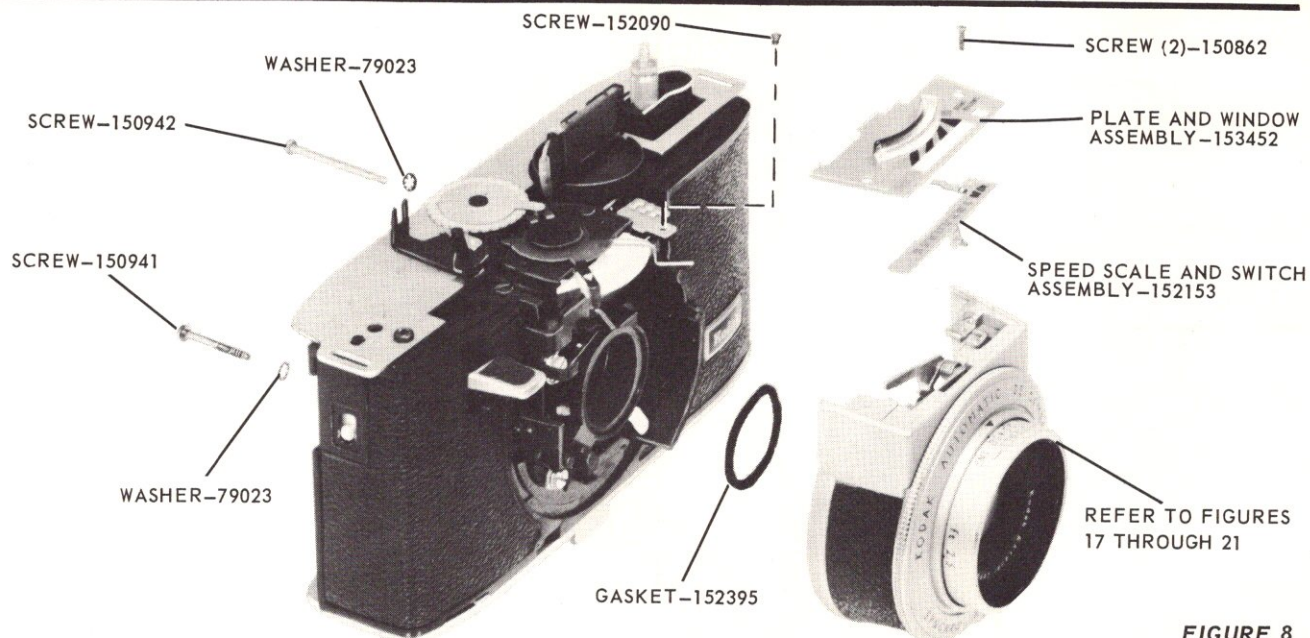


FIGURE 8


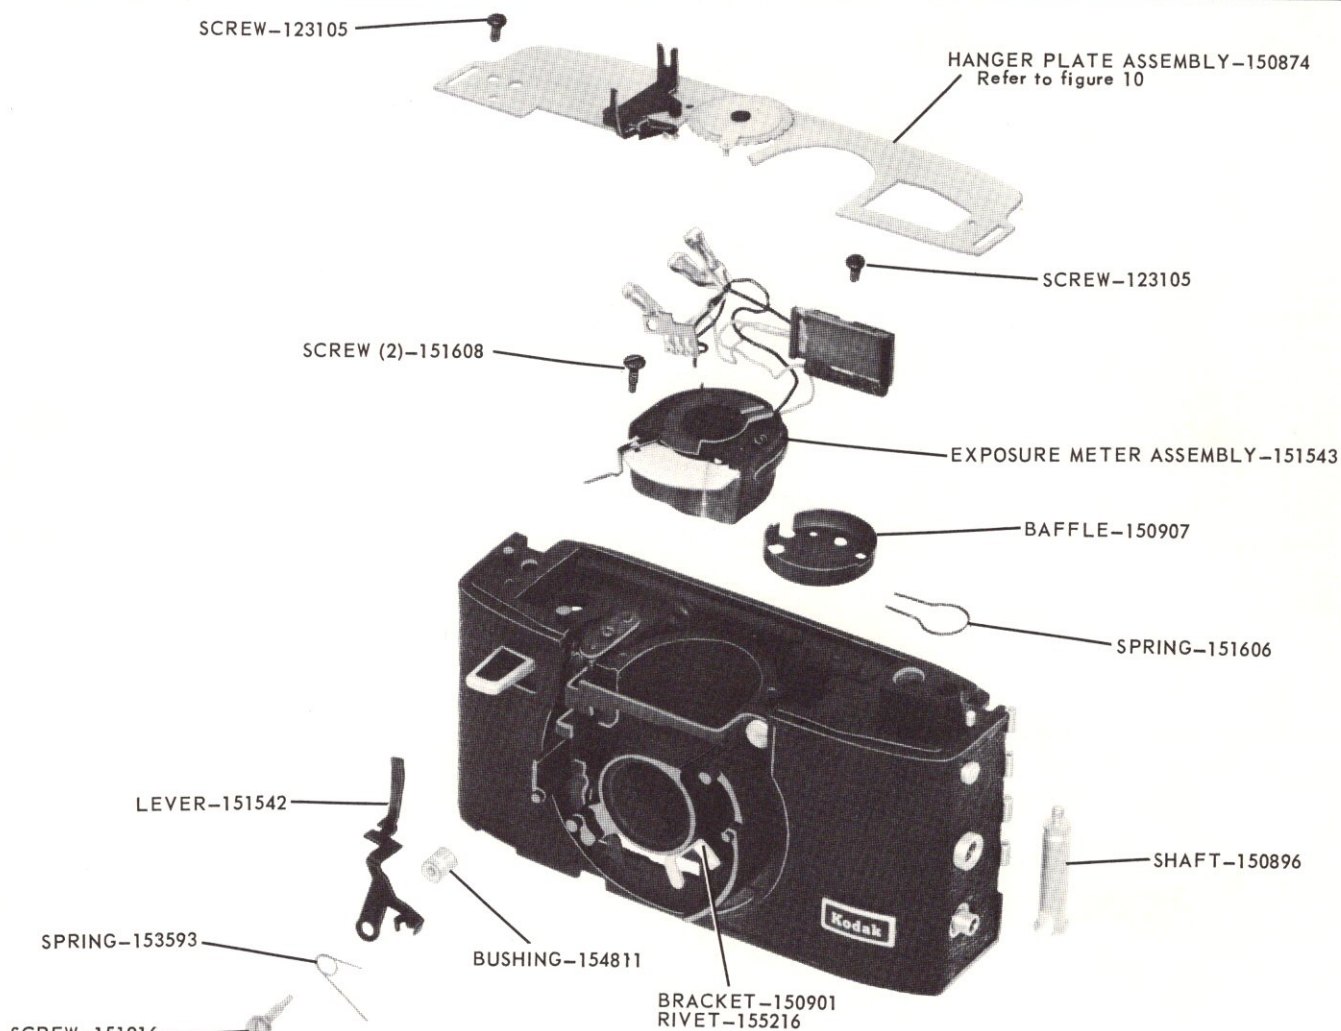


FIGURE 9

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

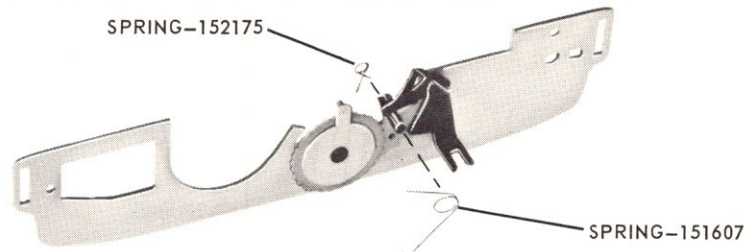

HANGER PLATE ASSEMBLY-150874

FIGURE 10


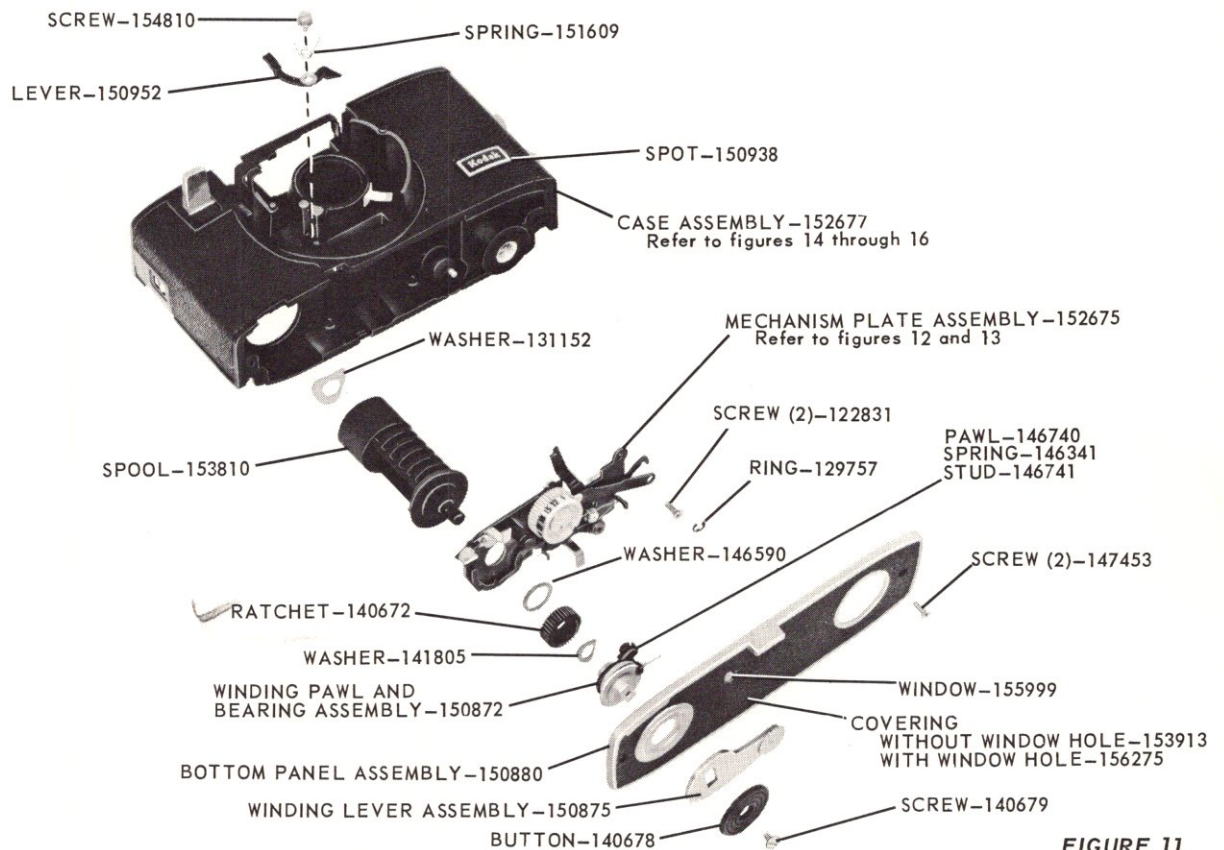


FIGURE 11

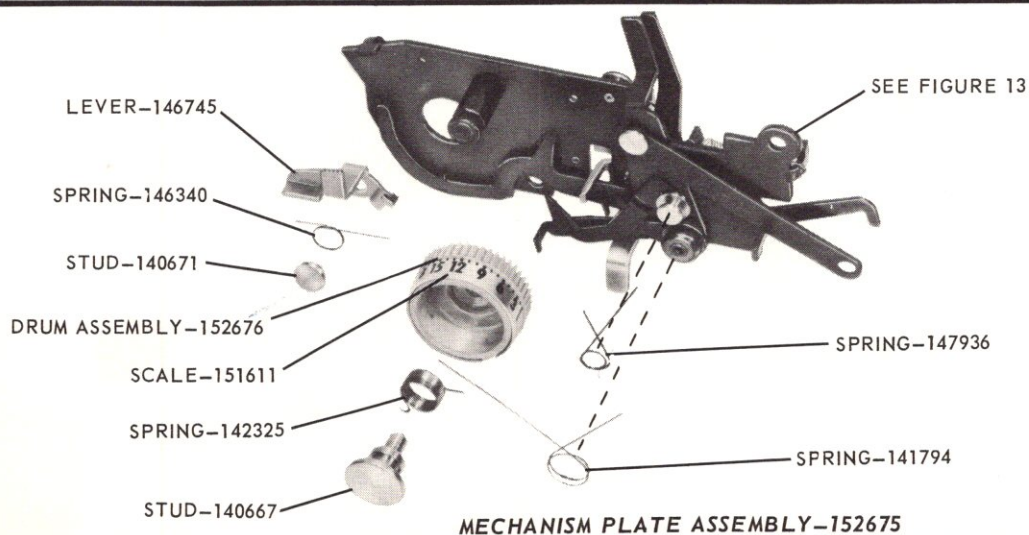

MECHANISM PLATE ASSEMBLY-152675

FIGURE 12

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

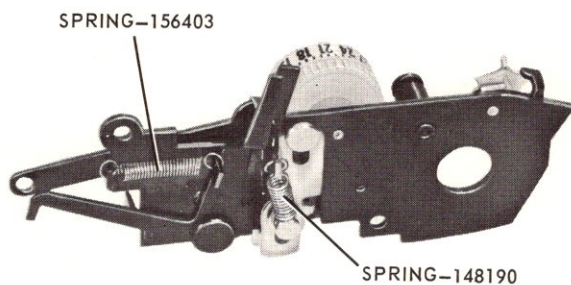


FIGURE 13

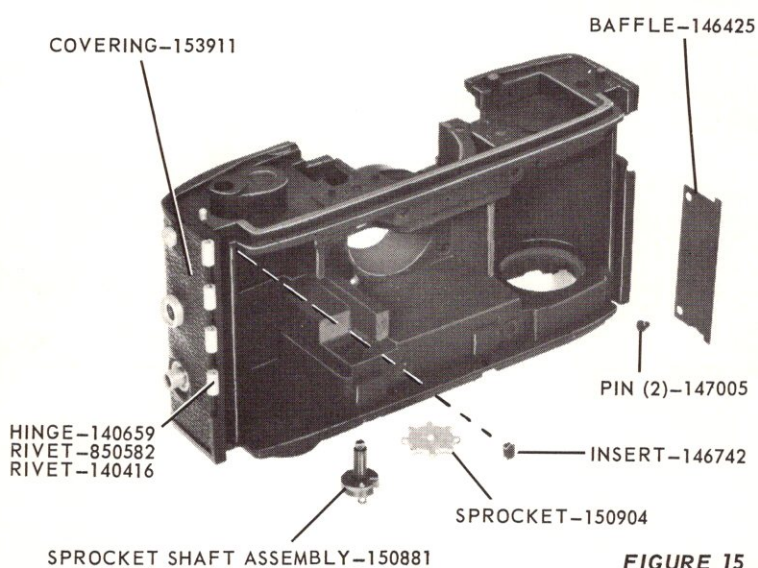


FIGURE 15

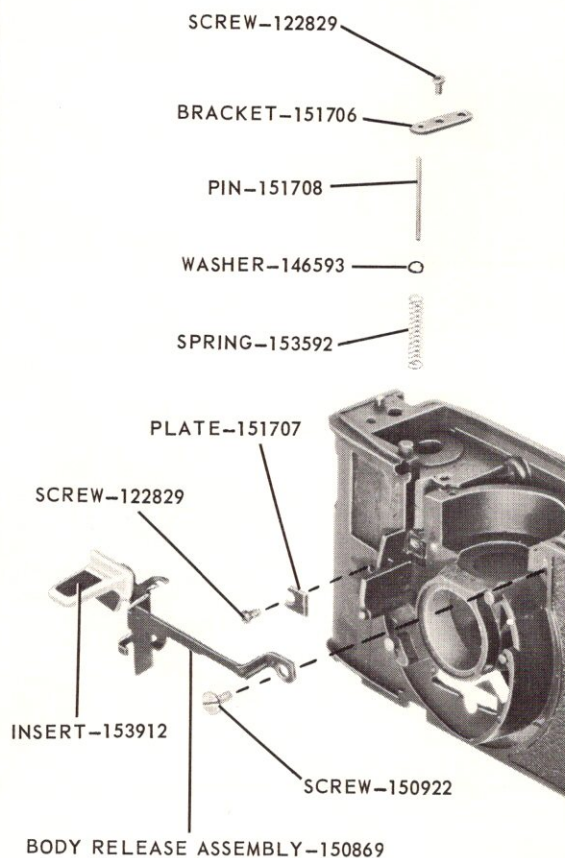


FIGURE 14

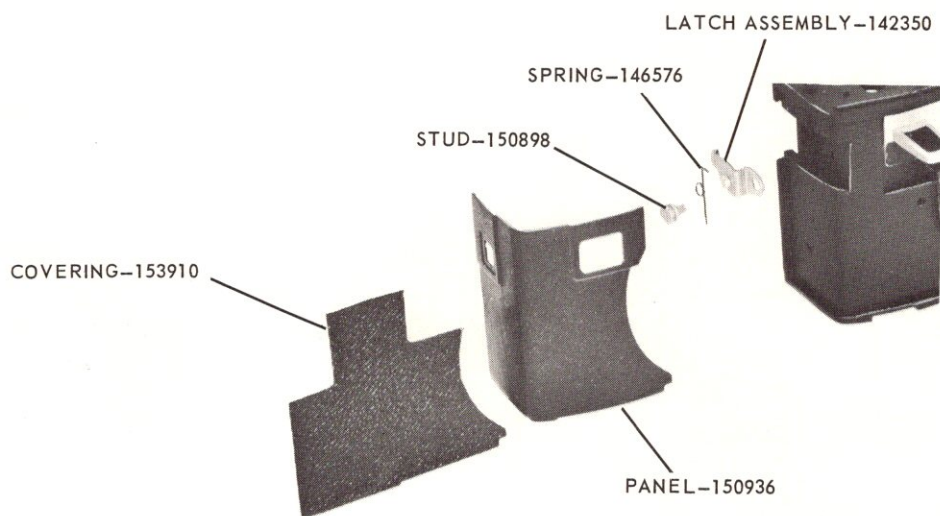


FIGURE 16

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE


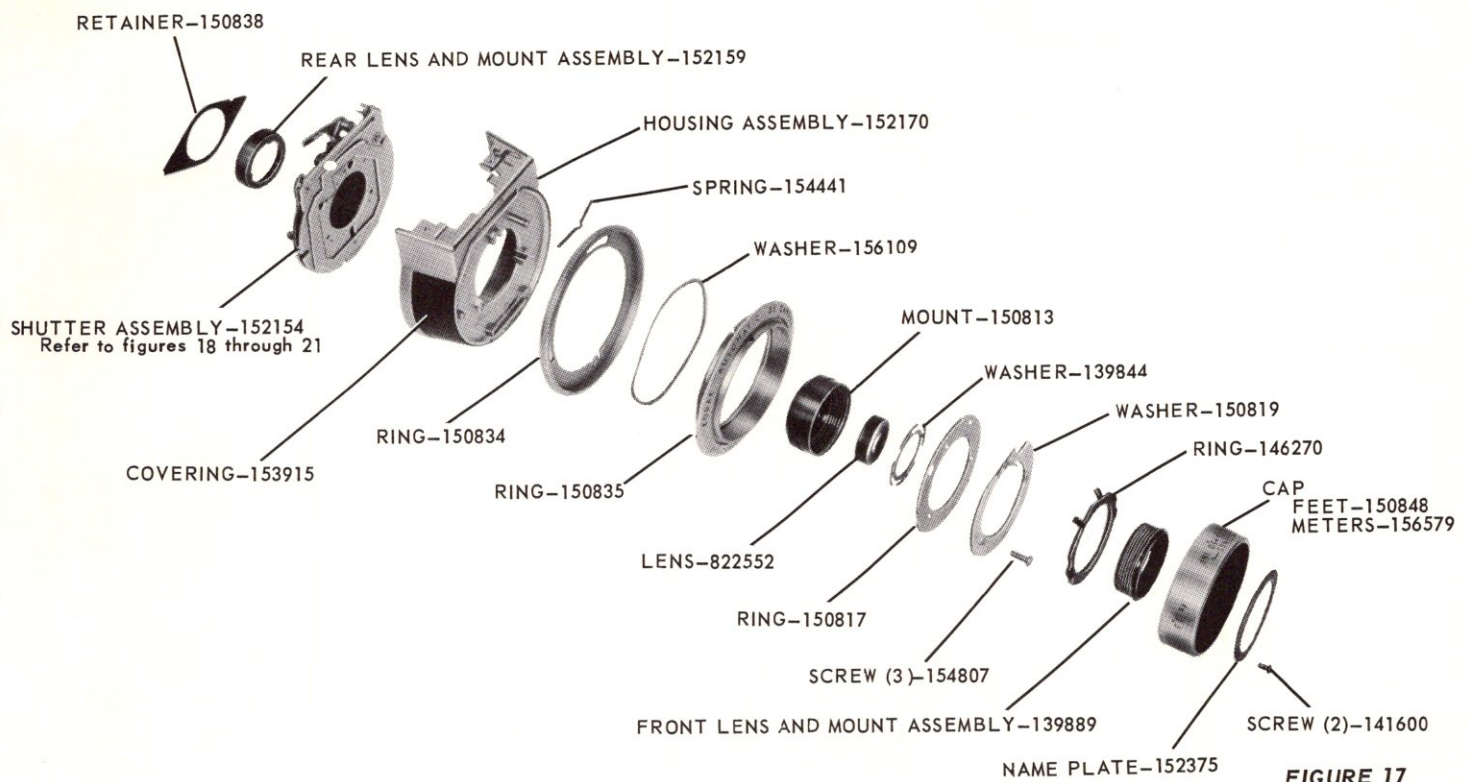


FIGURE 17

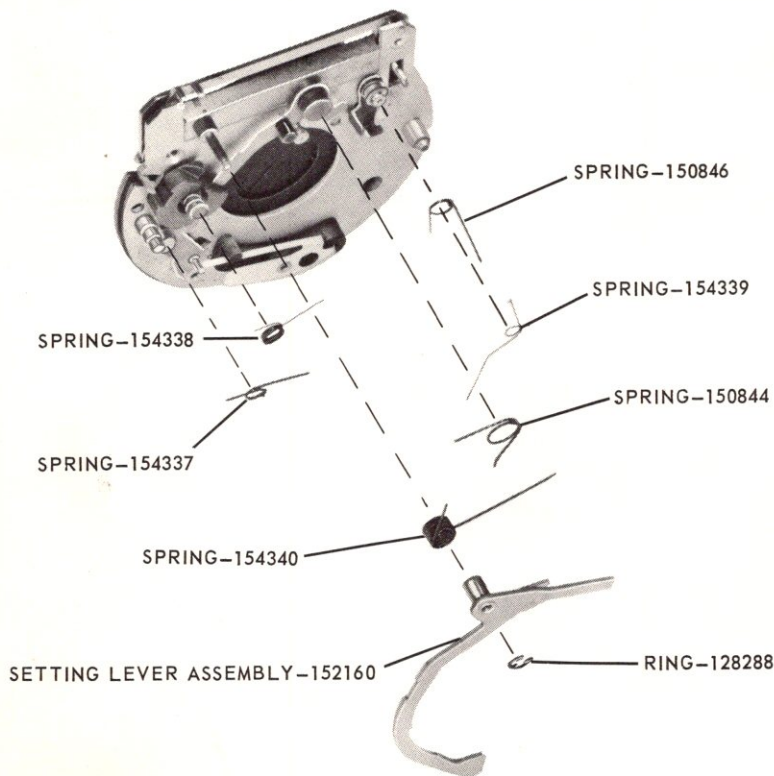

SHUTTER ASSEMBLY-152154

FIGURE 18


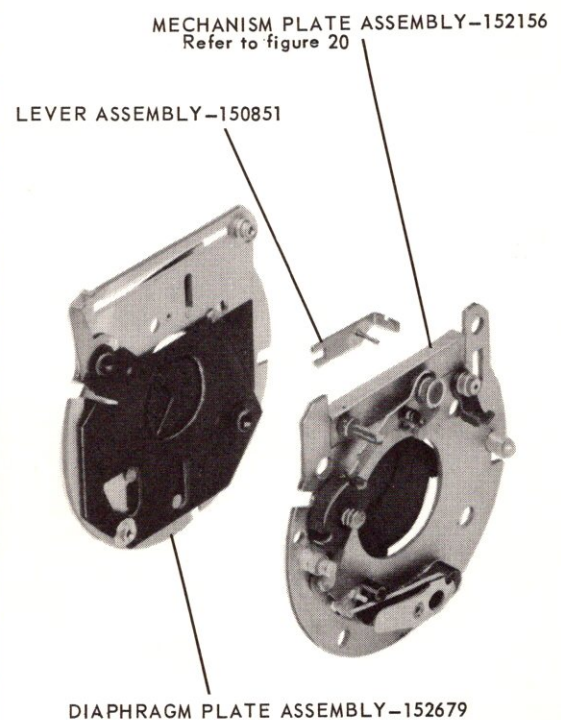



FIGURE 19

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

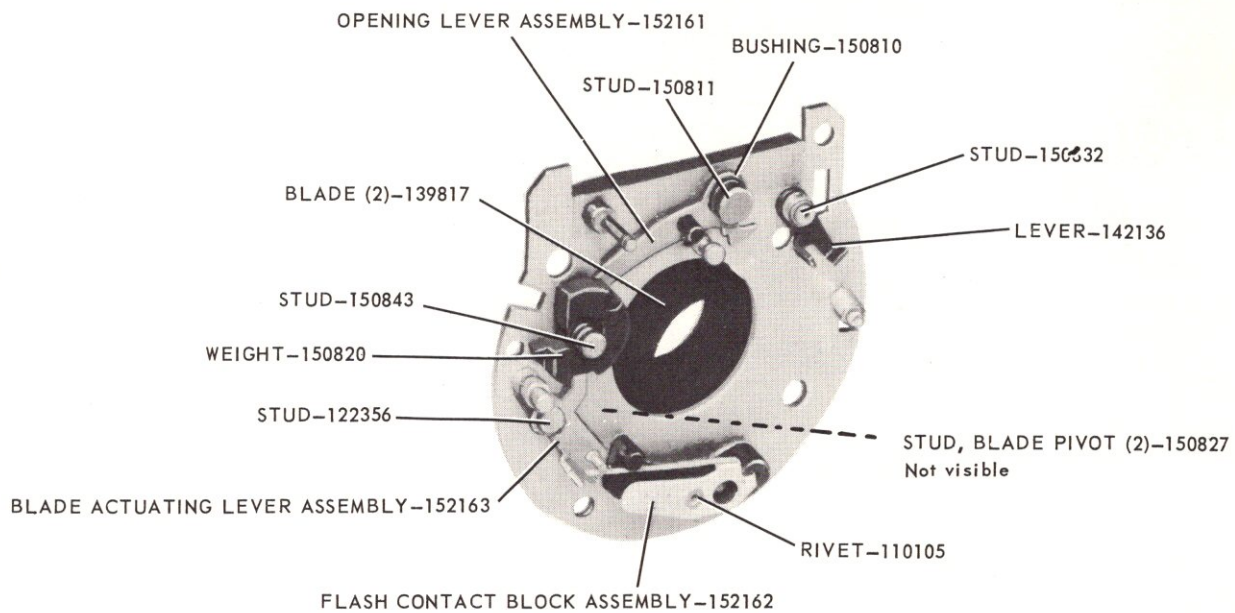

MECHANISM PLATE ASSEMBLY-152156

FIGURE 20

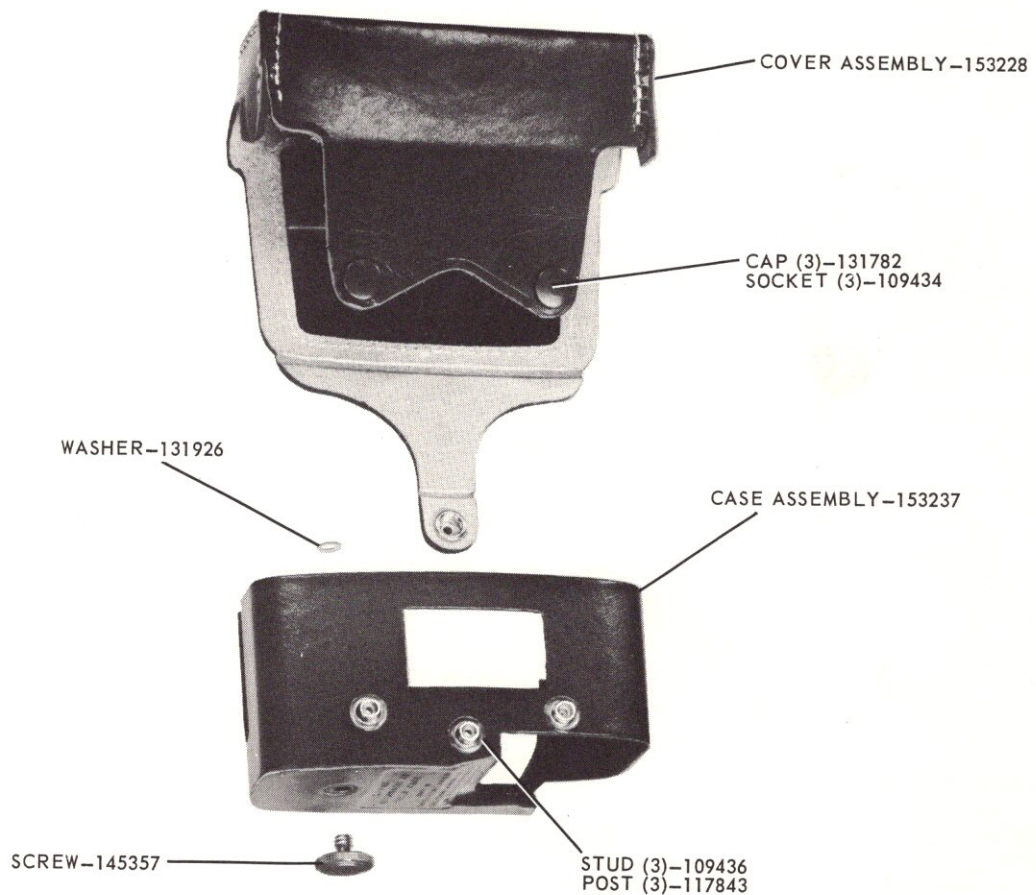

KODAK FIELD CASE

FIGURE 21

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

FIG.	PART NO.	PART NAME	QUAN.
8	79023	WASHER	2
21	109434	SOCKET	3
21	109436	STUD - CASE	3
20	110105	RIVET	1
21	117843	POST - CASE	3
1	120012	BUCKLE - SHOULDER STRAP	2
20	122356	STUD - BLADE LATCH	1
14	122829	SCREW	2
1	122830	SCREW	4
11	122831	SCREW	2
9	123105	SCREW	2
18	128288	RING - SETTING LEVER STUD	1
11	129757	RING - SHUTTER LINK TO PIN	1
2	130291	SCREW	1
11	131152	WASHER	1
21	131782	CAP - COVER	3
21	131926	WASHER	1
1	136827	STRAP ASSEMBLY	1
1	137216	RIVET - HINGE	2
20	139817	BLADE - SHUTTER	2
17	139844	WASHER - NEGATIVE LENS RETAINING	1
17	139889	FRONT LENS AND MOUNT ASSEMBLY	1
15	140416	RIVET	1
15	140659	HINGE - CASE	1
1	140660	HINGE - BACK	1
1	140661	PIN - HINGE	1
12	140667	STUD - COUNTER	1
12	140671	STUD - REWIND LEVER	1
11	140672	RATCHET - METERING	1
11	140678	BUTTON - LEVER ADVANCE	1
11	140679	SCREW	1
1	141390	RING - INSERT	1
17	141600	SCREW	2
12	141794	SPRING - CHECK PAWL	1
11	141805	WASHER - RATCHET SPRING	1
5	142084	SPRING - NEGATIVE LENS RETAINER	1
4	142096	RETAINER - BEAM SPLITTER	1
4	142097	RETAINER - MIRROR	1
20	142136	LEVER - TRIGGER LATCH	1
12	142325	SPRING - COUNTER DRUM	1
16	142350	LATCH ASSEMBLY	1
6	143439	RETAINER - EYE LENS	1
1	145189	RIVET	4
21	145357	SCREW	1
1	145666	RIVET	2
17	146270	RING - FOCUSING STOP	1
12	146340	SPRING - REWIND LEVER	1
11	146341	SPRING - WINDING PAWL	1
15	146425	BAFFLE - LIGHT	1
16	146576	SPRING - LATCH	1
11	146590	WASHER	1
14	146593	WASHER	1
11	146740	PAWL - WINDING	1
11	146741	STUD - WINDING PAWL	1
15	146742	INSERT - CASE, RUBBER	1
12	146745	LEVER - REWIND	1
3	147003	SCREW	1
3	147004	SCREW	1
15	147005	PIN - BAFFLE	2
11	147453	SCREW	2
12	147936	SPRING - COUNTER PAWL	1
13	148190	SPRING - MECHANISM RELEASE SLIDE	1
7	149735	WASHER	1
6	150319	HOUSING - VIEWFINDER	1
20	150810	BUSHING - OPENING LEVER	1
20	150811	STUD - OPENING LEVER	1
17	150813	MOUNT - NEGATIVE LENS	1
17	150817	RING - CLAMPING	1
17	150819	WASHER	1
20	150820	WEIGHT - RETARD	1
20	150827	STUD - BLADE PIVOT	2

Always give PART NUMBER and NAME when ordering parts.

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

FIG.	PART NO.	PART NAME	QUAN.
20	150832	STUD - OPENING LEVER	1
17	150834	RING - SPEED ACTUATING	1
17	150835	RING - FOCUSING CAP INDEX	1
17	150838	RETAINER - REAR LENS ASSEMBLY	1
20	150843	STUD - RETARDING WEIGHT	1
18	150844	SPRING - OPENING LEVER	1
18	150846	SPRING - DIAPHRAGM CAM OPENING	1
17	150848	CAP - LENS FOCUSING FEET	1
19	150851	DIAPHRAGM CAM PLATE LEVER ASSEMBLY	1
8	150862	SCREW	2
14	150869	BODY RELEASE ASSEMBLY	1
1	150870	BACK COMPLETE	1
1	150871	PRESSURE PAD ASSEMBLY	1
11	150872	WINDING PAWL AND BEARING ASSEMBLY	1
2	150873	REWIND KNOB ASSEMBLY	1
9	150874	HANGER PLATE ASSEMBLY	1
11	150875	WINDING LEVER ASSEMBLY	1
6	150877	COVER ASSEMBLY	1
3	150878	FINDER BRACKET ASSEMBLY	1
11	150880	BOTTOM PANEL ASSEMBLY	1
15	150881	SPROCKET SHAFT ASSEMBLY	1
3	150883	SPEED KNOB ASSEMBLY	1
3	150893	SPRING - VIEWFINDER WINDOW	1
3	150894	WINDOW - VIEWFINDER	1
9	150896	SHAFT - REWIND	1
16	150898	STUD - LATCH	1
9	150901	BRACKET - CONTACT	1
15	150904	SPROCKET	1
9	150907	BAFFLE - METER	1
1	150910	FRAME - BACK	1
7	150919	BEARING - MANUAL RELEASE BUTTON	1
7	150921	BUTTON - MANUAL RELEASE	1
14	150922	SCREW	1
5	150923	LENS - METER	1
5	150924	WINDOW - VIEWFINDER RETICLE	1
5	150926	SPRING - VIEWFINDER RETICLE	1
3	150931	DRUM - METER MASK	1
16	150936	PANEL - FRONT	1
6	150937	PANEL - VIEWFINDER HOUSING COVER	1
11	150938	SPOT - KODAK	1
3	150939	SCREW	1
5	150940	RETICLE - VIEWFINDER	1
8	150941	SCREW	1
8	150942	SCREW	1
6	150943	DIAL - FILM SPEED	1
11	150952	LEVER - INTERLOCK	1
9	151542	LEVER - SIGNAL	1
9	151543	EXPOSURE METER ASSEMBLY	1
2	151604	SCREW	1
9	151606	SPRING - REWIND SHAFT	1
10	151607	SPRING - DIAL RELEASE LEVER	1
9	151608	SCREW	2
11	151609	SPRING - INTERLOCK LEVER	1
7	151610	BEZEL - VIEWFINDER EYE LENS	1
12	151611	SCALE - COUNTER	1
14	151706	BRACKET - GUIDE PIN	1
14	151707	PLATE - GUIDE PIN	1
14	151708	PIN - BODY RELEASE GUIDE	1
3	151900	INSERT - FILM SPEED KNOB	1
2	151901	INSERT- REWIND KNOB	1
9	151916	SCREW	1
8	152090	SCREW	1
1	152091	PLATE - CARD HOLDER	1
8	152153	SPEED SCALE AND SWITCH ASSEMBLY	1
17	152154	SHUTTER ASSEMBLY	1
19	152156	MECHANISM PLATE ASSEMBLY	1
17	152159	REAR LENS AND MOUNT ASSEMBLY	1
18	152160	SETTING LEVER ASSEMBLY	1
20	152161	OPENING LEVER ASSEMBLY	1
20	152162	FLASH CONTACT BLOCK ASSEMBLY	1
20	152163	BLADE ACTUATING LEVER ASSEMBLY	1

KODAK AUTOMATIC 35 CAMERA AND FIELD CASE

FIG.	PART NO.	PART NAME	QUAN.
17	152170	HOUSING ASSEMBLY	1
10	152175	SPRING - INDICATOR LEVER	1
5	152176	SPRING - METER CELL	1
5	152177	SPACER - METER LENS	1
17	152375	NAMEPLATE - LENS MOUNT	1
8	152395	GASKET - REAR LENS MOUNT	1
6	152432	SCREW	2
11	152675	MECHANISM PLATE ASSEMBLY	1
12	152676	DRUM ASSEMBLY	1
11	152677	CASE ASSEMBLY	1
5	152678	TOP HOUSING ASSEMBLY	1
19	152679	DIAPHRAGM PLATE ASSEMBLY	1
5	153181	LENS - NEGATIVE	1
21	153228	COVER ASSEMBLY	1
21	153237	CASE ASSEMBLY	1
8	153452	PLATE AND WINDOW ASSEMBLY	1
14	153592	SPRING - BODY RELEASE LEVER	1
9	153593	SPRING - SIGNAL LEVER	1
11	153810	SPOOL - TAKE UP	1
16	153910	COVERING CASE, RIGHT	1
15	153911	COVERING - CASE, LEFT	1
14	153912	INSERT - BODY RELEASE	1
11	153913	COVERING - BOTTOM PANEL, WITHOUT WINDOW HOLE	1
1	153914	COVERING - BACK	1
17	153915	COVERING - SHUTTER HOUSING	1
18	154337	SPRING - BLADE CLOSING	1
18	154338	SPRING - RETARD WEIGHT RETURN	1
18	154339	SPRING - TRIGGER LATCH	1
18	154340	SPRING - SETTING LEVER	1
17	154441	SPRING - DETENT	1
17	154807	SCREW	3
11	154810	SCREW	1
9	154811	BUSHING - SIGNAL LEVER	1
3	154812	SPRING - FILM SPEED INDICATOR	1
9	155216	RIVET	1
1	155394	EXPOSURE VALUE CARDS ENGLISH 1 SET	1
11	155999	WINDOW - BOTTOM PANEL	1
17	156109	WASHER - SPEED ACTUATING RING TENSION	1
11	156275	COVERING - BOTTOM PANEL, WITH WINDOW HOLE	1
13	156403	SPRING - METERING COUNTER LEVER	1
17	156579	CAP - LENS FOCUSING METERS	1
1	157586	EXPOSURE VALUE CARDS SPANISH 1 SET	1
17	822552	LENS - NEGATIVE	1
6	822554	LENS - VIEWFINDER EYE	1
4	822555	BEAMSPLITTER	1
4	822556	MIRROR	1
15	850582	RIVET	1

Always give PART NUMBER and NAME when ordering parts

EASTMAN KODAK COMPANY ROCHESTER 4, N.Y.

WESTERN N. Y. CAMERA
635 HERTEL AVE.
BUFFALO 7, N. Y.

Kodak