

Corrected to MAY 1965

Parts List No. 769172

KODAK RETINA IIF CAMERA

KODAK RETINA FIELD CASE, Model D



PAID

AUG 17 1965

WESTERN N. Y. CAMERA

Order parts from

**Eastman Kodak Company, Apparatus Parts Service
800 Lee Road, Rochester, New York 14650**

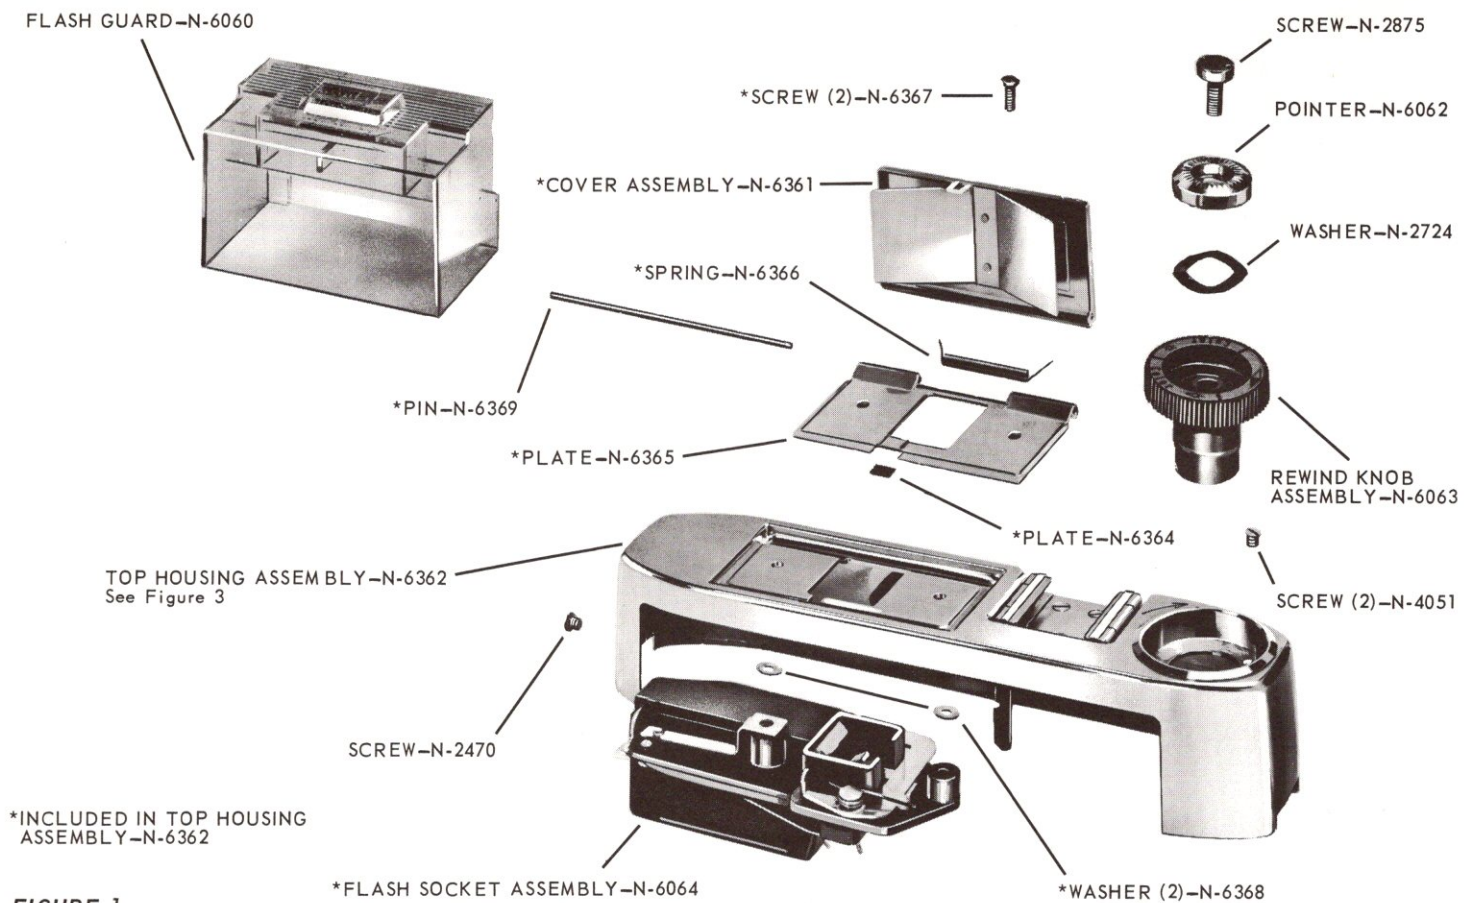


FIGURE 1

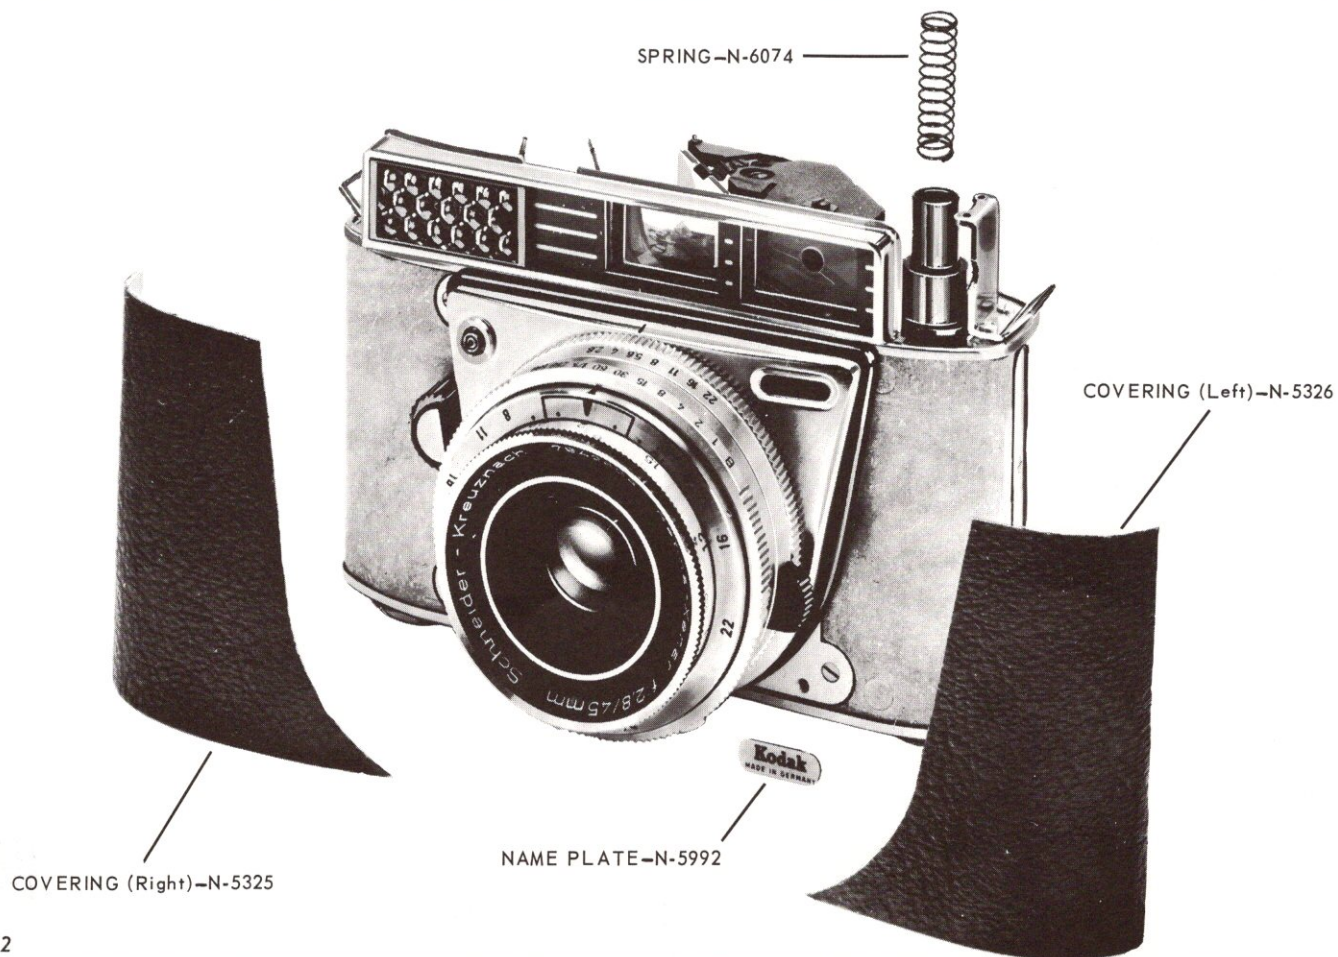


FIGURE 2

Always give PART NUMBER and NAME when ordering parts

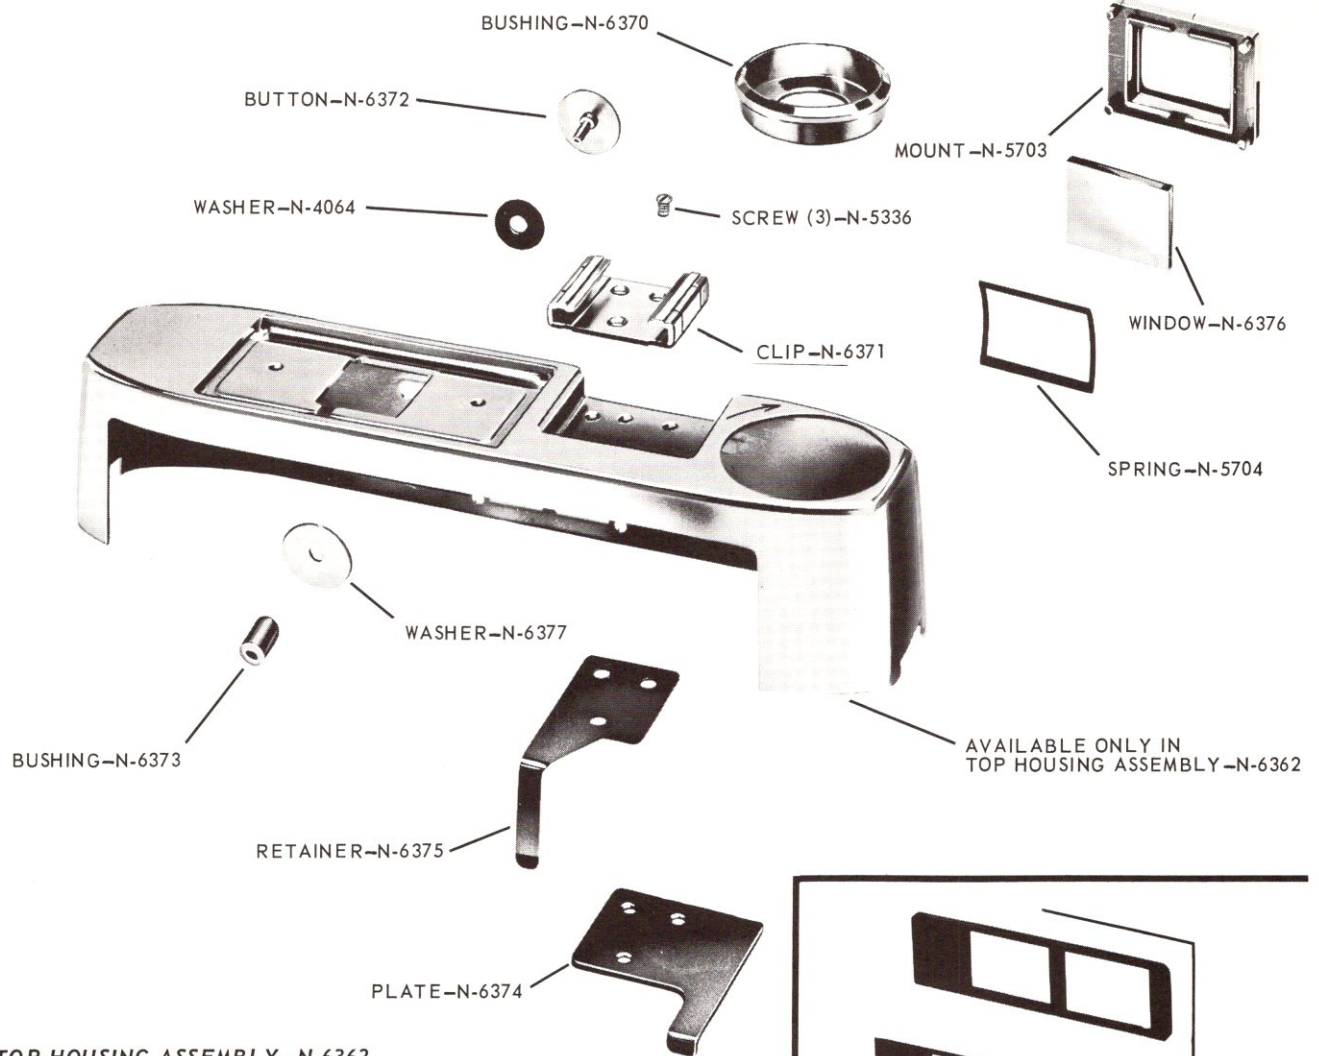


FIGURE 3 TOP HOUSING ASSEMBLY-N-6362

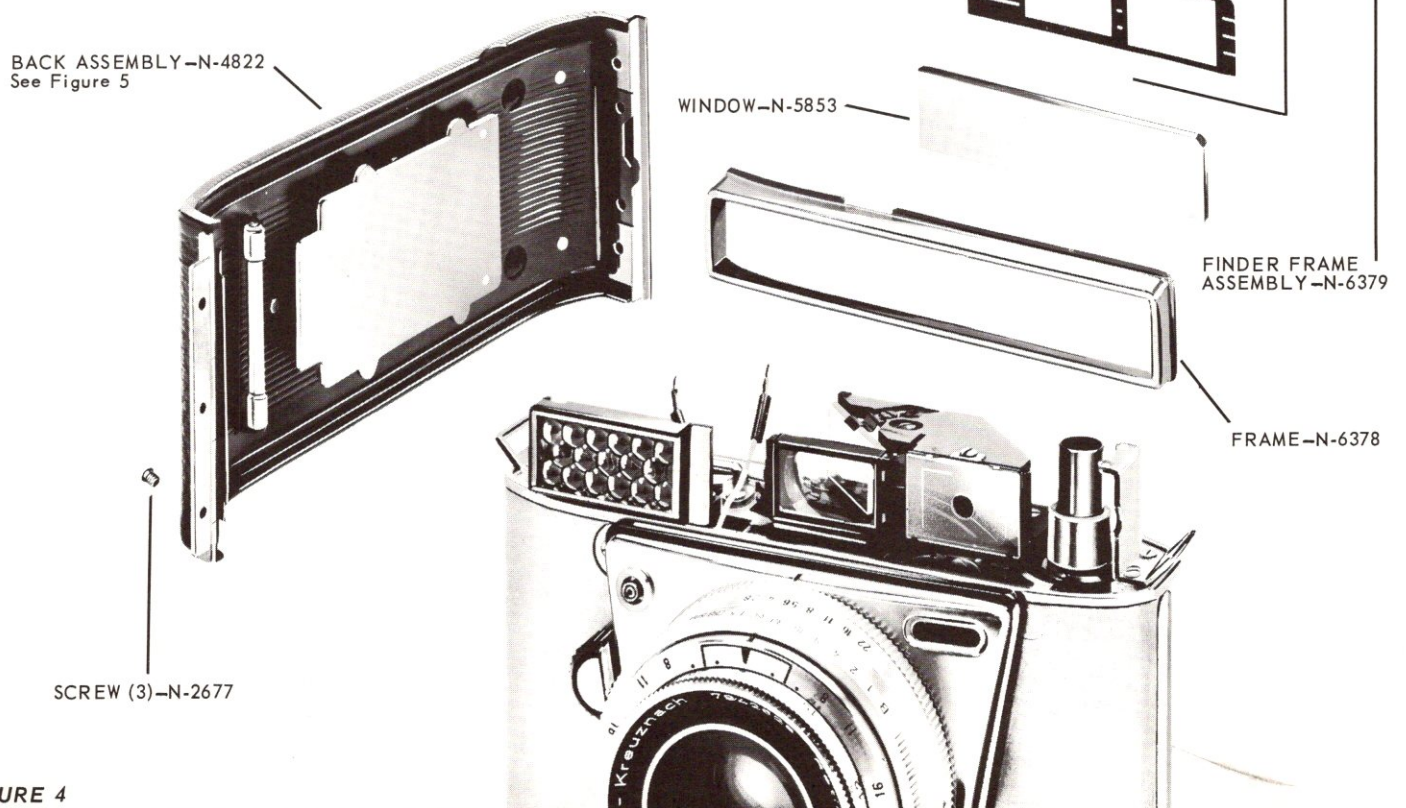


FIGURE 4

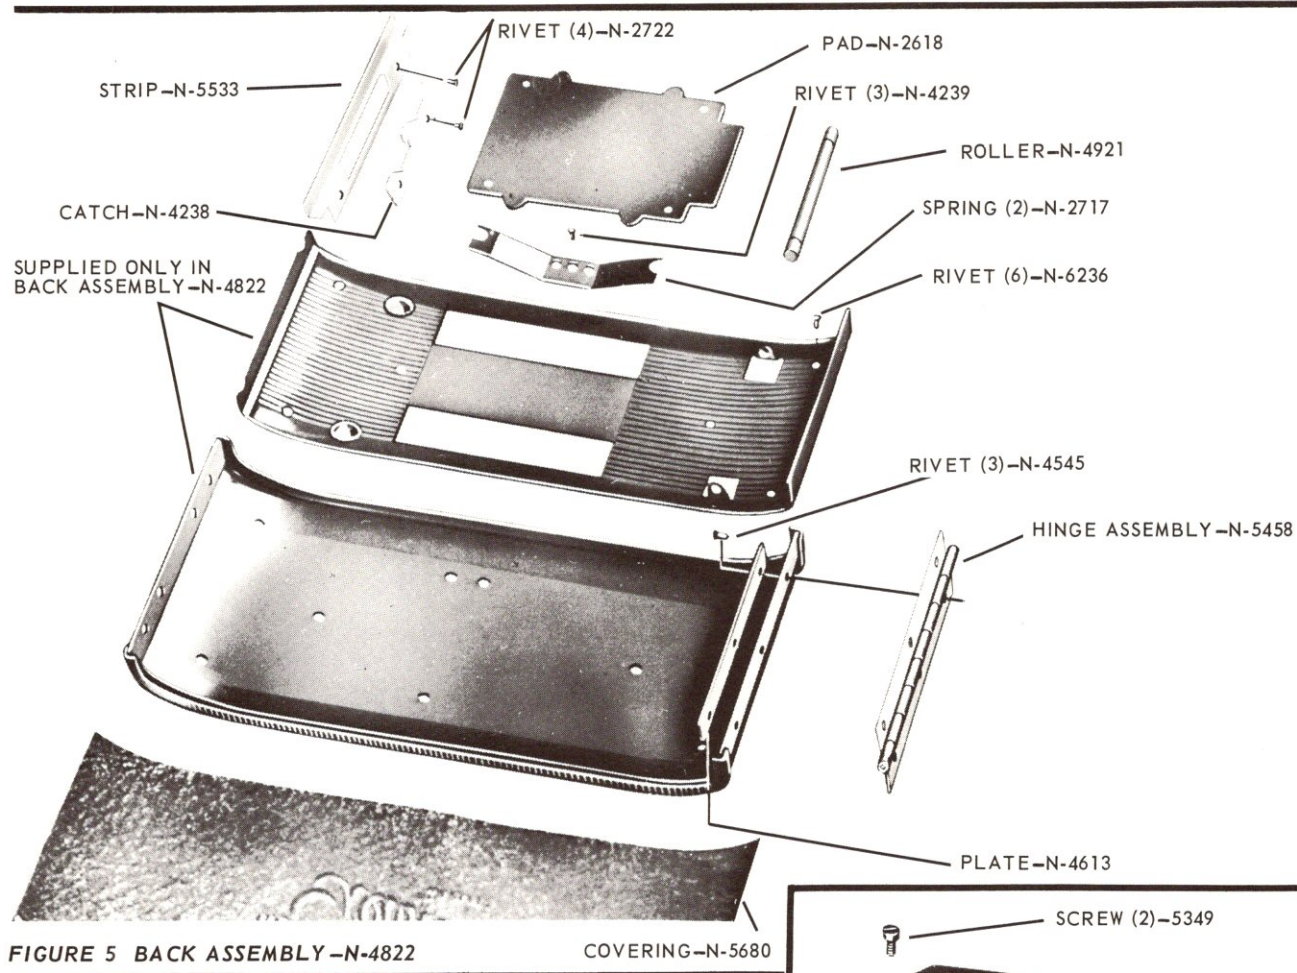


FIGURE 5 BACK ASSEMBLY-N-4822

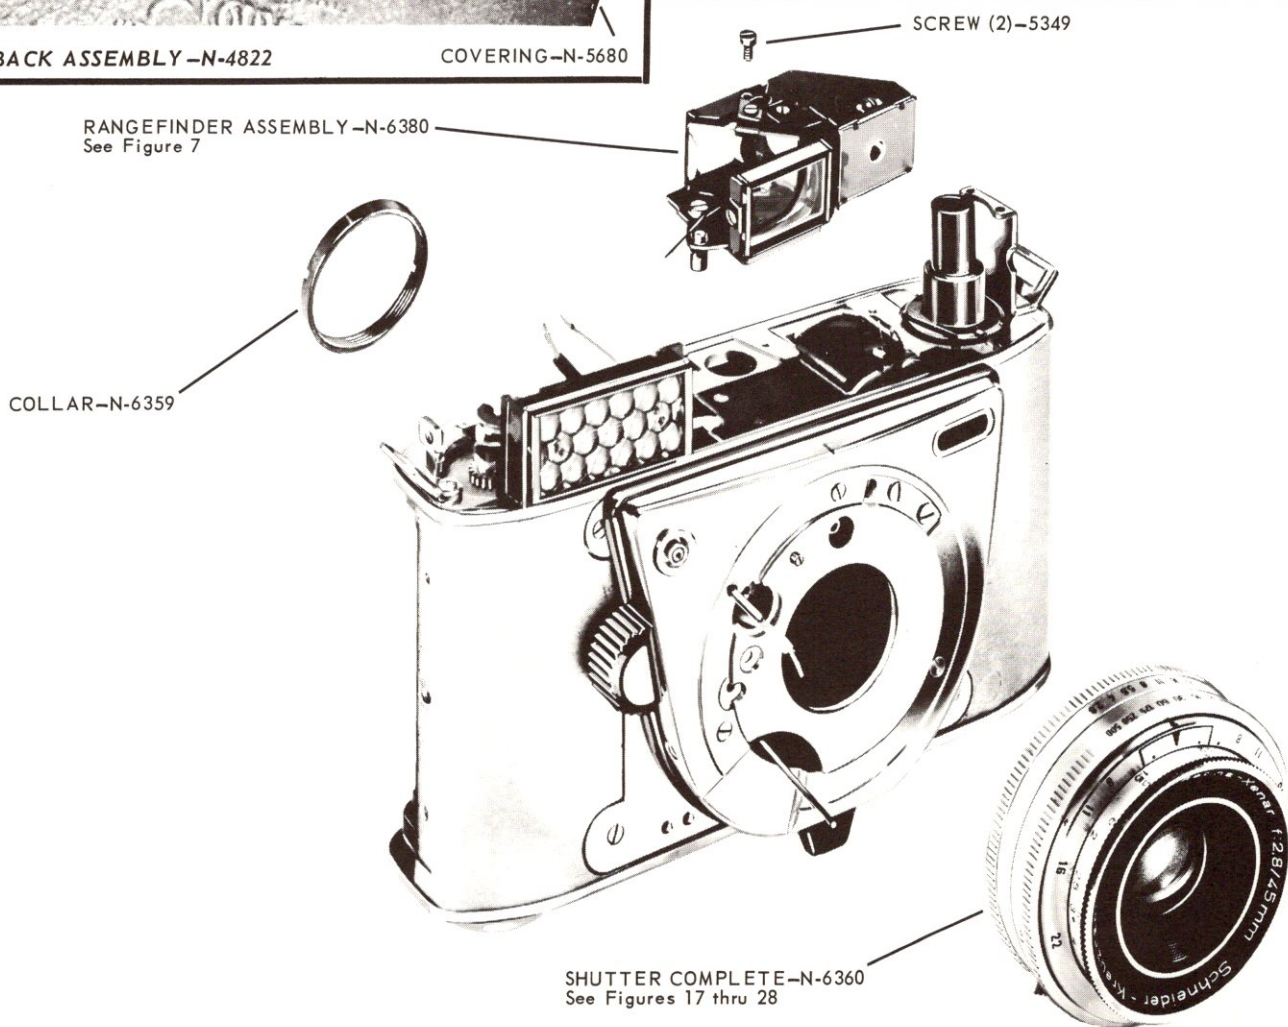


FIGURE 6

Always give PART NUMBER and NAME when ordering parts

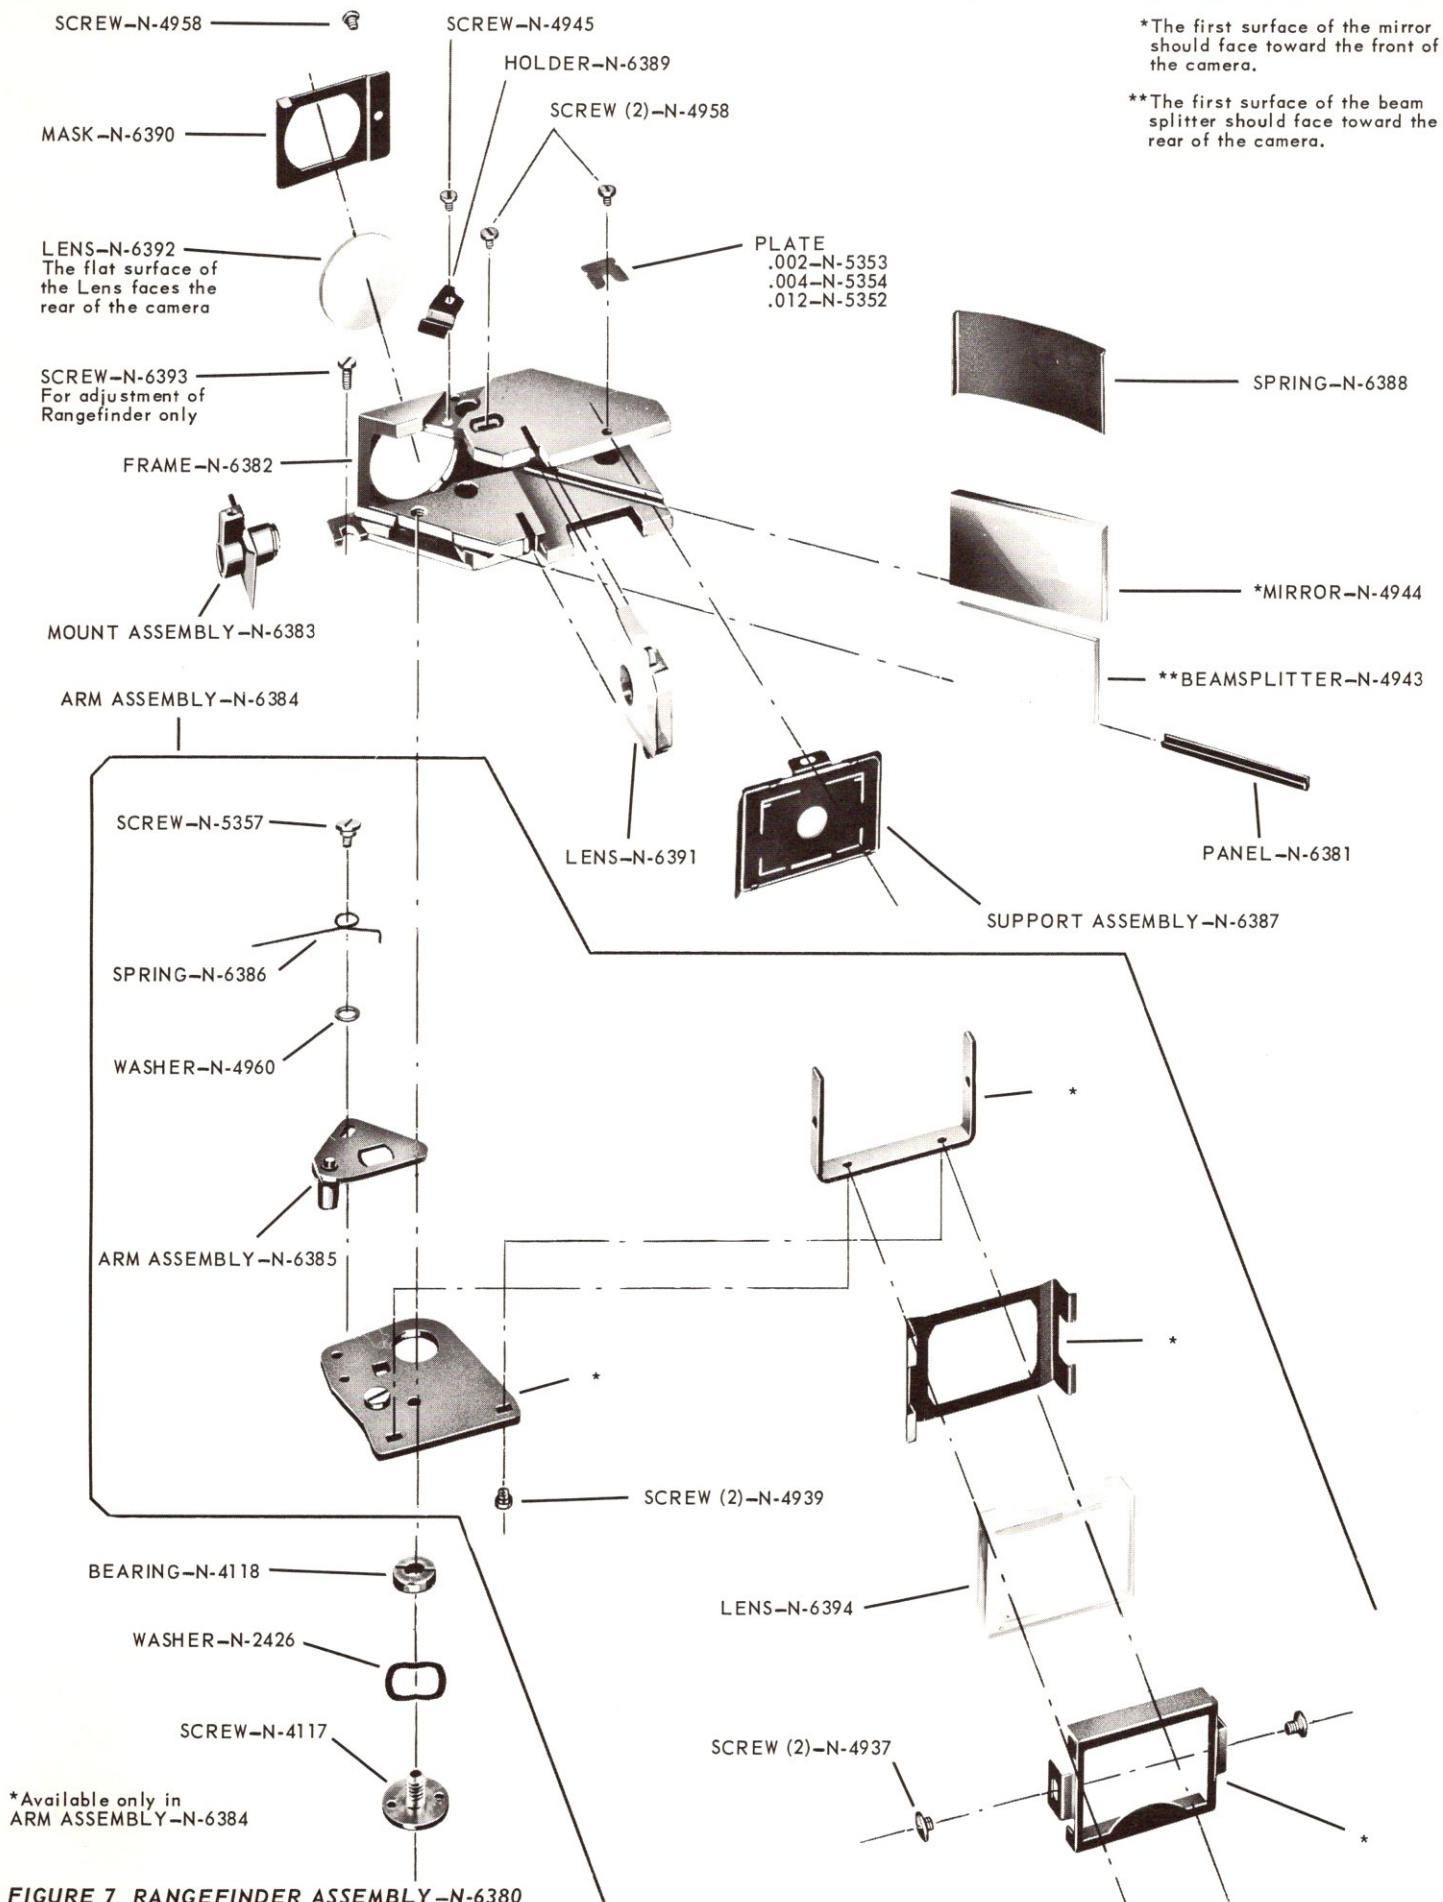


FIGURE 7 RANGEFINDER ASSEMBLY-N-6380

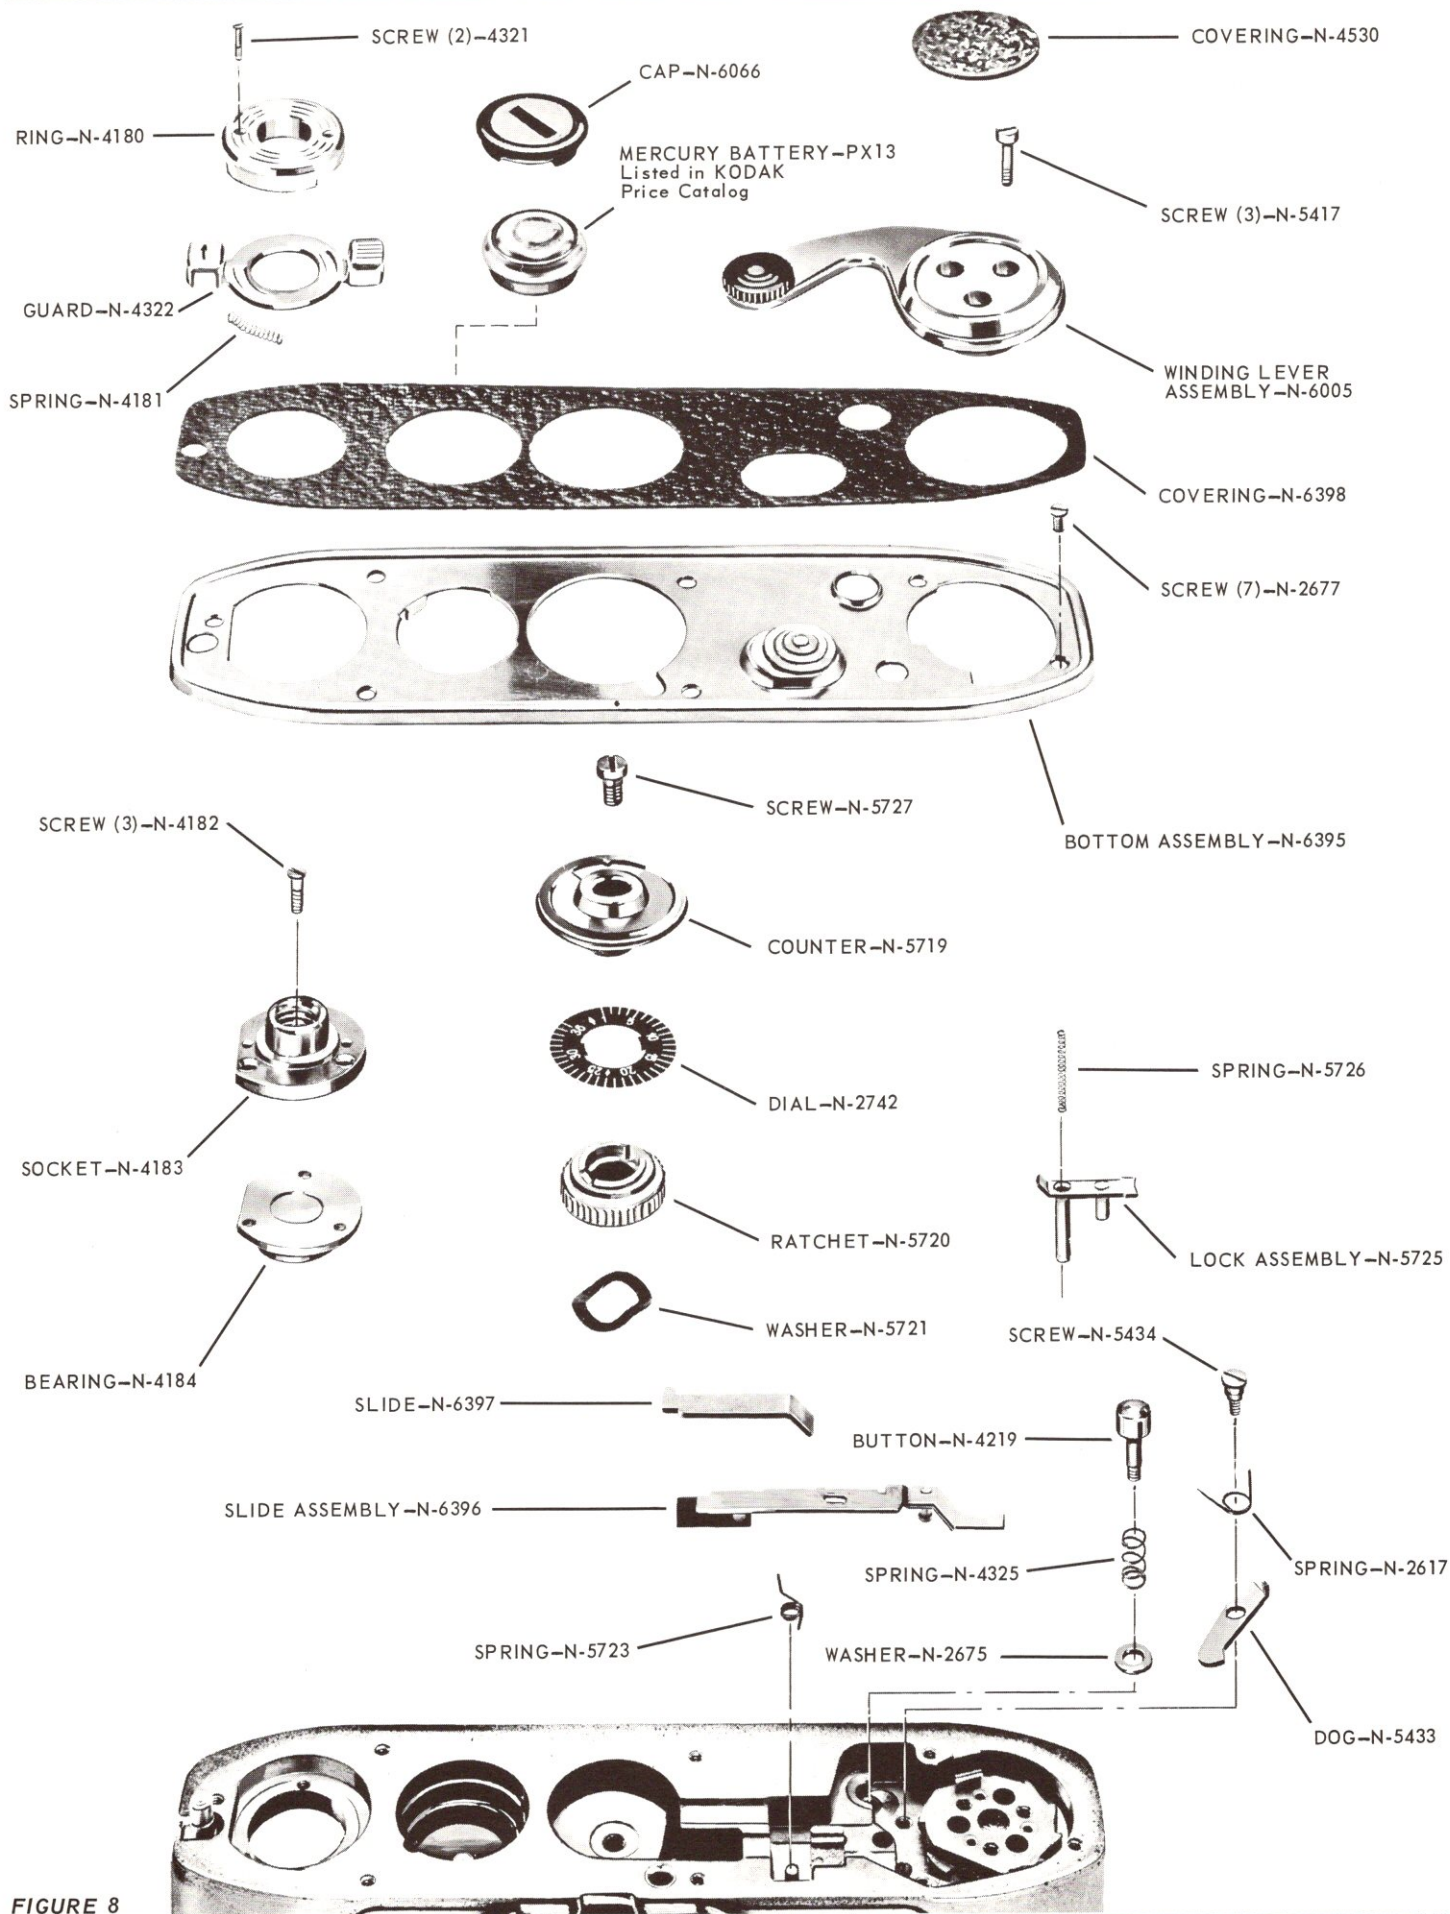


FIGURE 8

Always give PART NUMBER and NAME when ordering parts

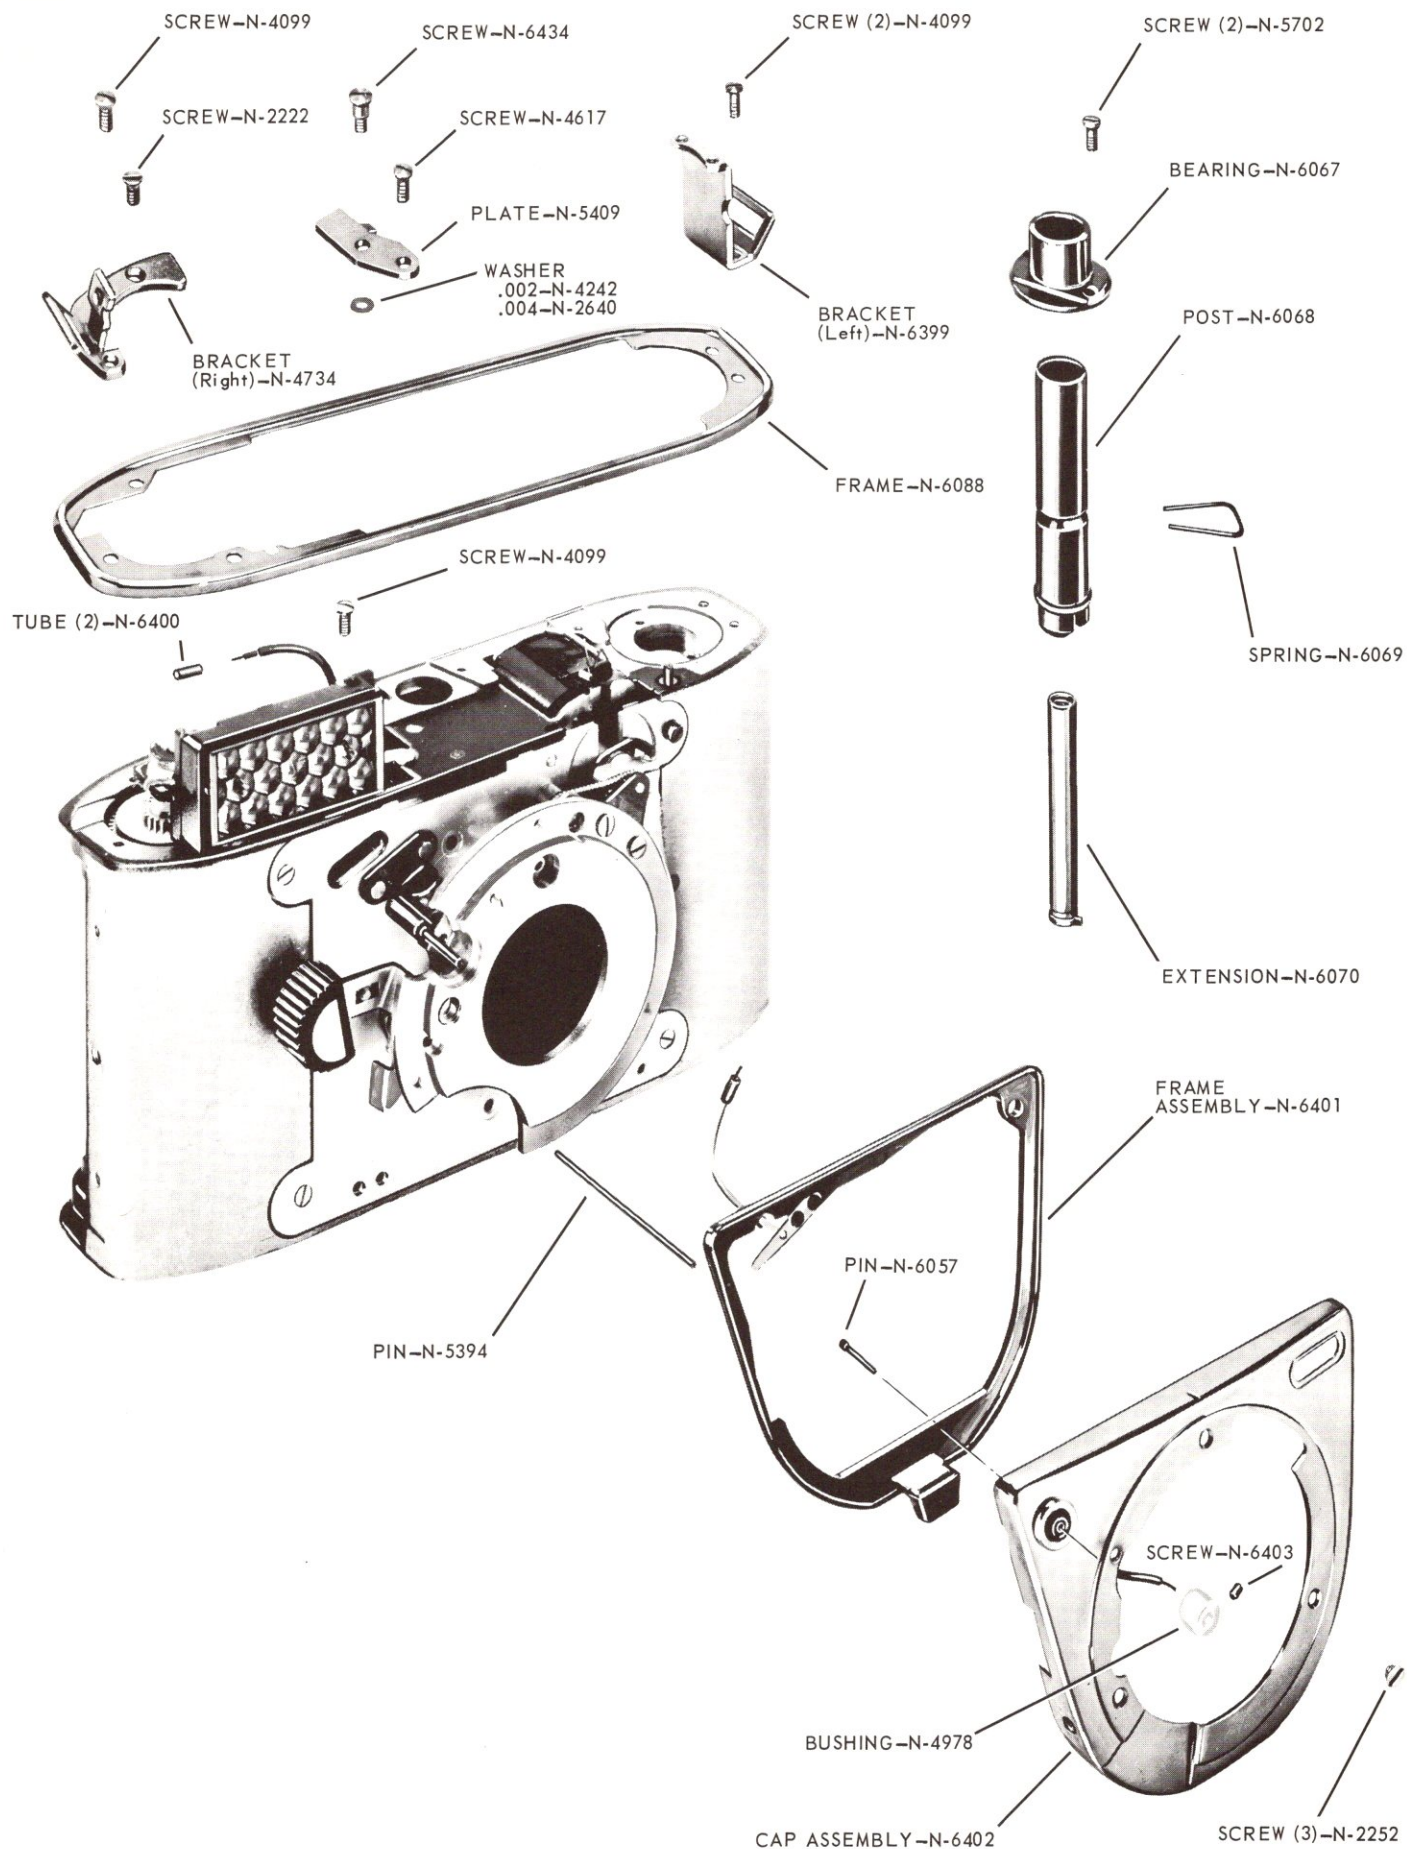


FIGURE 9

Always give PART NUMBER and NAME when ordering parts

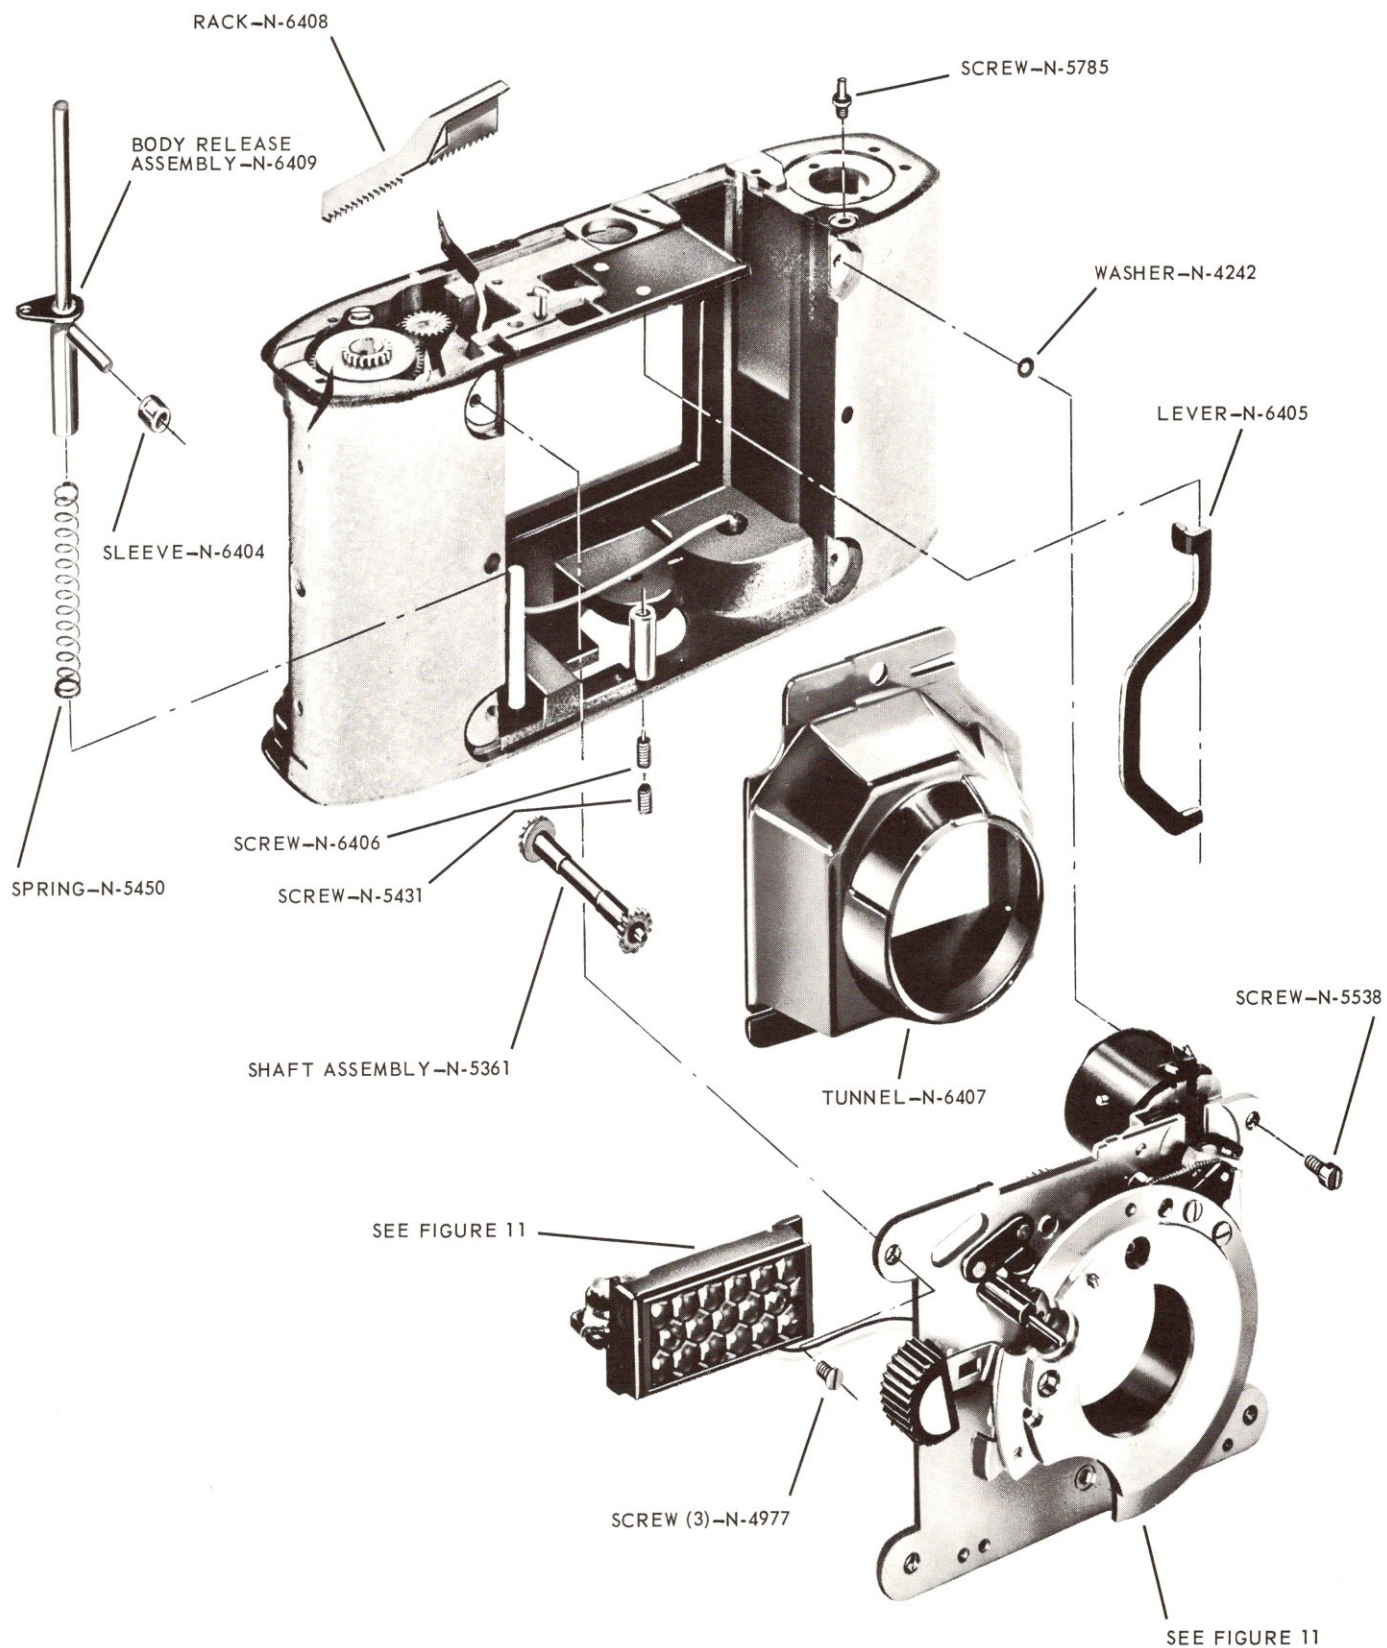


FIGURE 10

Always give PART NUMBER and NAME when ordering parts

SCREW (2)-N-4987

SPRING-N-5594

CORD-N-6411
Supplied in 3 inch lengths
Distance between knots - 1-3/8 inches (approx.)

EXPOSURE METER
ASSEMBLY-N-6363

INSERT-N-6425

FRONT ASSEMBLY-N-6413
Includes Insert-N-6425
See Figure 12

WASHER-N-6414

WASHER-N-6415

PLATE-N-6412

PIN ASSEMBLY-N-6410

SCREW (2)-N-6090

FIGURE 11

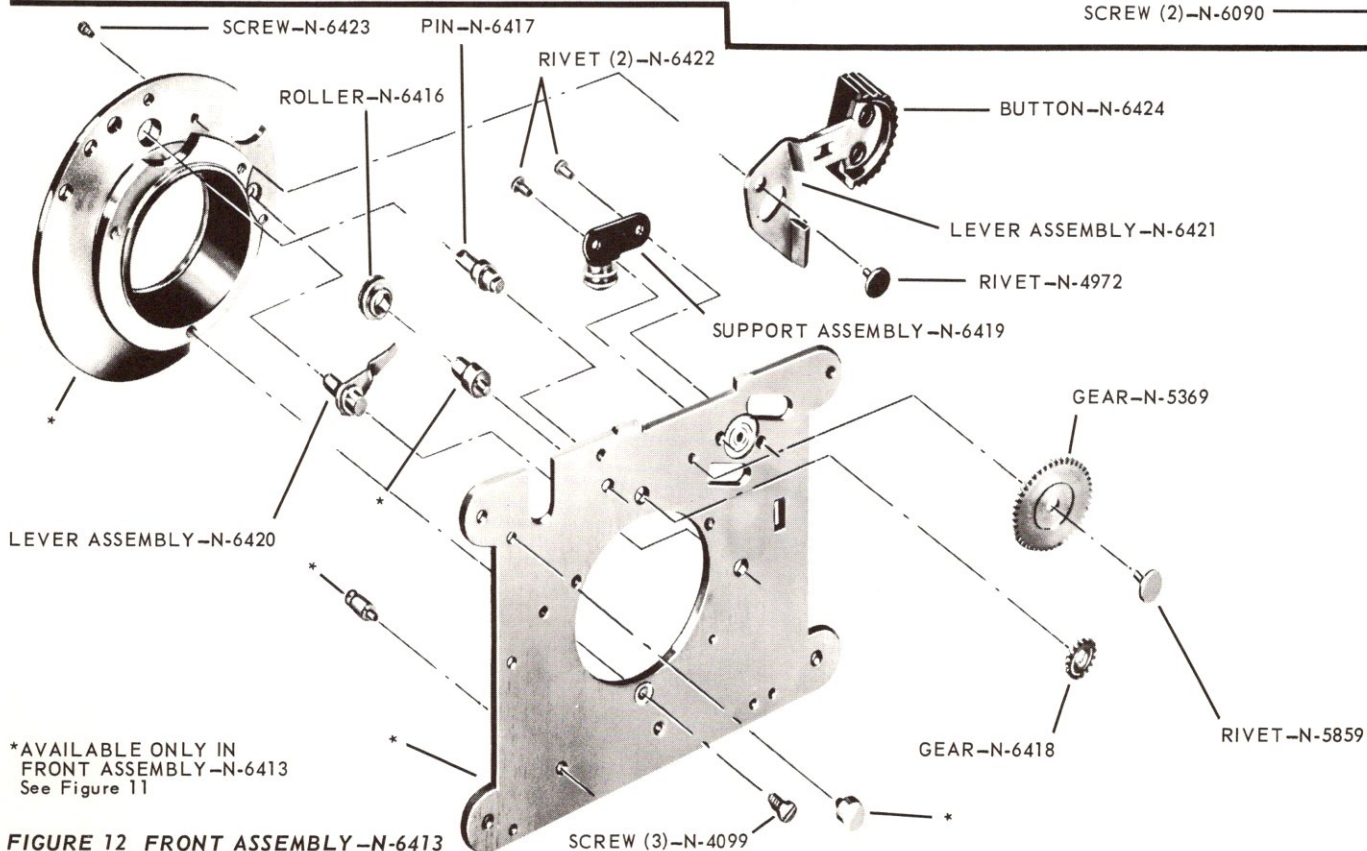


FIGURE 12 FRONT ASSEMBLY-N-6413

Always give PART NUMBER and NAME when ordering parts

SEE FIGURES 14, 15, and 16

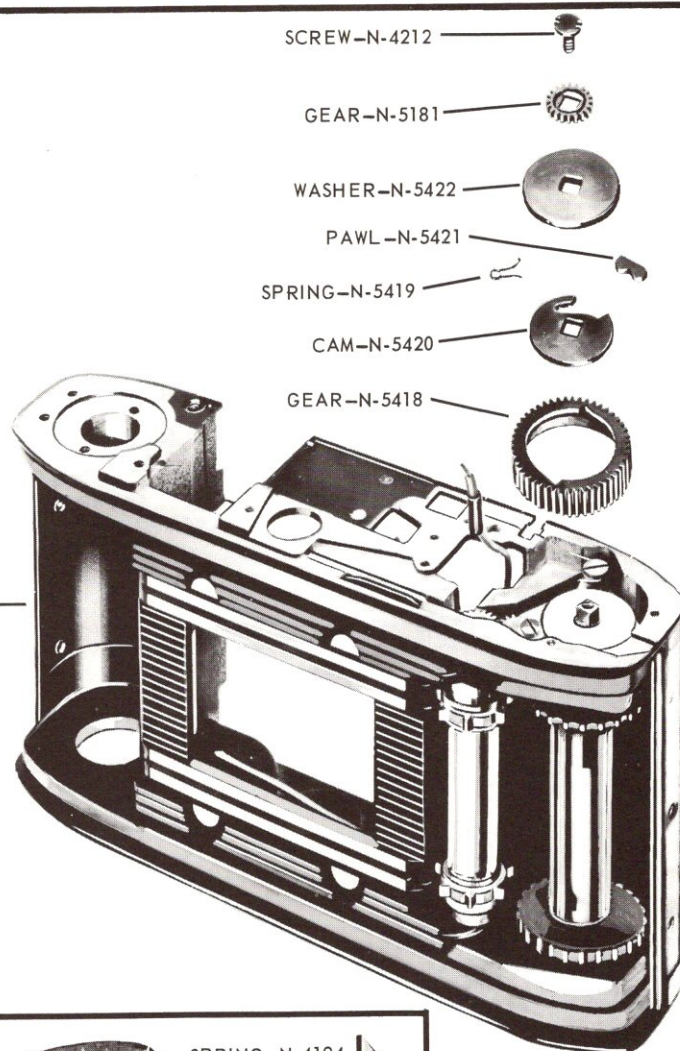


FIGURE 13

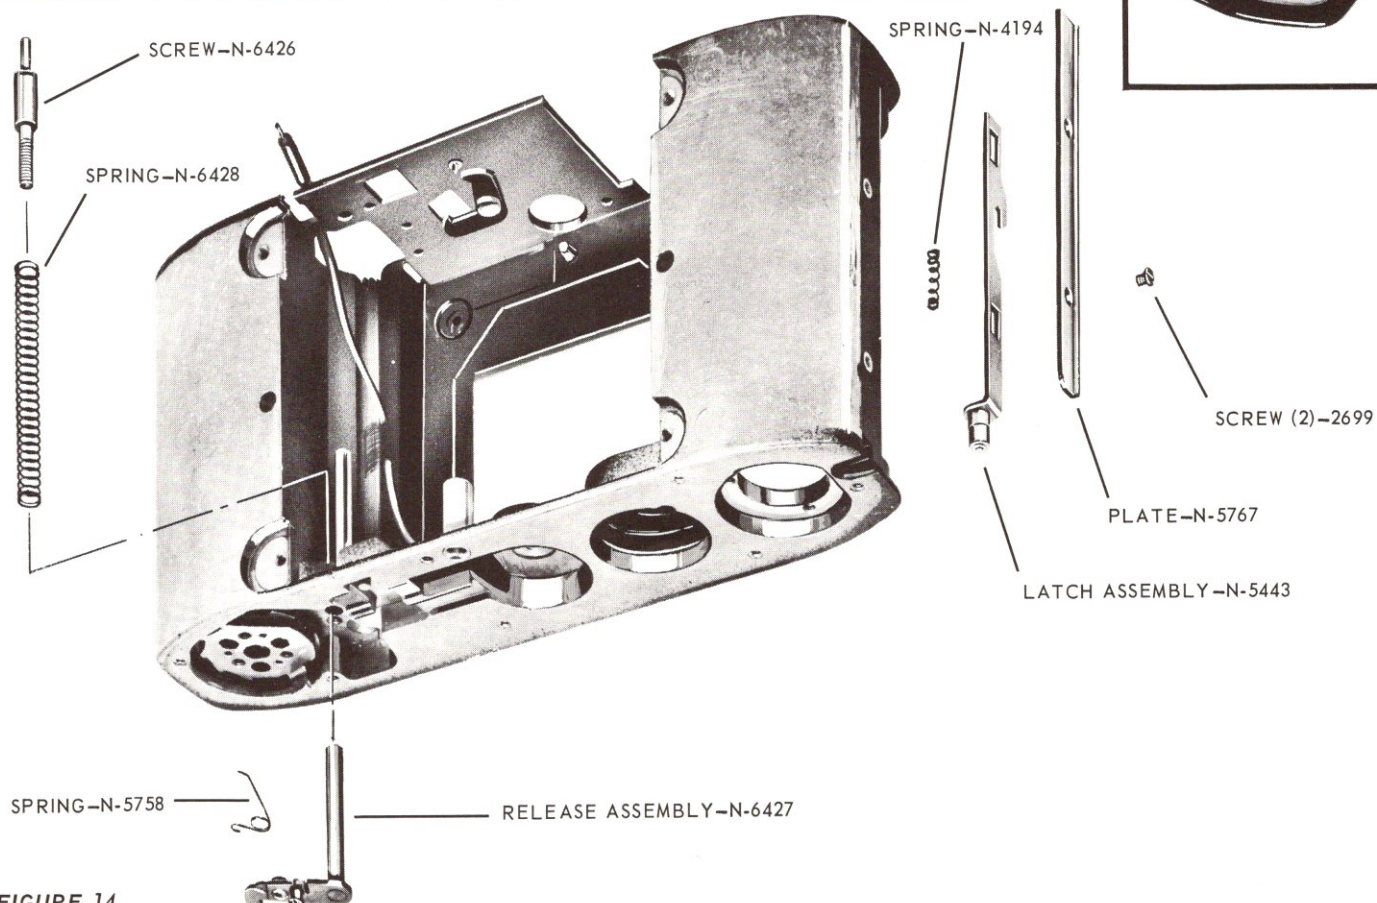


FIGURE 14

Always give PART NUMBER and NAME when ordering parts

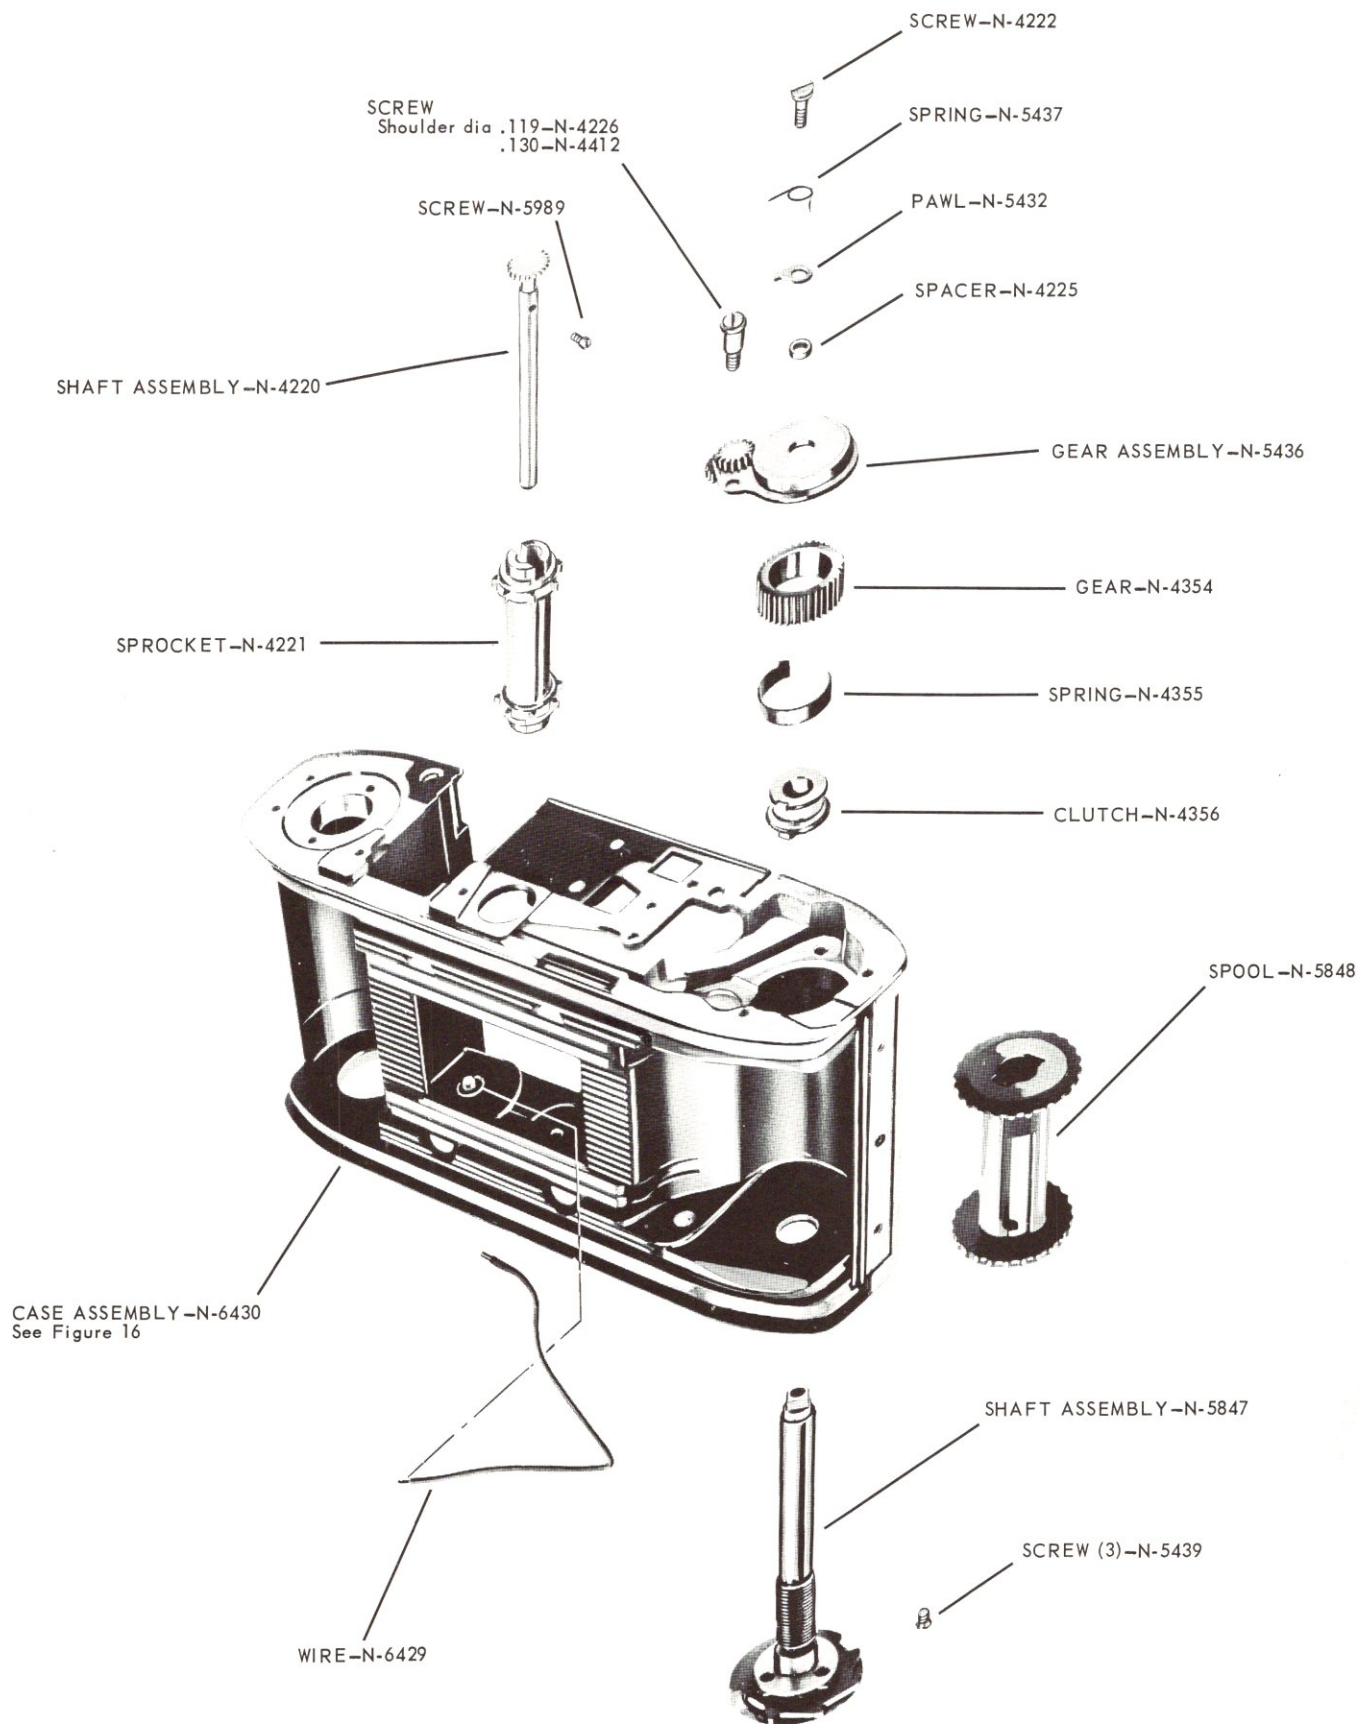


FIGURE 15

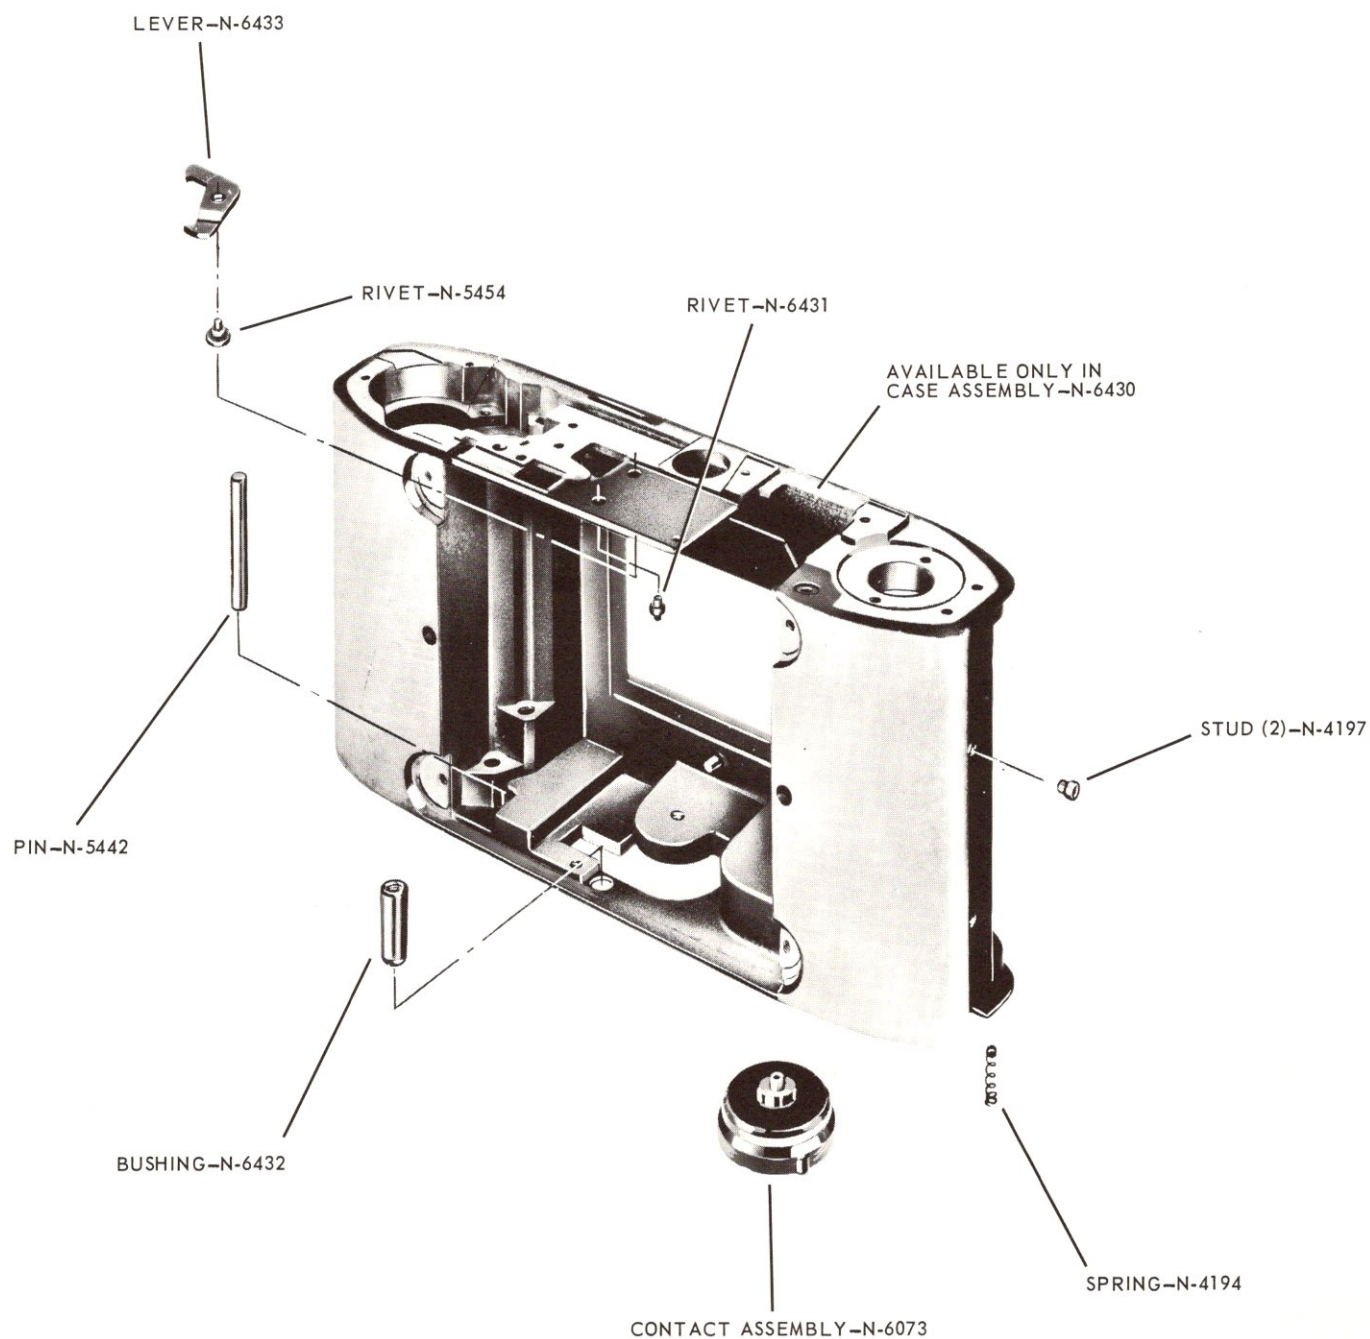


FIGURE 16 CASE ASSEMBLY-N-6430

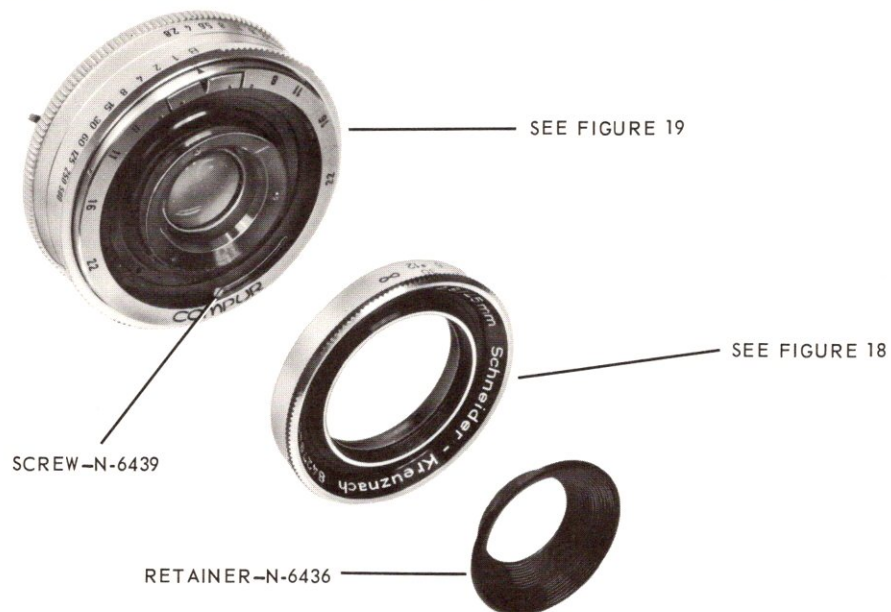


FIGURE 17 SHUTTER COMPLETE-N-6360

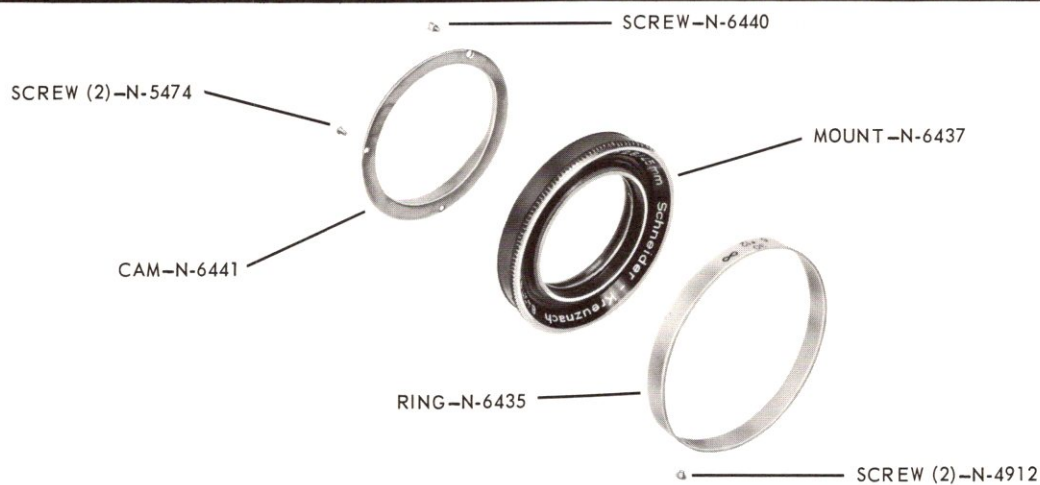


FIGURE 18

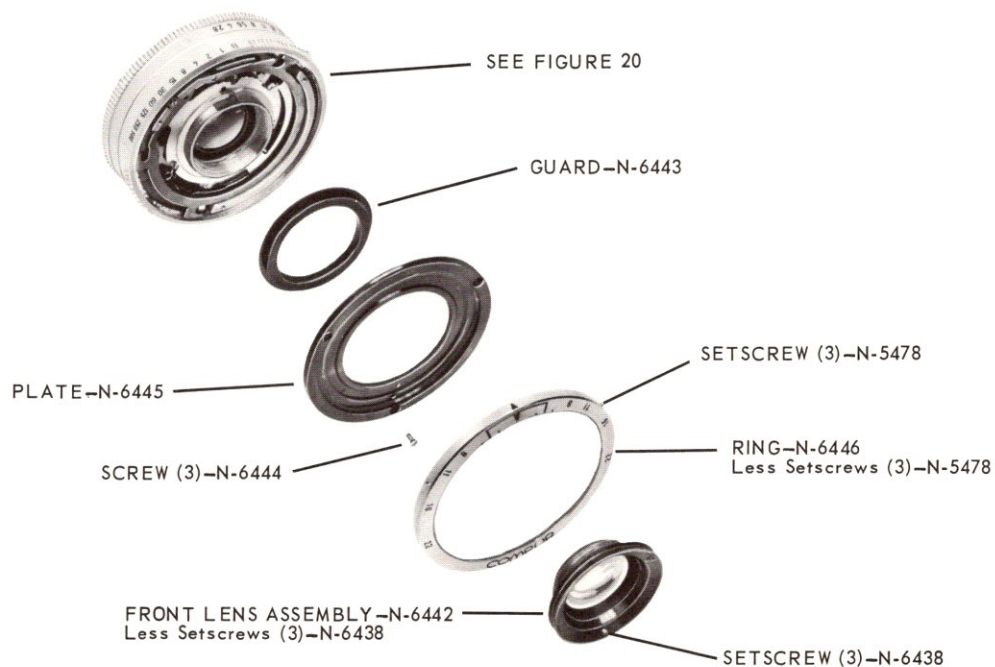


FIGURE 19

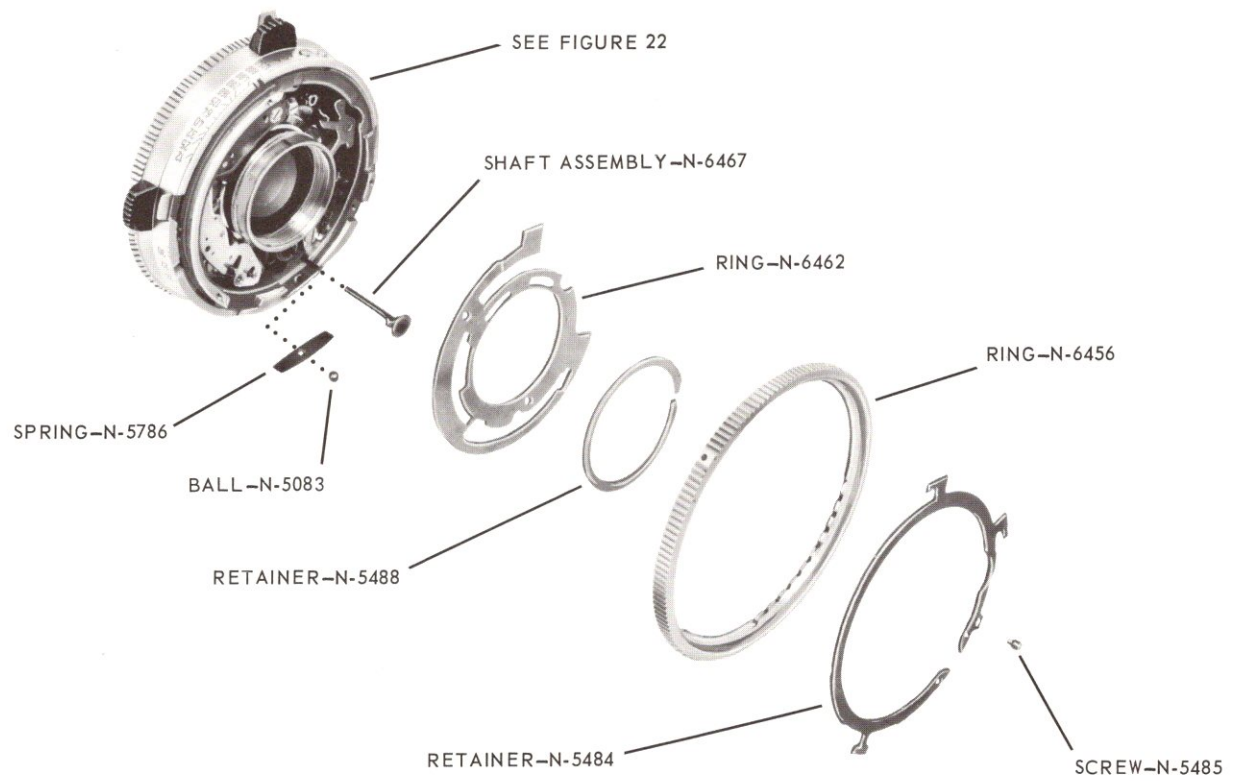


FIGURE 20



FIGURE 21 THIS ILLUSTRATION SHOWS COMPONENT PARTS IN POSITION

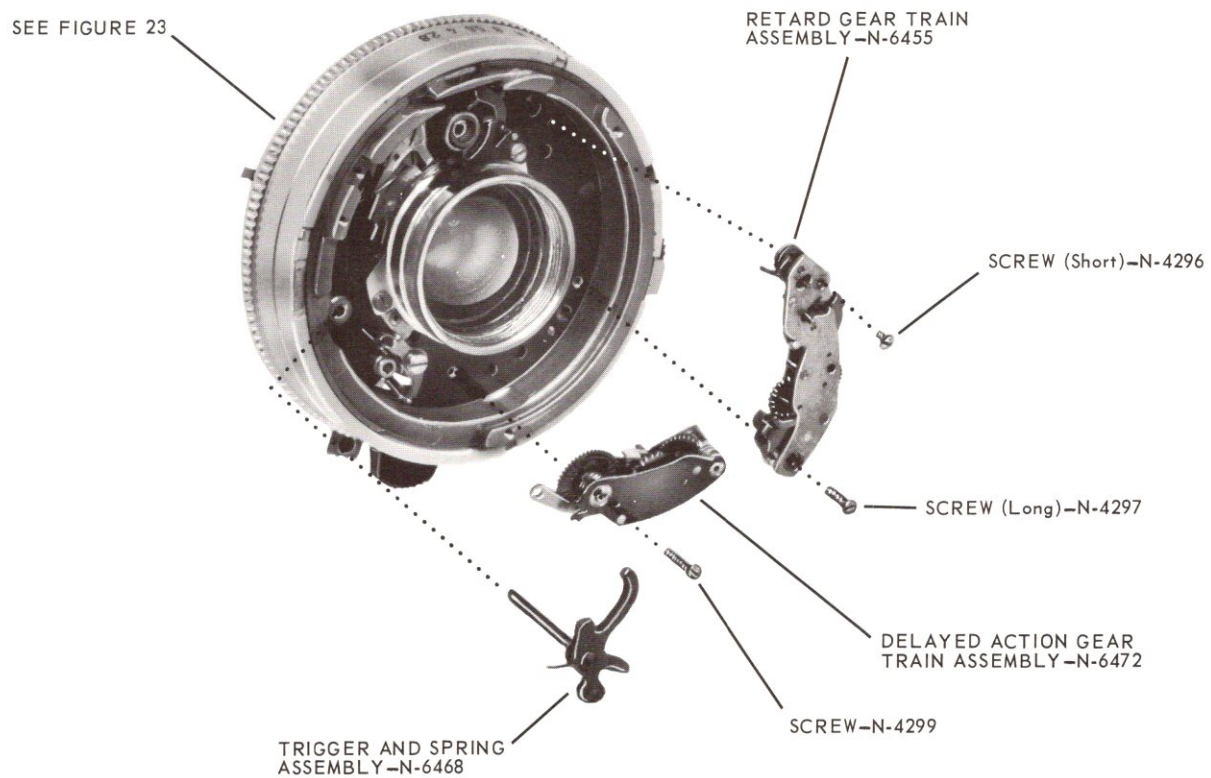


FIGURE 22

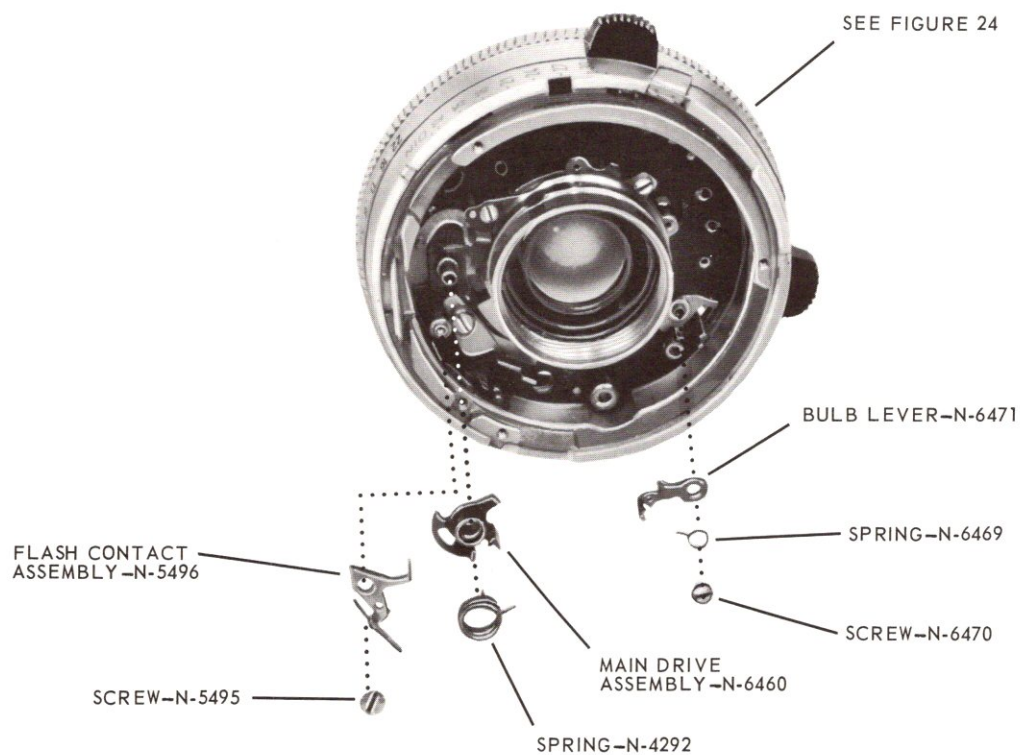


FIGURE 23

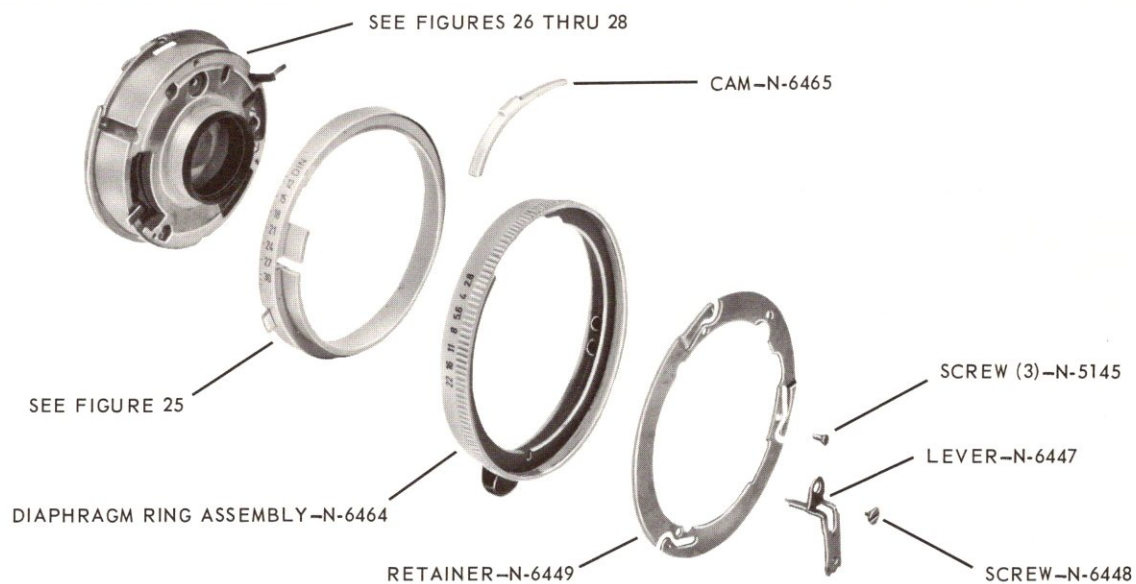


FIGURE 24



FIGURE 25

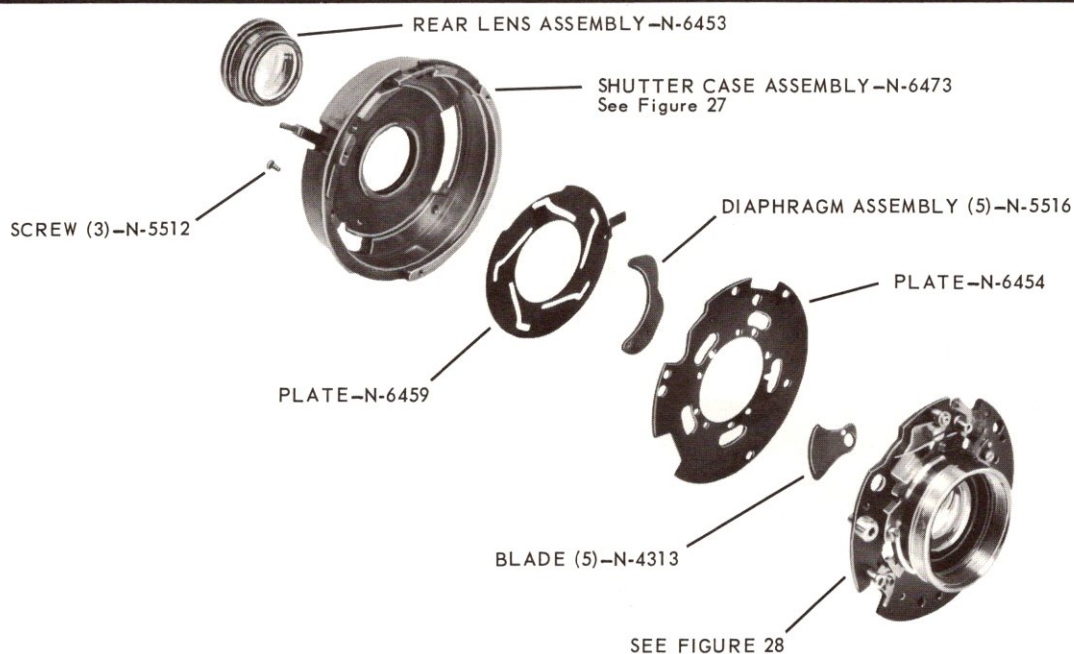


FIGURE 26

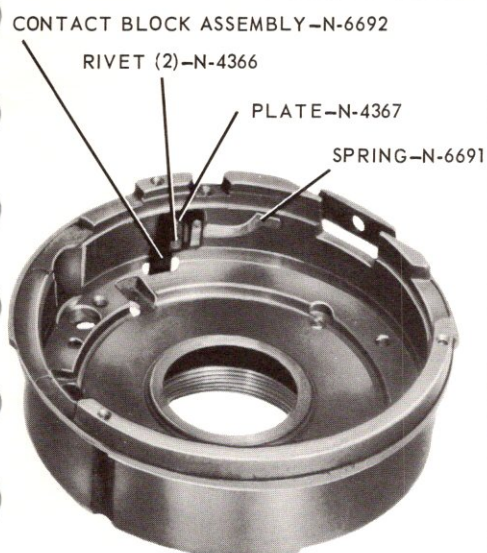


FIGURE 27 SHUTTER CASE ASSEMBLY—N-6473

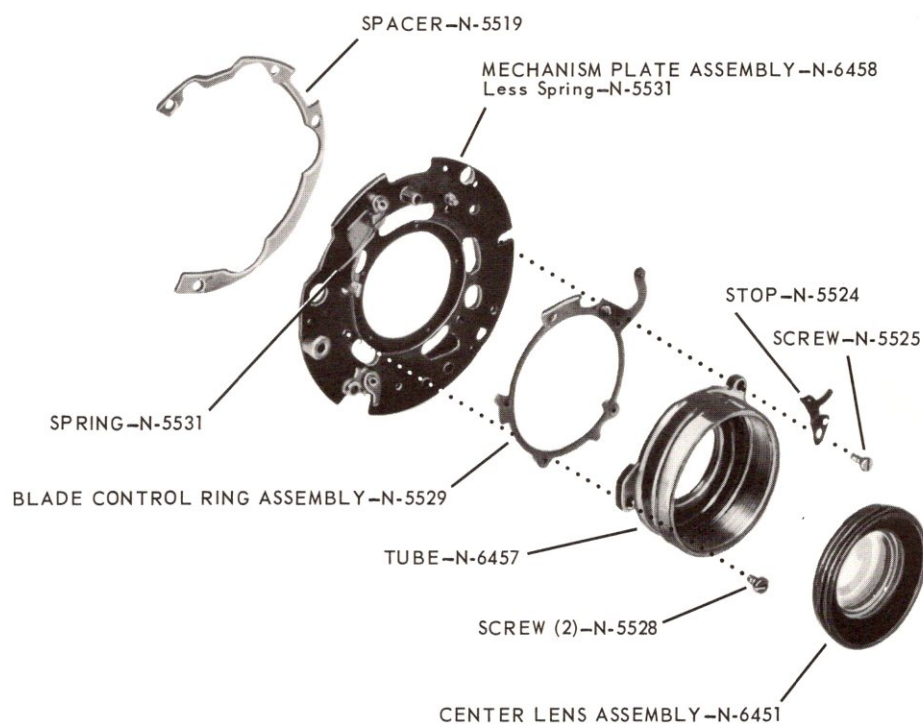


FIGURE 28

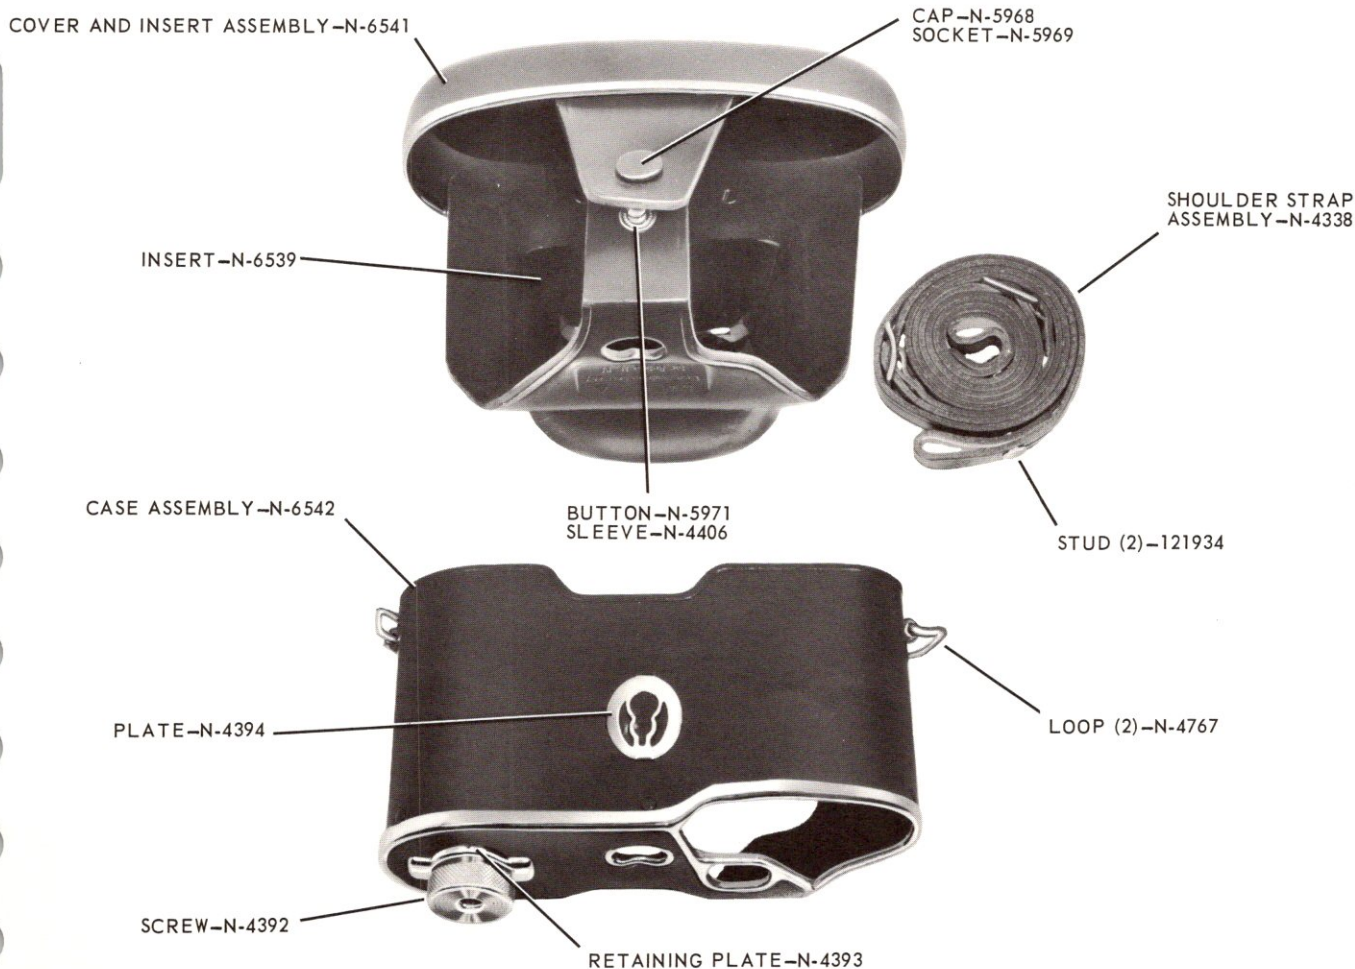


FIGURE 29 KODAK RETINA FIELD CASE, Model D

Part No.	Part Name	Fig.	Part No.	Part Name	Fig.
PX13	Battery - Mercury (Listed in KODAK Price Catalog).	8	N-4921	Roller - Film	5
N-2222	Screw - Strap bracket to case(Left).	9	N-4937	Screw - Movable arm assembly lens frame.	7
N-2252	Screw - Front cap assembly.	9	N-4939	Screw - Movable arm assembly lens bracket.	7
N-2426	Washer - Tension.	7	N-4943	Beam Splitter - Rangefinder.	7
N-2470	Screw - Top housing (Right).	1	N-4944	Mirror - Rangefinder transparent.	7
N-2617	Spring - Rewind release dog.	8	N-4945	Screw - Mirror holder	7
N-2618	Pressure Pad Assembly	5	N-4958	Screw - Rangefinder mask.	7
N-2640	Washer - Spacer, .004.	9	N-4960	Washer - Movable arm assembly	7
N-2675	Washer - Rewind release button	8	N-4972	Rivet - Body release lever.	12
N-2677	Screw - Back hinge.	4	N-4977	Screw - Front Assembly to case.	10
N-2699	Screw - Back latch plate	14	N-4978	Bushing - Insulating	9
N-2717	Spring - Tension pad.	5	N-4987	Screw - Meter to front	11
N-2722	Rivet - Back assembly strip.	5	N-5181	Gear - Winding shaft.	13
N-2724	Washer - Film indicator pointer tension	1	N-5325	Cover - Case (Right).	2
N-2742	Dial - Index counter	8	N-5326	Covering - Case (Left)	2
N-2875	Screw - Rewind knob assembly.	1	N-5336	Screw - Accessory clip.	3
N-4051	Screw - Top housing (Left).	1	N-5349	Screw - Rangefinder to case.	6
N-4064	Washer - Counter setting button	3	N-5352	Plate - Frame support assembly (.012)	7
N-4099	Screw - Base plate to front	9	N-5353	Plate - Frame support assembly (.002)	7
N-4117	Screw - Rangefinder movable arm assembly bearing	7	N-5354	Plate - Frame support assembly (.004)	7
N-4118	Bearing - Rangefinder movable arm assembly	7	N-5357	Screw - Movable arm assembly spring retaining	7
N-4180	Ring - Tripod socket.	8	N-5361	Shutter Cocking Shaft Assembly	10
N-4181	Spring - Back latch button guard.	8	N-5369	Gear - Idler	12
N-4182	Screw - Tripod socket.	8	N-5394	Pin - Guide.	9
N-4183	Socket - Tripod	8	N-5409	Plate - Setting rack retaining.	9
N-4184	Bearing - Tripod socket	8	N-5417	Screw - Winding lever assembly.	8
N-4194	Spring - Back latch.	14	N-5418	Gear - Drive.	13
N-4197	Stud - Back catch guide.	16	N-5419	Spring - Winding shaft pawl.	13
N-4212	Screw - Winding shaft gear	13	N-5420	Cam - Winding shaft.	13
N-4219	Button - Rewind release	8	N-5421	Pawl - Winding shaft cam	13
N-4220	Film Sprocket Shaft Assembly	15	N-5422	Washer - Winding shaft.	13
N-4221	Sprocket - Film.	15	N-5431	Screw - Transmission lever adjusting.	10
N-4222	Screw - Drive gear pawl.	15	N-5432	Pawl - Drive gear	15
N-4225	Spacer - Drive gear pawl.	15	N-5433	Dog - Rewind release	8
N-4226	Screw - Setting rack guide (shoulder dia. .119)	15	N-5434	Screw - Rewind release dog.	8
N-4238	Catch - Back assembly	5	N-5436	Bushing and Drive Gear Assembly.	15
N-4239	Rivet - Film pad spring.	5	N-5437	Spring - Drive gear pawl.	15
N-4242	Washer - Spacer, .002.	9	N-5439	Screw - Winding shaft to case.	15
N-4321	Screw - Tripod socket ring	8	N-5442	Pin - Guide.	16
N-4322	Guard - Back latch button	8	N-5443	Back Latch Assembly	14
N-4325	Spring - Rewind release button.	8	N-5450	Spring - Body release lever pressure.	10
N-4354	Gear - Clutch	15	N-5454	Rivet - Transmission lever	16
N-4355	Spring - Clutch	15	N-5458	Back Hinge Assembly	5
N-4356	Clutch	15	N-5533	Strip - Back assembly.	5
N-4412	Screw - Setting rack guide (shoulder dia. .130).	15	N-5538	Screw - Front assembly to case	10
N-4530	Covering - Winding lever assembly.	8	N-5594	Spring - Follower plate.	11
N-4545	Rivet - Hinge.	5	N-5680	Covering - Back assembly.	5
N-4613	Plate - Hinge.	5	N-5702	Screw - Rewind post bearing	9
N-4617	Screw - Setting rack retaining plate.	9			
N-4734	Bracket - Strap (Right)	9			
N-4822	Back Assembly	4			

Always give PART NUMBER and NAME when ordering parts

Part No.	Part Name	Fig.	Part No.	Part Name	Fig.
N-5703	Mount - Eyepiece	3	N-6379	Finder Frame Assembly (Inner) . . .	4
N-5704	Spring - Eyepiece mount tension . .	3	N-6380	Rangefinder Assembly	6
N-5719	Counter - Index dial	8	N-6381	Panel - Masking	7
N-5720	Ratchet - Index dial counter	8	N-6382	Frame - Rangefinder housing	7
N-5721	Washer - Index dial counter ratchet tension	8	N-6383	Rangefinder Collimator Mount Assembly	7
N-5723	Spring - Tension lever	8	N-6384	Rangefinder Movable Arm Assembly	7
N-5725	Film Advance Lock Assembly	8	N-6385	Rangefinder Adjusting Arm Assembly	7
N-5726	Spring - Film advance lock assembly pressure	8	N-6386	Spring - Movable arm assembly . .	7
N-5727	Screw - Index dial counter	8	N-6387	Frame Support Assembly	7
N-5758	Spring - Winding release lever . . .	14	N-6388	Spring - Rangefinder mirror	7
N-5767	Plate - Back latch	14	N-6389	Holder - Rangefinder mirror	7
N-5785	Screw - Collar	10	N-6390	Mask - Rangefinder eyelet lens . . .	7
N-5847	Winding Shaft Assembly	15	N-6391	Lens - Rangefinder collimator . . .	7
N-5848	Spool - Take-up	15	N-6392	Lens - Rangefinder eyelet	7
N-5853	Window - Finder	4	N-6393	Screw - Rangefinder adjusting . . .	7
N-5859	Rivet - Shutter setting gear	12	N-6394	Lens - Movable arm assembly	7
N-5989	Screw - Sprocket shaft	15	N-6395	Bottom Assembly	8
N-5992	Name Plate	2	N-6396	Counter Advance Slide Assembly . .	8
N-6005	Winding Lever Assembly	8	N-6397	Slide - Film advance lock assembly .	8
N-6057	Pin - Insulating	9	N-6398	Covering - Bottom assembly	8
N-6060	Guard - Flash	1	N-6399	Bracket - Strap (Left)	9
N-6062	Pointer- Film indicator	1	N-6400	Tube - Insulating	9
N-6063	Rewind Knob Assembly	1	N-6401	Front Frame Assembly	9
N-6064	Flash Socket Assembly	1	N-6402	Front Cap Assembly	9
N-6066	Cap - Battery	8	N-6403	Setscrew - Insulating bushing . . .	9
N-6067	Bearing - Rewind post	9	N-6404	Sleeve - Body release assembly guide	10
N-6068	Post - Rewind	9	N-6405	Lever - Transmission	10
N-6069	Spring - Rewind post detent	9	N-6406	Screw - Transmission lever	10
N-6070	Extension - Rewind post	9	N-6407	Tunnel - Light	10
N-6073	Battery Contact Assembly	16	N-6408	Rack - Setting	10
N-6074	Spring - Rewind knob	2	N-6409	Body Release Assembly	10
N-6088	Frame - Top	9	N-6410	Scanning Pin Assembly	11
N-6090	Screw - Meter support plate	11	N-6411	Cord - Retaining	11
N-6236	Rivet - Back liner plate	5	N-6412	Plate - Exposure meter support . .	11
N-6359	Collar - Shutter retaining	6	N-6413	Front Assembly	11
N-6360	Shutter Complete	6	N-6414	Washer - Spacer	11
N-6361	Reflector Cover Assembly	1	N-6415	Washer - Spacer	11
N-6362	Top Housing Assembly	1	N-6416	Roller - Eccentric rivet	12
N-6363	Exposure Meter Assembly	11	N-6417	Pin - Clutch coupling	12
N-6364	Plate - Insulating	1	N-6418	Gear - Shutter setting	12
N-6365	Plate - Reflector base	1	N-6419	Support Assembly	12
N-6366	Spring - Reflector cover assembly .	1	N-6420	Release Lever Assembly	12
N-6367	Screw - Reflector base plate to case	1	N-6421	Body Release Lever Assembly . . .	12
N-6368	Washer - Flash socket assembly . .	1	N-6422	Rivet - Support assembly	12
N-6369	Pin - Reflector base plate hinge . .	1	N-6423	Screw - Positioning	12
N-6370	Bushing - Rewind knob	3	N-6424	Button - Release lever assembly . .	12
N-6371	Clip - Accessory	3	N-6425	Insert - Body release lever assembly	11
N-6372	Button - Counter setting	3	N-6426	Screw - Winding release adjusting .	14
N-6373	Bushing - Counter setting button . .	3	N-6427	Winding Release Assembly	14
N-6374	Plate - Finder reinforcement	3	N-6428	Spring - Winding release pressure .	14
N-6375	Retainer - Finder window	3	N-6429	Wire - Contact	15
N-6376	Window - Eyepiece mount	3	N-6430	Case Assembly	15
N-6377	Washer - Counter setting button tension	3	N-6431	Rivet - Bearing	16
N-6378	Frame - Finder	4	N-6432	Bushing - Transmission lever . . .	16
			N-6433	Lever - Transmission	16
			N-6434	Screw - Setting rack retaining plate.	9

Part No.	Part Name	Fig.	Part No.	Part Name	Fig.
Compur Shutter			N-6448	Screw - Delayed action lever	24
N-4292	Spring - Main drive	23	N-6449	Retainer - Diaphragm ring.	24
N-4296	Screw - Retard gear train (Short) . .	22	N-6451	Center Lens Assembly	28
N-4297	Screw - Retard gear train (Long) . .	22	N-6453	Rear Lens Assembly.	26
N-4299	Screw - Delayed action gear train. .	22	N-6454	Plate - Diaphragm retaining.	26
N-4313	Shutter Blade Assembly.	26	N-6455	Retard Gear Train Assembly	22
N-4366	Rivet - Contact block to case	27	N-6456	Ring - Speed index	20
N-4367	Plate - Contact black retaining. . .	27	N-6457	Tube - Shutter.	28
N-4912	Screw - Focus mount ring	18	N-6458	Mechanism Plate Assembly	28
N-5083	Ball - Speed ring detent.	20	N-6459	Plate - Diaphragm actuating.	26
N-5145	Screw - Diaphragm ring retainer . .	24	N-6460	Main Drive Assembly	23
N-5474	Screw - Rangefinder cam.	18	N-6461	Screw - ASA scale	25
N-5478	Setscrew - Depth of field ring. . . .	19	N-6462	Ring - Speed control ring.	20
N-5484	Retainer.	20	N-6463	Exposure Meter Cam Ring Assembly	25
N-5485	Screw.	20	N-6464	Diaphragm Ring Assembly.	24
N-5488	Retainer - Speed control ring. . . .	20	N-6465	Cam - Exposure meter actuating pin	24
N-5495	Screw - Flash contact.	23	N-6466	Scale - ASA.	25
N-5496	Flash Contact Assembly	23	N-6467	Setting Shaft Assembly	20
N-5512	Screw - Shutter case to mechanism plate.	26	N-6468	Trigger and Spring Assembly.	22
N-5516	Diaphragm Wing Assembly.	26	N-6469	Spring - Bulb lever.	23
N-5519	Spacer - Ring	28	N-6470	Screw - Bulb lever.	23
N-5524	Stop - Main drive.	28	N-6471	Lever - Bulb.	23
N-5525	Screw - Main drive stop	28	N-6472	Delayed Action Gear Train Assembly	22
N-5528	Screw - Tube to mechanism plate . .	28	N-6473	Shutter Case Assembly	26
N-5529	Blade Control Ring Assembly.	28	N-6691	Spring - Contact block	27
N-5531	Spring - Flash contact actuating lever	28	N-6692	Contact Block Assembly	27
N-5786	Spring - Speed ring detent ball . . .	20	KODAK RETINA Field Case, Model D		
N-6435	Ring - Focus mount	18	121934	Stud - Shoulder strap	29
N-6436	Retainer.	17	N-4338	Shoulder Strap Assembly.	29
N-6437	Mount - Focus.	18	N-4392	Screw - Camera retaining.	29
N-6438	Setscrew - Front lens assembly . .	19	N-4393	Plate - Camera retaining screw . .	29
N-6439	Screw - Stop	17	N-4394	Plate - Snap button stud catch. . . .	29
N-6440	Screw - Cam.	18	N-4406	Sleeve - Snap button post.	29
N-6441	Cam - Rangefinder.	18	N-4767	Loop - Strap	29
N-6442	Front Lens Assembly	19	N-5968	Cap - Snap button.	29
N-6443	Guard - Dust.	19	N-5969	Socket - Snap button cap	29
N-6444	Screw - Cover plate	19	N-5971	Button - Snap.	29
N-6445	Plate - Cover	19	N-6539	Insert - Case cover	29
N-6446	Ring - Depth of field.	19	N-6541	Cover and Insert Assembly	29
N-6447	Lever - Delayed action	24	N-6542	Case Assembly	29

Always give PART NUMBER and NAME when ordering parts

PAID

AUG 17 1965

WESTERN N. Y. CAMERA

EASTMAN KODAK COMPANY • ROCHESTER, NEW YORK 14650