

SHEET-GELATIN-FILTER-HOLDERS

Sheet-Gelatin-Filter-Holders I (for sheet size 50 x 50 mm)

a Basic Design

Sheet Gelatin Filter Holder I with magnetic ring for 50 x 50 mm sheets

b Intermediate Ring Ic and If

c Side Light Lens Hood No. 24/3

Not usable for lenses marked by asterisk

Will mount:	On Lens Type		Filter thread
1. without intermediate ring	Xenar	3,5/100	M 40,5 x 0,5
	Xenar	4,5/150	M 40,5 x 0,5
	Symmar-S	5,6/100	M 40,5 x 0,5
2. with intermediate ring If	G-Claron	9/150	M 35,5 x 0,5
3. with intermediate ring Ic preformed	Showing a small bore hole this ring facilitates own adaptation by user to the lens types of other filter thread.		

Sheet-Gelatin-Filter-Holders II (for sheet size 100 x 100 mm)

a Basic Design

Sheet Gelatin Filter Holder II with magnetic ring for 100 x 100 mm sheets

b Intermediate Rings IIa — IIm

c Side Light Lens Hood No. 56

Not usable for lenses marked by asterisk

Will mount:	On Lens Type		Filter thread
1. without intermediate ring	Symmar-S	5,6/210 *	M 77 x 0,75
	Xenotar	2,8/150 *	M 77 x 0,75
	Super-Angulon	8/121 *	M 77 x 0,75
	G-Claron	9/355 *	M 77 x 0,75
2. with intermediate ring IIa	Xenotar	2,8/80	M 49 x 0,75
	Symmar-S	5,6/135	M 49 x 0,75
	Super-Angulon	5,6/47 *	M 49 x 0,75
	Super-Angulon	8/65 *	M 49 x 0,75
	Super-Angulon	8/75 *	M 49 x 0,75
	G-Claron	9/210	M 49 x 0,75
3. with intermediate ring IIb preformed	Xenotar	2,8/100	M 58 x 0,75
	Symmar-S	5,6/150	M 58 x 0,75
	Xenar	4,5/210	M 58 x 0,75
	G-Claron	9/270	M 58 x 0,75
4. with intermediate ring IIc	Symmar-S	5,6/180 *	M 67 x 0,75
	Tele-Arton	5,6/250	M 67 x 0,75
	Tele-Xenar	5,5/360	M 67 x 0,75
	Super-Angulon	5,6/65 *	M 67 x 0,75
	Super-Angulon	5,6/75 *	M 67 x 0,75
	Super-Angulon	8/90 *	M 67 x 0,75
	G-Claron	9/305	M 67 x 0,75
5. with intermediate ring IIk	G-Claron	9/240	M 52 x 0,75
6. with intermediate ring IIl	G-Claron	9/150	M 35,5 x 0,5
7. with intermediate ring IIm	Comparon	4,5/135	M 40,5 x 0,5
	Xenar	4,5/150	M 40,5 x 0,5
8. with intermediate ring II d	Showing a small bore hole this ring facilitates own adaptation by user to the lens types of other filter thread.		

Sheet-Gelatin-Filter-Holders III (for sheet size 150 x 150 mm)

a Basic Design

Sheet Gelatin Filter Holder III with magnetic ring for 150 x 150 mm sheets

b Intermediate Rings IIIa — IIIj

c Side Light Lens Hood No. 60

Not usable for lenses marked by asterisk

Will mount:	On Lens Type		Filter thread
1. without intermediate ring	Super-Angulon	8/210 *	M 127 x 1
2. with intermediate ring IIIa	Super-Angulon	5,6/90 *	M 82 x 0,75
3. with intermediate ring IIIb preformed	Symmar-S	5,6/240	M 86 x 1
4. with intermediate ring IIIc	G-Claron WA	11/210 *	M 102 x 1
5. with intermediate ring III d	Symmar-S	5,6/300	M 105 x 1
	Super-Angulon	8/165 *	M 105 x 1
6. with intermediate ring IIIe	Symmar-S	6,8/360	M 120 x 1
7. with intermediate ring IIIg	Tele-Arton	5,5/360	M 95 x 1
8. with intermediate ring IIIj	G-Claron WA	11/240 *	M 110 x 1
6. with intermediate ring III f	Showing a small bore hole this ring facilitates own adaptation by user to the lens types of other filter thread.		




Schneider
OPTICAL ACCESSORIES

SHEET-GELATIN-FILTER-HOLDERS

Thin gelatin filters have become a popular aid for precise color balancing in ordinary color photography and process work. These filters are available in a wide range of colors and shades. Moreover, they are budget-priced and will not degrade image quality. Small wonder then that modern photography and the graphic arts are unthinkable without them — above all since their use has been greatly facilitated by the practical and versatile SCHNEIDER gelatin-filter holders. The latter guarantee easy and speedy work with any square gelatin filter on the market.

To suit the wishes of professional photographers who have been calling for a practical, quick and reliable means of mounting gelatin filters, the filter holders consist of two parts: a MAGNETIC RING and the FILTER HOLDER proper. The magnetic ring is screwed into the internal thread of the lens either directly or with an adapter. One or several gelatin filters are inserted into the filter holder and the latter held against the magnetic ring which securely holds them in place. And that's it!

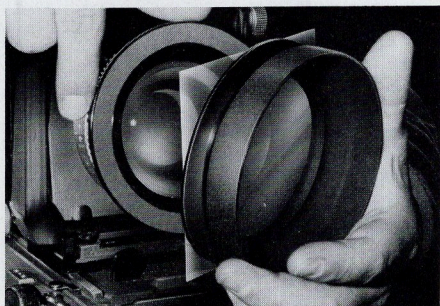

Filters can be rapidly exchanged without screwing or locking. In spite of this, they are held in place reliably, perfectly flat, free from strain and with maximum care. The specially designed glare shield positively avoids vignetting even when full use is made of camera movements.

Size I is designed for 5 x 5 cm² gelatin filters,

Size II for 10 x 10 cm² filters, and

Size III for 15 x 15 cm² filters.

The tables overleaf indicate the type of filter holder and adapter suited for the different SCHNEIDER lenses. For lenses whose filter thread cannot be found in the tables, a special adapter is available for any size of filter holder, which can easily be provided with a suitable thread by any mechanic.



Jos. Schneider & Co., Optische Werke, D-655 Bad Kreuznach
☎ 0671/ 6011 ✉ 947 📠 042800

