

Nikon

FV2

INSTRUCTION MANUAL

NOMENCLATURE

① Shutter speed/ASA/ISO film speed ring

② Shutter release button

③ Shutter release fingerguard

④ Neckstrap eyelet

⑤ Depth-of-field preview lever

⑥ Self-timer lever

⑦ Lens mounting flange

⑧ Film advance lever

⑨ Ready-light

⑩ Viewfinder eyepiece

⑪ Rewind fork

⑫ Shutter curtains

⑬ Film cartridge chamber

⑭ Film guide pin

⑮ Film guide rails

ADR window ⑮

Meter coupling lever ⑮

Sync cord terminal ⑮

Lens mounting index ⑮

Focusing screen release latch ⑮

Lens release button ⑮

Reflex mirror ⑮



Film sprockets ⑮

Serial number ⑮

Film takeup spool ⑮

Film anti-curl roller ⑮

Locking catch ⑮

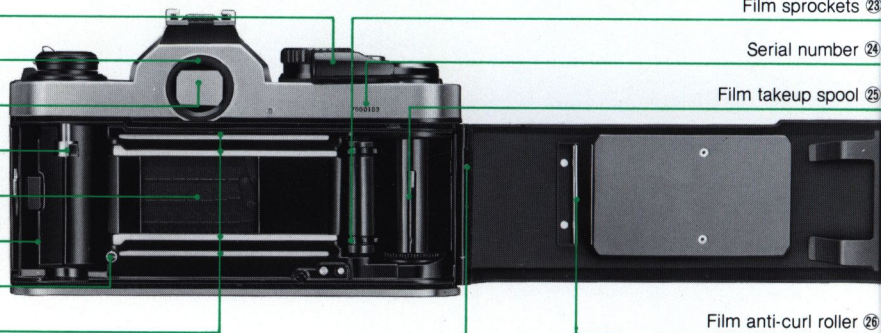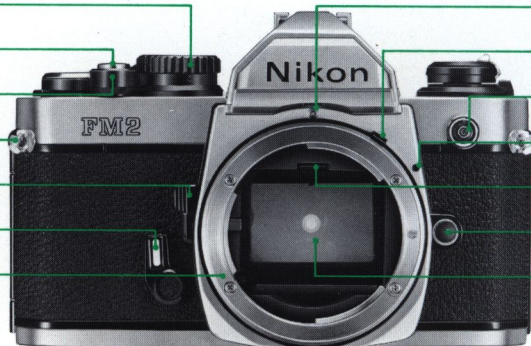

28 Depth-of-field indicators / Lens mounting ring

29 Aperture/Focusing index

30 Infrared compensation index

31 Meter coupling shoe

32 Meter coupling ridge

33 Hot-shoe contact

34 Ready-light contact

35 Accessory shoe

36 Camera back lock lever

37 Film rewind knob

38 Film rewind crank

39 Film plane indicator

40 Motor drive shutter coupling

41 Motor drive coupling

42 Film rewind button

43 Memo holder

Distance scale 44

Focusing ring 45

Aperture scale 46

Aperture ring 47

ADR scale 48

Shutter speed index 49

Shutter speed dial 50

Multiple exposure lever 51

Frame counter 52

ASA/ISO film speed indicator 53

ASA/ISO film speed dial 54

Tripod socket 55

Motor drive electrical contacts 56

Battery chamber lid 57

Film pressure plate 58

Camera back 59



CONTENTS


NOMENCLATURE	2—3
FOREWORD	5
BASIC OPERATION	6—15
CONTROLS IN DETAIL	16—35
Film advance lever.....	16
Frame counter.....	16
Shutter release button.....	17
ASA/ISO film speed dial.....	18
Shutter speed dial/exposure determination.....	18—25
Setting the shutter speed.....	18—19
Setting the aperture.....	20
Exposure determination.....	21
Exposure display.....	21
Metering range of exposure meter.....	22
Stop-down exposure measurement.....	23
Exposure measurement in special cases.....	24
Duplication work and photomicrography.....	25
Viewfinder/viewing & focusing.....	26—27
Depth-of-field preview lever.....	28—30
Self-timer lever.....	30
Multiple exposure lever.....	31
Memo holder.....	32
Infrared compensation index.....	32
Flash photography.....	33—35
Ready-light.....	34—35

ACCESSORIES	36—44
Interchangeable focusing screens.....	36—37
Close-up equipment.....	38
Motor Drive MD-12.....	39
Nikon Speedlights.....	40
Data Back MF-12.....	41
Battery Holder DB-3.....	41
Camera Case Base Portion CF-15D.....	41
Anti-Cold Battery Pack DB-2.....	42
Right-Angle Viewing Attachment DR-3.....	42
Eyepiece Magnifier DG-2.....	42
Rubber eyecup.....	42
Eyepiece correction lenses.....	42
Cable Release AR-3.....	42
Filters.....	43
Lens hoods.....	43
Camera cases.....	44
Neckstraps.....	44
Compartment cases.....	44
TIPS ON BATTERY USE	45
TIPS ON CAMERA CARE	46—47
SPECIFICATIONS	48—49
IMPORTANT!	50

FOREWORD


Welcome to the FM2's unique world of photography! With an unprecedented maximum shutter speed of 1/4000 sec., your camera is the fastest SLR available today. This feature is complemented by a flash synchronization speed of 1/200 sec., the fastest available in 35mm photography. That's because the FM2 uniquely uses semi-beehive-etched, vertical-traveling, titanium mechanical shutter curtains. Other creativity-enhancing features are the wide ASA/ISO range of 12 to 6400, interchangeable focusing screens, the built-in LED ready-light as well as capability for multiple-exposure and motor drive photography. Additionally, the FM2 has a battery power-saving feature: a light touch of the lockable shutter release button activates the meter and the LED exposure display system, which automatically switches off some 30 seconds later. To obtain the best results with the FM2, be sure to keep this instruction manual handy until you've fully mastered operation—just a few minutes for many years of rewarding photography.

BASIC OPERATION

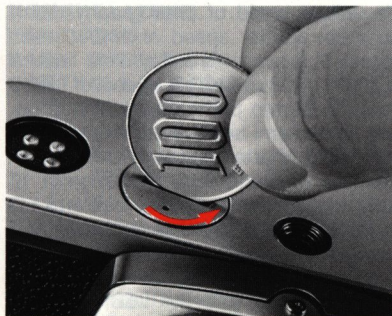

1. Remove the battery chamber lid 57.

Use a coin to unscrew the lid in a counter-clockwise direction.

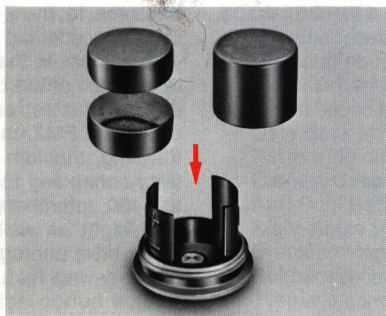


2. Install the battery.

Put the battery supplied with the camera in, "+" sign up, making sure you do not touch the battery poles. Insert the battery into the battery clip, ensuring that the "-" sign touches the inside of the battery chamber clip. Usable batteries:

- 3V lithium battery (1 unit)
- 1.55V silver-oxide batteries, 3.1V, (2 units)
- 1.5V alkaline-manganese batteries, 3V, (2 units)


Caution: Keep batteries away from infants and small children. In case a battery is accidentally swallowed, call a doctor immediately as the material inside the batteries can cause serious problems.

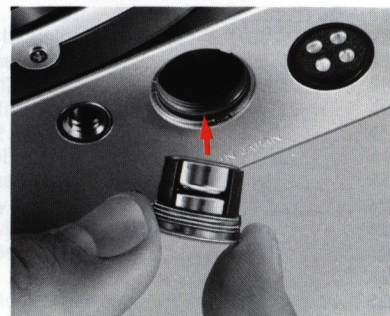

3. Put the battery chamber lid back in its place.


Slip the battery clip back into the camera body baseplate and screw it clockwise tightly into place.

Note: For more information on batteries, refer to page 45.

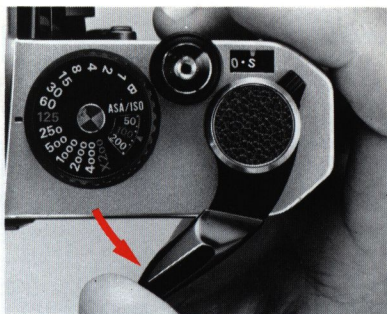


4. Pull out the film advance lever ⑧ to unlock the shutter release button ②.

The film advance lever doubles as a shutter release button lock. You can unlock the shutter release button by simply pulling out the film advance lever slightly from the flush to the standoff position.

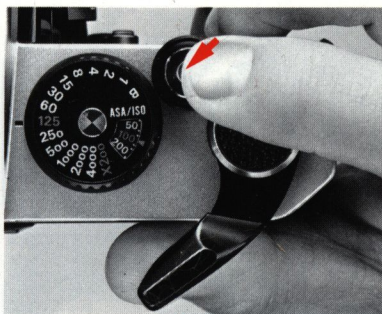

5. Press the shutter release button lightly to switch the exposure meter on.

The shutter release button activates the exposure meter when lightly pressed. The meter itself stays on for approx. 30 sec. after you have taken your finger off the button.

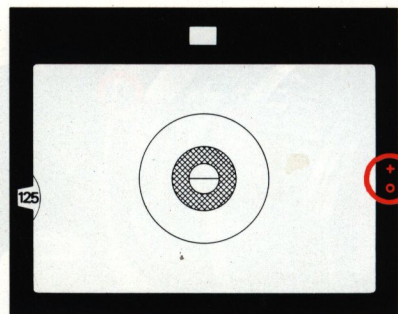


6. Check battery power.

Switch the exposure meter on while looking through the viewfinder. If one or two of the red LED exposure indicator lamps inside lights up, this would mean normal condition.

Note: When the shutter speed dial ⑤ is on B (bulb) or X200 (1/200 sec.), none of the exposure indicator lamps will light up. Be sure to set the dial at another position. If none of the exposure indicator lamps light up, either the battery is improperly installed—in which case you should install it properly—or battery power is not sufficient, in which case you should change the battery.

BASIC OPERATION—continued

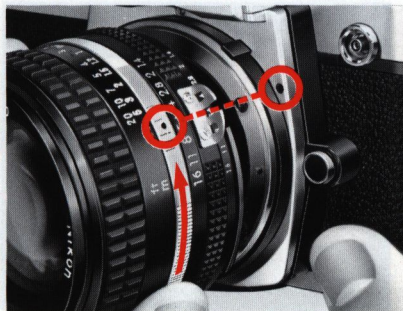

7. Mount the lens onto the camera.

Place the lens onto the camera, lining up the aperture/focusing index ⑲ on the lens with the lens mounting index ⑱ on the camera body. Then twist the lens mounting ring ⑳ counterclockwise until it clicks into place. Confirm that the aperture/focusing index is right on top.


To remove: Push the lens release button ㉑ and turn the lens mounting ring clockwise until the lens comes off.

Note: When changing lenses with film loaded in the camera, be careful not to expose the mirror box to direct sunlight.



8. Open the camera back ⑤⑨


Push the camera back lock lever ⑤⑨ counterclockwise with your index finger while lifting the film rewind knob ⑤⑦. The camera back will pop open.

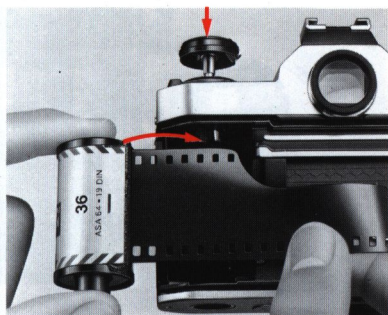

9. Install the film cartridge.

Position the film cartridge in the film cartridge chamber 13 with the film leader pointing towards the takeup spool 25, and push the rewind knob back down to secure it in place.

Note: You can use any of the 35mm film cartridges available on the market. It is advisable to handle film in the shade to avoid direct exposure to sunlight.

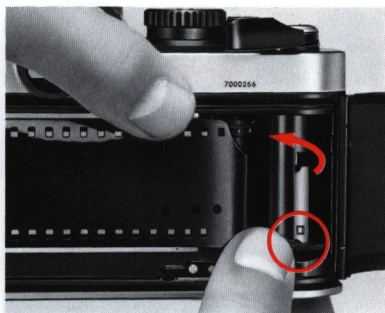

10. Insert the film leader in the takeup spool.

Pull the leader across gently and insert it into one of the slots in the film takeup spool. Slowly rotate the takeup spool inwards with your thumb, making sure the latch in the slot engages the first or second perforation along the side of the film leader.



11. Wind the film advance lever to advance film onto the takeup spool.


Wind the film advance lever and depress the shutter release button until the film sprockets 23 engage the perforations on the edges of the film. Make sure you wind the lever fully until it comes to a stop.

BASIC OPERATION—continued




12. Close the camera back.

Close the camera back until it snaps shut, making sure that the perforations are perfectly meshed with the sprockets and that the film is set between the film guide rails ⑮.

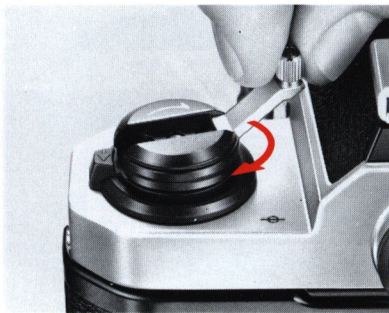

13. Take up film slack.



Fold out the film rewind crank ⑳ and rotate it in the direction of the arrow on the film rewind knob until it stops. Then fold the crank back in.

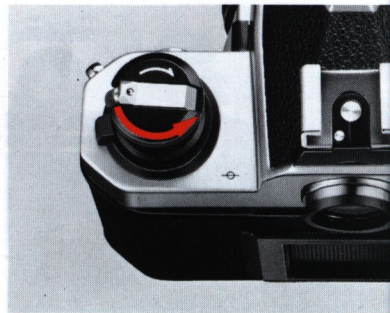

14. Make blank exposures until the frame counter ⑤2 indicates the first frame.*


Press the shutter release button and wind the film advance lever until the frame counter indicates the first frame.* As you wind the lever, confirm that the film rewind knob rotates counterclockwise. This indicates the film has been loaded and is being advanced correctly. If the knob fails to rotate, reload the film cartridge.

*The white dot between 0 and 2.

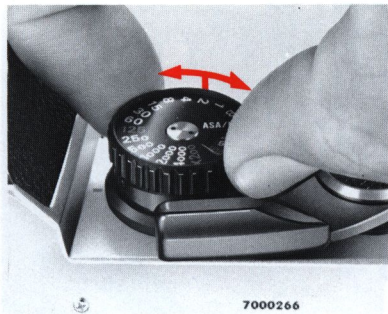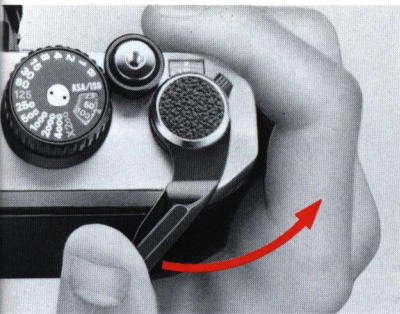

15. Set the ASA/ISO film speed.




Lift the ASA/ISO film speed ring ① and rotate it in either direction until the red ASA/ISO film speed indicator ③ is opposite the ASA/ISO film speed indication in use. Unless the film speed is set correctly, you cannot obtain correct exposure. For film speeds not indicated in the ASA/ISO film speed dial ④, refer to page 18.

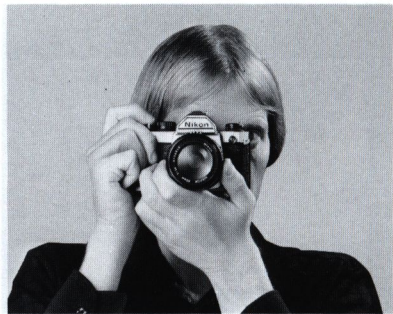

16. Hold the camera and point it at the subject.

Basic holding posture: Use your left hand to cradle the camera, with your fingers wrapped around the lens and the elbow propped against your body for support, as you look through the viewfinder. Use your right hand's index finger to depress the shutter release button and your thumb to wind the film advance lever. Wrap the other fingers of your right hand around the camera body. You can adapt this basic posture to both horizontal and vertical format shooting. To hold the camera steady, it is advisable to lean on or against something strong and stable (e.g., a wall). Also, you can look through the viewfinder with the right or left eye, with the other eye closed or open.

BASIC OPERATION—continued

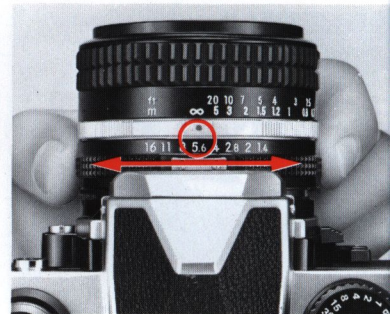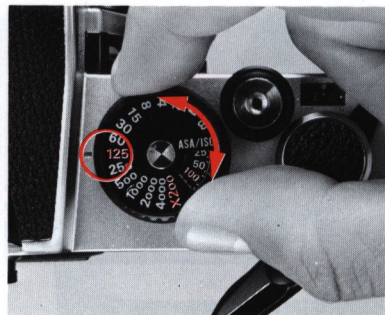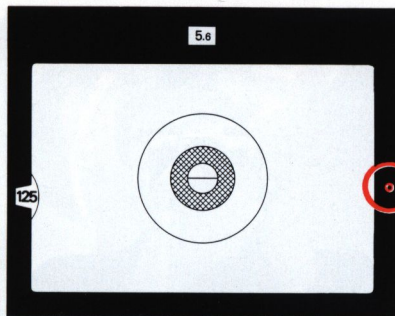

17. Set the correct exposure.

First, position your main subject at the center (i.e., the 12mm-diameter circle) of the field of view inside the viewfinder. Then turn the shutter speed dial ⑤ and/or lens aperture ring ④ until the LED lamp for the symbol for correct exposure ① lights up.

Important! Intermediate settings of lens aperture but not of shutter speed are usable.

Note: The meter reads the light over the entire focusing screen but has a distinct bias on the central 12mm-diameter area.



18. Focus on the subject by rotating the lens focusing ring ⁴⁵.

The FM2 is provided with the Type K focusing screen as standard. Look through the viewfinder while turning the focusing ring until the two halves of the split image rangefinder coincide perfectly to form a single unbroken image and the image in the microprism grid appears sharp. Correct focus will then be secured.




Out of focus




In focus

BASIC OPERATION—continued

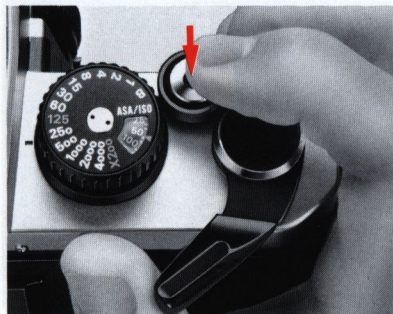


19. Depress the shutter release button.

Look through the viewfinder, and depress the shutter release button. In depressing the shutter release button, apply light but steady pressure with the ball of your index finger to avoid camera shake that might result in image blur.

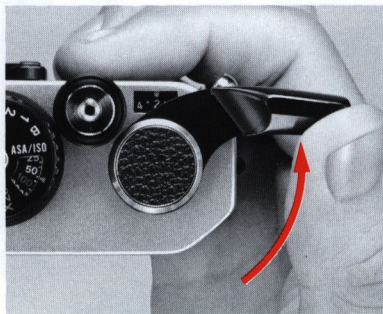

20. Advance the film.

Wind the film advance lever as far as it will go to transport the film to the next frame and ready the camera for the next shot. Do not apply excessive pressure in winding the lever. You cannot wind the lever when the film is at an end—you should then rewind the film.

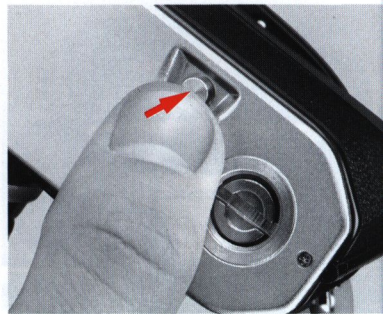


21. Press the film rewind button ④.

After the last exposure has been made, turn the camera upside down and press the film rewind button, so that the exposed film can be rewound back into its cartridge. You don't have to depress the button all the way.




22. Rewind the film.

Lift the film rewind crank and turn it in the direction of the arrow. At the end of film rewind, you will feel a slight resistance. Continue winding one or two more turns until the crank feels lighter; this will indicate that the film leader is now fully rewound into the cartridge.

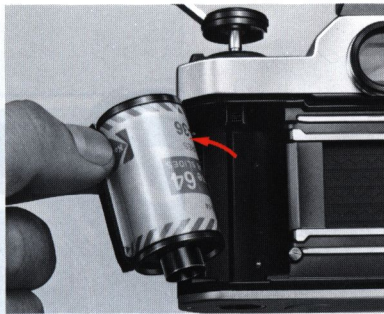

23. Remove the film cartridge.

Push the camera back lock lever in the direction of the arrow as you lift the film rewind crank to open the camera back. Take out the film cartridge. Avoid unloading film in direct sunlight.

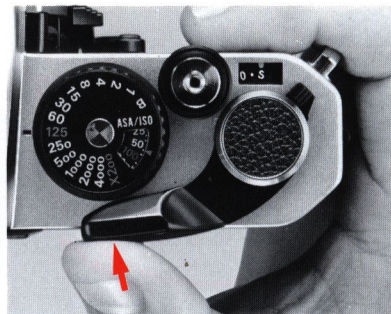


24. Put the film advance lever back into place.

Close the camera back and push the film advance lever into place. When you're not using the camera, you should set the film advance lever to this position which locks the shutter release button and keeps the exposure indicator lamps inside the viewfinder switched off even if the shutter release button is accidentally pressed.

Note: Even if the exposure indicator lamp is lit, it will automatically be switched off in approx. 30 sec., and the exposure measuring circuit will simultaneously be cut off.

CONTROLS IN DETAIL

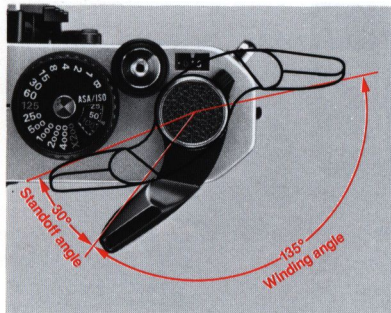


Film advance lever ⑧

The film advance lever also functions as a lock for the shutter release button. The shutter release button is unlocked when the lever is pulled out to the standoff position. To advance the film, wind the lever to the right all the way until it stops. It automatically returns to the standoff position the moment you take your thumb off it. A single, completed stroke of the lever advances the film by a single frame and simultaneously cocks the shutter.



Frame counter ⑤2

The additive frame counter, which starts from S, followed by 0, is graduated in even numbers from 2 to 36; odd numbers from 1 to 35 are indicated by white dots between even numbers. Even if there's no film in the camera, the frame counter is operative, advancing by a single frame every time the film advance lever is fully wound. After frame 36 of a 36-exposure roll of film, the counter will not operate even if you repeatedly press the shutter release button and wind the film advance lever; film will be advanced, however, until the actual end of the film roll. The counter is automatically reset to S when the camera back is opened.


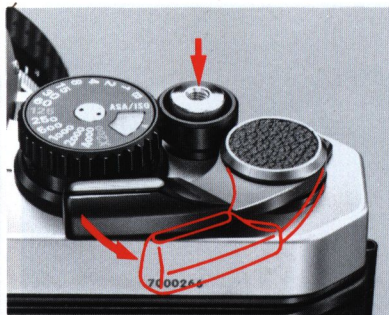


Shutter release button ②

The shutter release button also serves to activate the FM2's built-in exposure meter. When the film advance lever is in the flush position, the shutter release button is locked and will not operate. To release the button from its locked position, pull out the film advance lever to the standoff position. Slight pressure on the shutter release button will then switch on both the exposure meter and the LED exposure information display inside the viewfinder. The meter and the display remain on for approx. 30 sec. after the finger is removed from the button, after which they are automatically switched off to conserve battery power. Pressing the shutter release button all the way down releases the shutter. When you depress the button, touch the finger-guard ③ with the tip of your index finger and depress it lightly with smooth, even pressure. This makes shutter release operation smooth and stable. With a shutter speed of 1/30 sec. or

slower, it is advisable to attach the camera to a tripod and use a cable release to release the shutter; this will prevent camera shake which results in blurred photographs. The cable connector can be screwed into the hole at the center of the shutter release button. If the tripod has a large head, contact between the lens barrel and the head may make it impossible to turn the lens aperture ring. In this case, use the special tripod adapter supplied with the camera between the tripod head and the camera body.



CONTROLS IN DETAIL—continued

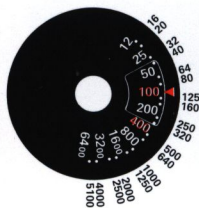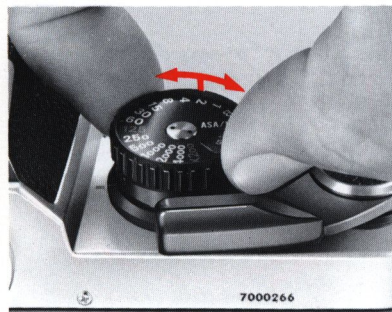

ASA/ISO film speed dial 54

The ASA/ISO scale on the dial has numbered settings for speeds from ASA/ISO 12 to 6400. The dots between each pair of ASA/ISO numbers stand for intermediate settings, such as 64, 80, etc. The illustration above gives the speeds for all intermediate settings. ASA/ISO 100 and 400 are indicated in red as they are used quite often.


ASA/ISO is a numerical rating of the film's sensitivity to a given amount of light. The higher the number, the greater the sensitivity, and vice versa. The ASA/ISO of your film is indicated on the cartridge itself. It is also printed on the film carton and on the data sheet packed inside.

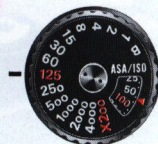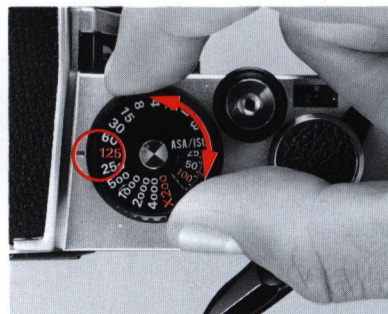

Shutter speed dial 50 / exposure determination

Setting the shutter speed

To set the shutter speed, turn the shutter speed dial to the right or left until the desired shutter speed number click-stops and is aligned with the shutter speed index 49. The dial has indications for B (bulb), for shutter speeds from 1 to 1/4000 sec. and for X200 (1/200 sec.; for automatic flash sync). On B, the shutter curtains 12 remain open for as long as the shutter release button is kept depressed. 1 is for indicating one second, 2 for 1/2 sec., 60 for 1/60 sec. and so on; X200 indicates 1/200 sec. One of the two adjoining numbers, excluding B and X200 is two times or 1/2 as much as the exposure amount of the other number. Note that shutter speeds between printed numbers (i.e., intermediate speeds) cannot be used. Since you can always confirm the shutter speed number inside the viewfinder, you don't have to see the shutter speed dial as you turn it.

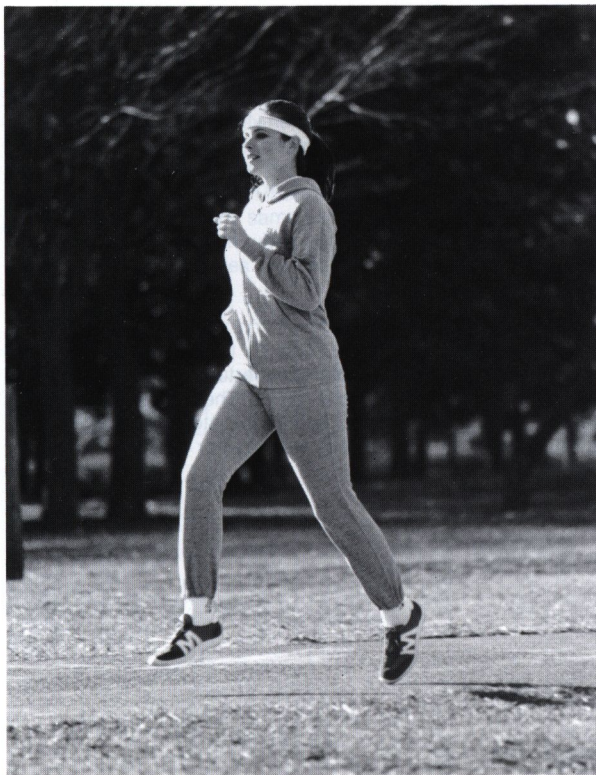


Fast shutter speed



Slow shutter speed

CONTROLS IN DETAIL—continued

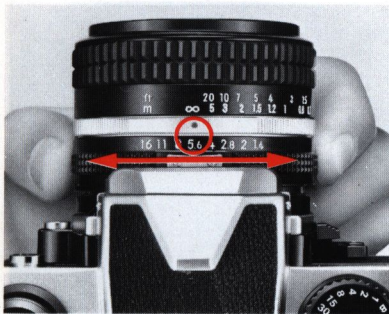

Setting the aperture

The lens aperture determines the amount of light reaching the film plane. Generally, when you turn the aperture ring one graduation in the direction of the larger numbers, the amount is reduced by 1/2. (This is what stopping down by one graduation means.) On the other hand, when the aperture ring is turned one graduation in the direction of smaller numbers, the amount of light is doubled. (This is known as opening the aperture by 1 stop.) The lens aperture ring clicks at the position of the numbers engraved although intermediate lens apertures are usable continuously. Lens aperture greatly affects depth of field (see page 28). With the exception of a few special lenses, Nikkor and

Nikon Series E lenses enable full-aperture light measurement even when the aperture ring is moved. These lenses, which are said to have an automatic diaphragm, stop down to the set aperture only at the instant the shutter release button is depressed.

Exposure determination

The amount of light reaching the film plane is determined by a combination of the shutter speed and the lens aperture. A shutter speed of 1/500 sec. lets in twice as much light as a setting of 1/1000 sec., and only half as much light as 1/250 sec. An aperture setting of f/11 lets in twice as much light as f/16, half as much as f/8. Thus, if the correct exposure for a particular picture-taking situation is 1/500 at f/11, then 1/250 at f/16 or 1/1000 at f/8 will give the same exposure. It is very convenient to know this interrelation when considering depth of field. The following table illustrates the interrelation between shutter speed and aperture.

Shutter speed (sec.)	1/4000	1/2000	1/1000	1/500	1/250
Aperture (f/number)	4	5.6	8	11	16

Exposure display

The LED exposure indicator lamps can be seen on the right side of the viewfield frame within the viewfinder. The shutter speed number and f/number in use are also visible. The LED exposure display indicates exposure five ways, as shown in the table below, in accordance with the conditions of each exposure.

+	Overexposure by more than 1 stop
+ o	Overexposure by 1/5 to 1 stop
o	Correct exposure
o -	Underexposure by 1/5 to 1 stop
-	Underexposure by more than 1 stop

As correct exposure is approached, the LED exposure display inside the viewfinder is liable to change rapidly and easily within the very narrow range, so it is important to turn the lens aperture ring and shutter speed dial carefully. Although intermediate shutter speeds cannot be used, intermediate lens apertures can—just turn the aperture ring for fine adjustment.

Note: When the shutter speed dial is set at B (bulb) or X200 (1/200 sec.), the LED exposure display inside the viewfinder is turned off.

CONTROLS IN DETAIL—continued

Metering range of exposure meter

When there is a proper combination of lens aperture and shutter speed, the meter lights up, indicating correct exposure. This sign will not light up when the aperture and shutter speed combination is not suitable for correct exposure. Also, if the combination of aperture and shutter speed is improper for the brightness of the subject, the exposure meter will not give an indication for correct exposure even if you vary the neighboring settings within a very narrow range. You should try altogether different combinations of aperture and shutter speed. If you still fail to obtain an indication for correct exposure, then subject brightness is

probably beyond the metering range of the exposure meter. It is necessary to illuminate the subject or to use an ND (neutral density) filter to adjust brightness. Note that in full-aperture measurement, the range of brightness that can be measured by the meter varies with the maximum f/number of the lens in use, as follows:

With a 50mm f/1.4 lens (1 sec. at f/1.4 and 1/1000 sec. at f/16) and ASA/ISO 100 film, the EV range is from EV1 to EV18

With a 135mm f/2.8 lens (1 sec. at f/2.8 and 1/1000 sec. at f/32) and ASA/ISO 100 film, the EV range is from EV3 to EV20

Stop-down exposure measurement

This exposure measurement method is used when the diaphragm on the lens does not link with the meter coupling lever ⑰ on the camera body, such as when a non-AI lens or an extension ring is mounted on the camera. The procedure is as follows:

- 1) Set the ASA/ISO number.
- 2) Compose your picture and secure subject focus.
- 3) Press the shutter release button lightly to turn the meter on.
- 4) Perform exposure measurement, depending on the type of lens used:

- Lens with automatic diaphragm

Determine the correct exposure while pressing the depth-of-field preview lever ⑤ , then take your finger off the lever and depress the shutter release button.

- Lens without automatic diaphragm (PC-Nikkor lens)
First, determine the correct exposure by adjusting the shutter speed and aperture. Then, focus at full aperture. Shift the lens so that you get the desired composition. Return the aperture setting to the preset position and shoot.
- Lens with fixed aperture (Reflex-Nikkor lens)
Exposure cannot be changed according to the aperture because in this type of lens, the aperture is fixed. Determine the correct exposure by turning the shutter speed dial. If correct exposure is unobtainable, use an ND (neutral density) filter or change the illumination to adjust the exposure.

CONTROLS IN DETAIL—continued

Exposure measurement in special cases

The exposure meter of the Nikon FM2 adopts the center-weighted exposure measurement system in which approximately 60% of the total amount of light is measured by the 12mm-diameter circle at the center of the focusing screen.

When the background of the main subject is too bright and the main subject is not centered within the frame, the result is underexposure (see Fig. 1). When the background is too dark and the main subject is too bright with the same framing as above, the result is overexposure.

To compensate—

- 1) Focus on the main subject with the composition you have in mind.
- 2) Move the camera to center the main subject in the viewfinder (see Fig. 2) and perform exposure measurement.
- 3) Move the camera back to the position described in 1) with the exposure setting described in 2) and depress the shutter release button.

This way, you will be able to obtain correct exposure.



Fig. 1

Underexposure

5.6

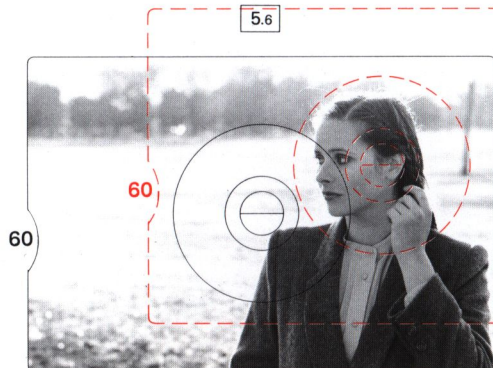


Fig. 2

Correct exposure

Duplication work and photomicrography

In duplication work and photomicrography, you cannot obtain correct exposure by simply referring to the FM2's LED exposure display because these types of photography represent unusual contrast situations. Exposure compensation is required. Shown in the table is the relationship between specific photo types and proper exposure. Since this is meant to be a guide, in practice you should make further compensation by experimentation until you achieve the proper results.

- Since color slide film has small exposure latitude, it is advisable to take an extra shot keeping the following in mind for automatic exposure measurement:

One stop overexposure for light-toned subject.


One stop underexposure for dark-toned subject.

- When using microfilm for duplication work, it is better to determine the exposure after taking experimental shots, since microfilm has a very small latitude, too, and the results are easily affected by the developing conditions and by the film emulsion number.
- To avoid vibration, you can make the exposure by turning the illumination on and off.
- It is advisable to use cable release to eliminate camera vibration.

	Subject	Method of exposure measurement	Exposure compensation	Required accessories	Caution
General duplication	Photographs and pictures with continuous gradation	Full-aperture or stop-down	Compensation not necessary	Micro-Nikkor 55 mm f/2.8 Cable release	For high contrast subjects, regardless of whether the base is black or white, make compensation after determining exposure with an 18% standard reflex board.
	Documents and drawings of high contrast		Approx. + 2 stops		
Slide duplication	General film with continuous gradation	Stop-down	Compensation not necessary	Micro-Nikkor 55 mm f/2.8	When using Nikon Slide Copying Adapter PS-6, set the flood lamp 30 cm away from its opal plate.
	Film of documents and drawings photographed		+ 1-1/2 stop when letters are printed black on white base	Nikon Slide Copying Adapter PS-6 Nikon Bellows Focusing Attachment PB-6	
			- 1/2 stop when letters are printed white on black base	Cable release	
Photomicrography	Prepared specimen	Stop-down	Approx. + 1 stop		Generally, results come out better with larger exposures in photomicrography. The compensation value on the left is only a general example; determine the compensation value by test shooting.

Note: The exposure compensation values tabled here are reference data obtained when color positive film, color negative film and general panchromatic film are used. +: more exposure -: less exposure

CONTROLS IN DETAIL—continued

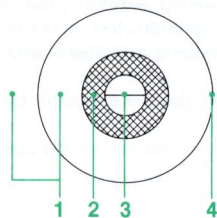

Inside the viewfinder:

1. Fine matte/Fresnel outer field
2. Microprism collar
3. Split-image rangefinder spot
4. 12 mm-diameter reference circle


Viewfinder/viewing & focusing

The conventional way of securing correct focus is to turn the lens focusing ring until the image in the viewfinder appears sharp. The K focusing screen that comes with the camera as standard equipment has three focusing aids. When focusing with the split image, turn the ring until the image in the two halves becomes whole. With the microprism grid, turn the ring until the shimmering image appears sharp. With the matte outer field, turn the ring until the image appears sharp. The split-image rangefinder works well for subjects with definite lines, contours and boundaries. The microprism collar is for focusing on fast-moving subjects or those with indistinct lines, while the matte outer field is suitable for close-ups or when using lenses with a maximum aperture smaller than $f/4.5$.


There's another way of securing correct focus. Using the distance scale ④ on the lens, set the focusing ring in accordance with the measured distance. Be sure to gauge the distance between the subject and the film plane indicator ⑨.

Note: The FM2 viewfinder covers approx. 93% of the image area of the actual photograph so the actual picture comes out larger than the image in the viewfinder. Note that the picture comes out trimmed down in the case of mounted slides or service-size prints from negatives.

**Split-image
focusing**

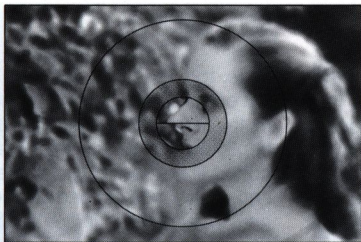


Out of focus

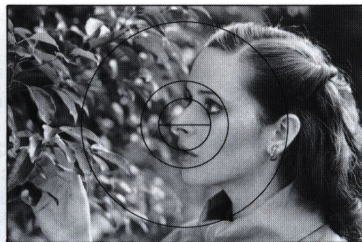


In focus

**Microprism grid
focusing**

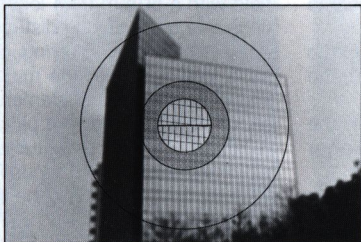


Out of focus

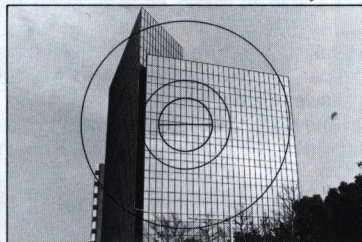


In focus

**Matte outer
field focusing**

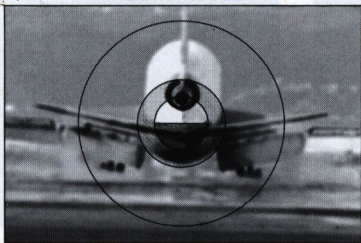

Out of focus

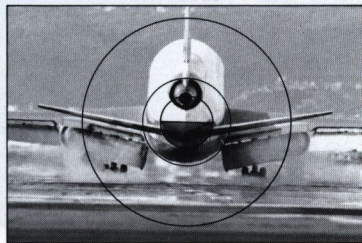

In focus

CONTROLS IN DETAIL—continued

Depth-of-field preview lever ⑤

What depth of field is

When you focus on your subject at a certain aperture, you will find that not only is the subject itself in focus but objects in a certain distance range both in front of and behind it appear sharp. Objects increasingly out of this range become increasingly out of focus. This "in-focus zone" is known as "depth of field." When this zone of sharpness is large, the depth of field is said to be deep; when it is small, the depth of field is said to be shallow.

The following can be said of depth of field, given the same focusing distance:

- 1) The smaller the taking aperture (i.e., the higher the f /stop number), the deeper the depth of field, and the larger the aperture, the shallower the depth of field.
- 2) The farther away the subject is from the lens, the deeper the depth of field becomes; the closer to the lens, the shallower the depth of field.
- 3) There's greater depth of field behind the main subject than in front of it.

Note, too, that in the case of lenses with different focal lengths but of the same maximum f /number, the shorter the focal length of the lens, the larger the depth of field, and vice versa. The depth of field at the taking aperture is indicated by the color-coded lines having the same color as that of the aperture set and which correspond to the distance scale on the focusing ring. The range is indicated by the distance between the lines. Shown in the photo is an example of the difference in depth of field with a 50mm $f/1.4$ lens when using different aperture settings at a set focusing distance of 2m. Control of depth of field enables selective blurring of the background elements of a picture either to let the major subject stand out or for overall sharpness, so that all elements in the entire picture field appear sharp. This will give your picture its own character, thus making it different from other pictures.

Getting the subject in focus is only one aspect of photography. When you take pictures, be sure to consider depth of field, too.




Lens set at $f/1.4$
Only major subject is in focus.



Lens set at $f/16$
Most objects near to far are in focus.


CONTROLS IN DETAIL—continued

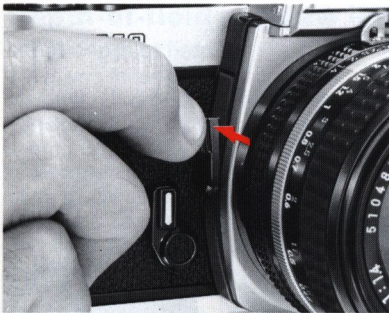

Depth-of-field preview lever ⑤


When a lens with an automatic diaphragm is used, the image in the viewfinder is viewed with the aperture diaphragm of the lens wide open. However, pressing the depth-of-field preview lever will cause the lens to be stopped down to the f/number set to enable you to examine depth of field before shooting. The image in the viewfinder “darkens” according to the selected f/number—the smaller the aperture (i.e., the larger the f/number), the “darker” the image. Components of the picture that appear in focus when the lever is pressed will be in the zone of sharp focus.

Note: Be sure to press the depth-of-field preview lever fully. Also, release the lever when you depress the shutter release button.

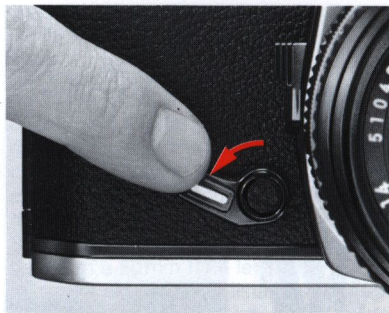

Self-timer lever ⑥

This device is useful in self-portraits or when taking a picture of yourself with other people. Set the self-timer by turning the lever as far as it will go in the direction of the arrow shown in the photo. This can be done either before or after the film is advanced. After the self-timer has been set, press the shutter release button. Reflex mirror ㉔ will go up and the self-timer will start to operate; the shutter is released after a delay of approx. 10 sec. If you want to cancel self-timer operation after the lever has been set, move it back to its original position with your finger. You can then take the picture the standard way as before. However, turning the self-timer lever when it is already in operation will result in the shutter's being released the moment the lever is back in its original position. Except for B (bulb), the self-timer can be used at any shutter speed.

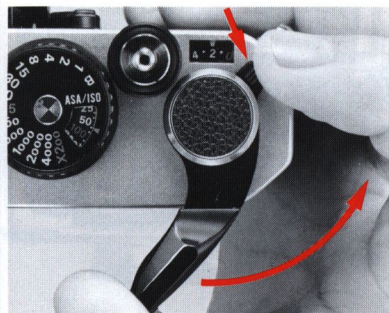

Multiple exposure lever ⑤1

Taking a picture of different subjects or two or more of the same subject on the same frame means multiple exposure. To make a multiple exposure, observe the following:

- 1) Take the first shot. (Press the shutter release button.)
- 2) Pull the multiple exposure lever in the direction of the arrow shown in the photo, as you wind the film advance lever fully. The frame counter will not advance; only the shutter is ready to be released again. Although the finger pulling the multiple exposure lever will automatically slip off the lever as the film advance lever is wound, multiple exposure operation will have been performed correctly.
- 3) After winding the film advance lever fully, take the second shot.

To take three exposures or more on the same frame, repeat the procedures described in 2) and 3).



CONTROLS IN DETAIL—continued



Memo holder ④③


To remind yourself of the film type and number of exposures on the roll of film in use, clip off the end of the film package and insert it into the memo holder. Of course, you can use the memo holder to store anything, including your name card.



Infrared compensation index ③①

When you shoot black-and-white infrared film, note that the plane of sharpest focus is slightly farther away than that in visible-light photography. To compensate for this shift in focus, refer to the infrared index (in the form of either a red dot or a red line) near the focusing index on the lens barrel. (Some lenses, including the Reflex Nikkor, do not need compensation.)

After focusing the image sharply through the viewfinder, check the focused distance and turn the focusing ring to the left until the red infrared compensation index lines up with the pre-focused distance. Be sure to shoot with the R60 filter. (In this photo, the subject-to-camera distance is set at ∞ .)

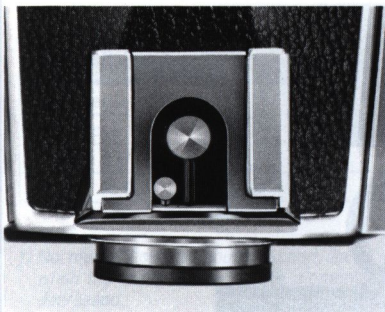

Flash photography

A Nikon electronic flash unit will prove very convenient for indoor or nighttime shooting or for use in the daytime as supplementary lighting. The FM2's built-in hot-shoe contact ③ enables direct mounting of the Nikon SB-15, SB-10 or SB-E Speedlight, requiring no special connecting cords. When shooting with a flash unit, you should determine the aperture setting that corresponds to the shooting distance after checking the guide number of the electronic flash unit or flashbulb in use. Also, if the speedlight requires the use of a connecting cord, insert the cord into the camera body's sync cord terminal ⑩. Since the FM2's hot-shoe contact becomes active only when an electronic flash unit is mounted, touching it accidentally is harmless.



The use of flash units not provided with a hot-shoe contact* is not recommended because accidental firing is likely to occur due to short circuiting at the contact. When using such flash units, seal the hot-shoe contact on the camera body with vinyl tape or something appropriate to insulate it.

The FM2, provided only with an X-contact for synchronization, synchronizes with the speedlight when the shutter speed set is 1/125 sec. or slower, or when the shutter speed dial is set to X200.

** Old type flash units with metallic leaf spring on mounting portion.*

Synchronization Range

Shutter speed (sec.)	X200	1/4000	1/2000	1/1000	1/500	1/250	1/125	1/60	1/30	1/15	1/8	1/4	1/2	1	B
Speedlight															
Flash Bulb M															
Flash Bulb FP															
Flash Bulb MF															


 Synchronized
 Cannot be used

Note: When using a special electronic flash unit that has a provision for time lag, adjust the shutter speed down to 1/60 sec. or slower according to the time lag. With flashbulbs, set the shutter speed at 1/30 sec. or slower.

CONTROLS IN DETAIL—continued



Picture taken by balancing the flash exposure with daylight.

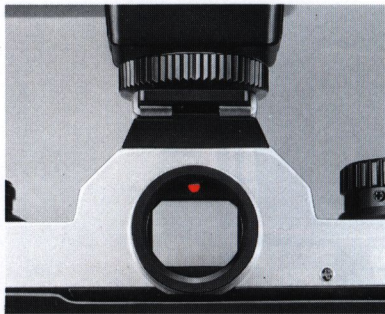

Ready-light ⑨

When the SB-15, SB-10 or SB-E is attached to the FM2, the built-in LED ready-light tells you when the speedlight is recycled and ready to fire or when the shutter speed is set outside sync range, without your having to remove your eye from the viewfinder. Before you shoot, make sure the ready-light is on. The moment the shutter is released, the speedlight will fire and the ready-light will go out.

If the shutter speed is set between 1/250sec. and 1/4000sec., the ready-light will blink when the speedlight is fully charged, to warn you that the shutter speed is outside sync range.

For ready-light availability with speedlights other than the SB-15, SB-10 and SB-E, refer to page 35.

Ready-Light Status Per Shutter Speed Dial Setting

Shutter speed dial setting	Speedlight charging complete	Speedlight charging incomplete
1/4000 sec. ~ 1/250 sec.	Blinks	Off
1/125 sec. ~ 1 sec.	Lights up continuously	"
B	"	"
X200	"	"

Notes:



- 1) No matter how the shutter speed dial is set, the speedlight will fire when the ready-light is on the moment the shutter release button is depressed.
- 2) The ready-light will function regardless of whether the camera's exposure meter is on or off.
- 3) When the camera's exposure meter is on, the LED exposure display inside the viewfinder shows the exposure condition of the moment regardless of whether or not the flash fires. If the shutter speed is set at either B or X200, the LED exposure display will not be activated.

Caution: For flash photography, it is recommended that you use a Nikon dedicated electronic flash unit which operates at a low voltage current. Use of any other flash which operates at high voltages may damage the camera's circuitry. Any damage caused by such use is not covered by the Nikon Warranty.

Combination Chart of Nikon FM2 and Nikon Speedlights

Speedlight	FM2 Ready-light	Type of connection	Mode
SB-E	Lights up	Direct	Automatic
SB-6	Does not light up	With Coiled Sync Cord SC-6	Manual
		With Flash Unit Coupler AS-2 and Extension Cord SC-9 used with Sensor Unit SU-1	Automatic
SB-7E	Does not light up	With Flash Unit Coupler AS-2	Automatic
SB-10	Lights up	Direct	Automatic
SB-11 SB-14	Does not light up	With Sync Cord SC-11 used with Sensor Unit SU-2	Automatic
	Lights up	With Extension Cord SC-13 used with Sensor Unit SU-2	
SB-12	Lights up	Flash Unit Coupler AS-6	Manual
SB-15	Lights up	Direct	Automatic

ACCESSORIES

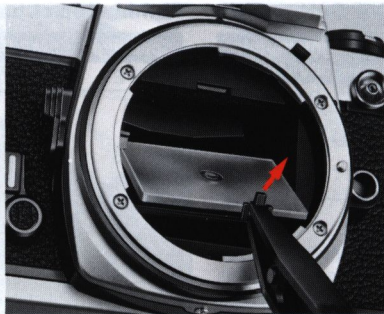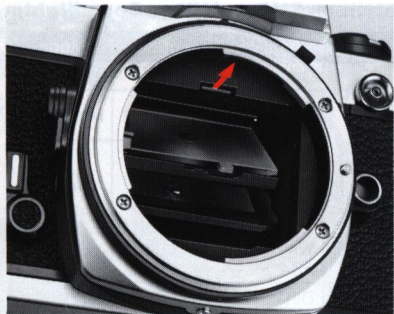

Interchangeable focusing screens

Three different types of focusing screens are usable with the Nikon FM2. The Type K screen comes with the camera as a standard accessory. You can also use either the Type B (matte/Fresnel with focusing spot) or the Type E (matte/Fresnel with focusing spot and grid), depending on your type of photography or the specific application on hand.




To change focusing screens, follow this procedure:

- 1) Remove the lens from the camera body (see page 8).
- 2) Note the focusing screen release latch ㊟ at the top front of the mirror box casting. Slip the small tip of the special tweezers that come with optional screens under the latch and pull outward to spring open the holder.

- 3) Take the screen out of the holder by grasping the small tab on it with the tweezers.
- 4) To mount another screen, carefully position it in place with the flat side face down and the side with the tab up.
- 5) Then push the front edge of the holder upward with the tweezers until it clicks into position.

Note: To avoid getting smudges or fingerprints on the screen's optical surface, do not handle the screen with your fingers.

Focusing Screen Selector Guide

Type	Name/style	Features
	Split-image rangefinder/ microprism system	Suitable for general photography. Microprism doughnut incorporated around the outer circumference of the central split-image rangefinder spot.
	Matte system	Works well for general photography, close-up photography and duplication work. Especially useful for people who prefer to focus on the matte focusing spot at the center of the screen, or when it is inconvenient to use the split-image rangefinder for focusing as is the case with telephoto lenses.
	Horizontal and vertical line etched system	Extremely useful in pictorial composition. Consists of Type B matte field with etched horizontal and vertical lines. Especially handy when using PC-Nikkor lenses.

Lens	Screen	K	B	E
Fisheye	8mm f/2.8	○	○	○
	8mm f/2.8	○	○	○
	16mm f/2.8	○	○	○
	13mm f/5.6	●	○	○
	15mm f/3.5	○	○	○
Wideangle	18mm f/4	○	○	○
	20mm f/3.5	○	○	○
	24mm f/2	○	○	○
	24mm f/2.8	○	○	○
	28mm f/2	○	○	○
	28mm f/2.8	○	○	○
	28mm f/3.5	○	○	○
	35mm f/1.4	○	○	○
	35mm f/2	○	○	○
	35mm f/2.8	○	○	○
Normal	50mm f/1.2	○	○	○
	50mm f/1.4	○	○	○
	50mm f/1.8	○	○	○
	55mm f/1.4	○	○	○
	55mm f/2	○	○	○
Telephoto	105mm f/1.8	○	○	○
	105mm f/2.5	○	○	○
	135mm f/2	○	○	○
	135mm f/2.8	○	○	○
	135mm f/3.5	○	○	○
	180mm f/2.8	○	○	○
	ED180mm f/2.8	○	○	○
	200mm f/4	○	○	○
	*ED300mm f/2.8 IF	○	○	○
	300mm f/4.5	○	○	○
Super-telephoto	*ED300mm f/4.5 IF	○	○	○
	*ED400mm f/3.5 IF	○	○	○
	*ED400mm f/5.6 IF	●	○	○
	*ED600mm f/5.6 IF	●	○	○
	*ED800mm f/8 IF	●	○	○
Zoom	*ED1200mm f/11 IF	●	○	○
	25-50mm f/4	○	○	○
	35-70mm f/3.5	○	○	○
	43-85mm f/3.5	○	○	○
	ED50-300mm f/4.5	○	○	○
	80-200mm f/4	○	○	○
	ED180-600mm f/8	●	○	○
	200-600mm f/9.5	○	○	○
	ED360-1200mm f/11	○	○	○
		○	○	○
PC	28mm f/3.5	●	○	○
	35mm f/2.8	●	○	○
Noot	58mm f/1.2	○	○	○
	55mm f/2.8	○	○	○
Micro	105mm f/4	○	○	○
	*200mm f/4 IF	○	○	○
Medical	*120mm f/4 IF	○	○	○
	500mm f/8	○	○	○
Reflex	1000mm f/11	○	○	○
	2000mm f/11	○	○	○
	28mm f/2.8	○	○	○
Series E	35mm f/2.5	○	○	○
	50mm f/1.8	○	○	○
	100mm f/2.8	○	○	○
	135mm f/2.8	○	○	○
	36-72mm f/3.5	○	○	○
	70-210mm f/4	○	○	○
	75-150mm f/3.5	○	○	○

- = Excellent focusing
 ● = Acceptable focusing
 The split-image rangefinder, or cross-hair area is dim. Focus on the surrounding matte area.
 ■ = Exposure measurement via stop-down method.

*Internal focusing type.

ACCESSORIES—continued

Close-up equipment

The following are some of the accessories you can use for close-up photography.

- 1) Close-Up Lenses No. 0, No. 1, No. 2, No. 3T, No. 4T, No. 5T, No. 6T.

Since these lenses are attached to the front of the lens in use, metering can still be done at full aperture.

- 2) Auto Extension Rings PK-11, 12 and 13.

- 3) Bellows Focusing Attachment PB-6.

The Auto Extension Rings and the PB-6 are attached between the lens and camera body. If one of the rings is used with an AI lens, exposure determination is at full aperture because the exposure meter is linked to the automatic diaphragm of the lens. As for the PB-6, stop-down exposure measurement is necessary because the exposure meter is not linked with the automatic diaphragm of the lens. You can change magnifications continuously by extending the bellows.

Note, too, that it is possible to use a close-up lens, ring and the PB-6 all at the same time.

- 4) Nikkor lenses for close-ups: Micro-Nikkor 55mm f/2.8, 105mm f/4 and 200mm f/4 IF.

To obtain 1/2X~1X magnification with an AI micro lens, the use of a ring is required: the PK-13 for the 55mm f/2.8, and the PN-11 for the 105mm f/4. You can obtain up to 1X magnification by using a 200mm f/4 IF with the TC-200 or the TC-300 Teleconverter attached. Even when these accessories are attached, the automatic diaphragm is linked with the exposure meter, so exposure is determined at full aperture. Note that in close-up photography, the depth of field is generally shallow. Thus, you should stop down as much as possible in photographing a subject with very little depth. Also, it is advisable to use the Type K's matte outer field for

focusing (or to change focusing screens) because it is not easy to focus with the split-image or microprism ring.

Note: Non-AI extension rings such as the PK-1, 2, 3, PN-1, etc. cannot be attached to the FM2.




Auto Extension Rings


PB-6

Close-Up Lenses

Motor Drive MD-12

The use of the MD-12 motor drive unit with the FM2 enables automatic film advance when the unit's trigger button is pressed. In addition to single-frame shooting, continuous firing at the maximum rate of 3.2 frames per second is possible (i.e., when the shutter speed set is between 1/125 and 1/4000 sec.). The motor drive unit proves very convenient when shooting fast-moving subjects since the photographer does not have to wind film manually or take his eye off the viewfinder.

The MD-12 can be mounted onto the FM2 by simply inserting and tightening its built-in screw into the tripod socket  at the base of the camera body. Note that lightly pressing the MD-12's trigger activates the FM2's exposure meter.

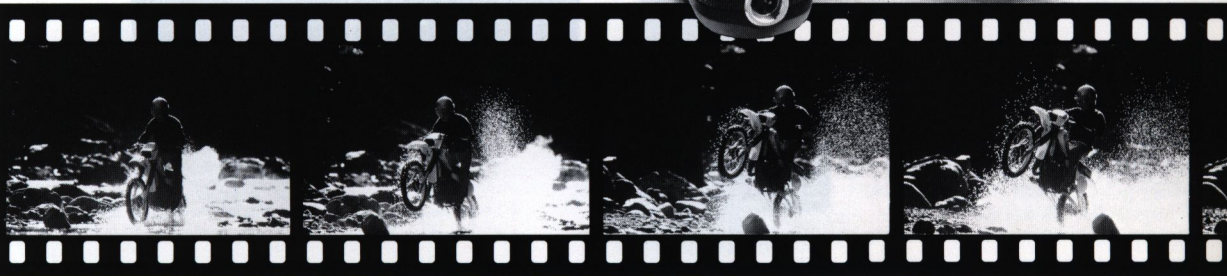

ACCESSORIES—continued

Nikon Speedlights

Nikon speedlights are convenient for shooting in dim light or taking backlit portraits, as well as for synchro-sunlight shooting. Various models are available—from speedlights for beginners to those for professionals. The Nikon SB-15, SB-10 or SB-E Speedlight can be directly mounted onto the FM2's built-in hot shoe. These speedlights also activate the camera's LED ready-light inside the viewfinder which lights up when the flash unit is fully recycled and ready to fire, and blinks when the shutter speed set is outside the synchronization range—all without having to remove your eye from the viewfinder (see page 34).



Data Back MF-12

By changing the FM2's camera back with the MF-12, you can record data on the lower right-hand corner of the photograph. You have a choice of recording the Year/Month/Day, the Day/Hour/Minute or any 2-digit number. The MF-12's quartz digital clock is precision-programmed for up to the year 2100.

Battery Holder DB-3

Instead of two silver-oxide batteries, the Data Back MF-12 can use the Battery Holder DB-3 which accepts two AAA-type batteries. Compared with silver-oxide batteries, the DB-3 and AAA batteries together have a longer life and are more economical.

Camera Case Base Portion CF-15D

The CF-15D holds the Nikon FM2, Nikon FE or Nikon FM with the Data Back MF-12 attached. Note that it cannot be used when the DB-3 is attached to the MF-12.



MF-12



DB-3

ACCESSORIES—continued

Anti-Cold Battery Pack DB-2

In cold weather, use the Anti-Cold Battery Pack DB-2, which accepts two AA-type batteries, as an alternative power supply to the batteries inside the camera body. Simply connect the DB-2 to the camera body, then slip the assembly inside your pocket or coat to keep it warm. This assures that the camera's metering system will function even in very cold temperatures.

Right-Angle Viewing Attachment DR-3

Screws onto the viewfinder eyepiece ⑩ to provide a viewfinder image at a 90° angle to the camera's optical axis. Very helpful for closeup photography, duplication work and photomicrography.

Eyepiece Magnifier DG-2

Attached to the viewfinder eyepiece, this accessory enlarges the image at the center of the viewfinder to assure ever precise focusing in closeup photography, duplication work and telephotography.

Rubber eyecup

Attached to the finder eyepiece, this eyecup excludes strong light and helps prevent eye fatigue.

Eye-piece correction lenses

Accessory lenses that screw onto the viewfinder eyepiece to enable near- and farsighted photographers to take pictures without having to wear eyeglasses. Nine models are available, offering a choice of the following diopters: -5, -4, -3, -2, 0, +0.5, +1, +2 and +3; the diopters represent the combined dioptry of the viewfinder and lens, and not the dioptry of the eyepiece correction lens only. For best results, choose the eye-

piece correction lens most suitable for you only after actually trying out various models at the camera shop.

Cable Release AR-3

The screw-type AR-3 makes for vibration-free shutter release.



DB-2



DR-3



DG-2



Rubber eyecup



Eye-piece correction lenses



AR-3

Filters

As is shown on the table, Nikon filters are broadly divided into the screw-in type and the drop-in type. For the Nikon FM2, the filter factor can be ignored except in the case of the R60. When using the R60 in tungsten lighting, set the aperture one f/stop wider than the figure indicated by the exposure meter.

Notes:

- 1) For lens protection, the L39 and L37C are recommended.
- 2) When shooting a backlit subject or if there's a bright light source in the frame, a ghost image is likely to result from the use of a filter. In this case, you should take the picture without a filter.

Lens hoods

Recommended to prevent extraneous light from striking the lens, Nikon's lens hoods come in four styles: screw-in, slip-on, snap-on, and collapsible-rubber. Every lens should be fitted with the lens hood specially designed for it. Note, however, that some lens hoods can be used in common by several lenses.



Type			Filter Designation	Filter Factor		Screw-in Type (mm)							Drop-in Type
				Daylight	Tungsten Light	39	52	62	72	95	122	Series IX	
For Both Color and Black-and-White Film	Skylight		L18C	1		●	●	●	●				
	Ultraviolet		L37C	1		●	●	●	●		●		
			L39	1			●		●	●	●	●	
For Black-and-White Film	Yellow	Light	Y44	1.5 (1/2)	1		●					●	
		Medium	Y48	1.7 (2/3)	1.2 (1/2)		●	●	●	●	●	●	
		Deep	Y52	2 (1)	1.4 (1/2)	●	●					●	
	Orange		O56	3.5 (1 3/4)	2 (1)	●	●	●	●	●	●	●	
	Red		R60	8 (3)	5 (2 1/2)	●	●	●	●	●	●	●	
	Green	Light	X0	2 (1)	1.7 (2/3)		●						
		Deep	X1	5 (2 1/2)	3.5 (1 3/4)		●						
For Both Color and Black-and-White Film	Polarizing		Polar	2 ~ 4 (1 ~ 2)			●	●	●				
	Soft filters		No. 1	1			●						
			No. 2	1			●						
	Neutral Density		ND2X	2 (1)		●							
			ND4X	4 (2)		●	●		●				
ND8X			8 (3)		●	●							
For Color Film	Amber	Light	A2	1.2 (1/3)		●	●						
		Deep	A12	2 (1)		●	●						
	Blue	Light	B2	1.2 (1/3)		●	●						
		Medium	B8	1.6 (2/3)		●	●						
		Deep	B12	2.2 (1 1/4)		●	●						

() indicates increase in f/stop.

ACCESSORIES—continued

Camera cases


Semi-soft cases, such as the CF-7, CF-8 and CF-9, are available. The CF-7 case accommodates the FM2 mounted with a lens smaller than 50mm f/1.4. The CF-8 is for the camera mounted with any lens from 50mm f/1.2 to 105mm f/2.5 or with the Nikkor 43~86mm f/3.5 lens. When a motor drive is attached to the FM2, use the CF-9 case. The soft-type CS-16 case is also available.

Neckstraps

Available are the leather neckstrap AN-1 (black), webbed nylon neckstraps AN-4Y (yellow) and AN-4B (black), and wider webbed nylon neckstraps AN-6Y (yellow) and AN-6W (brown).

Compartment cases

A wide selection of six types to choose from, ranging from a compact type to a large type which can accommodate large or bulky camera equipment: FB-8, FB-11A, FB-14, FB-15, FB-16 and FB-17.

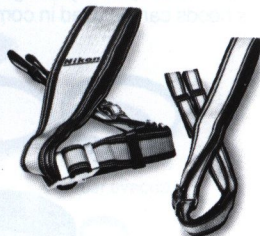

TIPS ON BATTERY USE


- Battery power falls off in extremely cold temperatures and this may cause the camera's photometric circuit to malfunction. In this situation, use new batteries and protect the camera body from the cold. Note that battery power will be recovered as soon as the temperature becomes normal.
- Should the battery be left in the battery chamber for a long period, insufficient contact may occur due to battery leakage. Thus, it is good practice to periodically clean the battery and the contact section in the battery chamber with a soft cloth. If the battery chamber is stained with a leaking battery, remove the battery at once and clean the chamber.
- If you're using a pair of batteries, change them at the same time; never mix new and old batteries.
- When not using the camera for a long period, take batteries out and store them in a cool, dry place.
- Never disassemble batteries or discard them in fire.
- When using a pair of batteries, make sure they are of the same make.
- Always check battery power before the shooting session because battery power can become exhausted without warning. It is a good idea to have spare batteries on hand during a protracted shooting assignment.
- Keep batteries away from infants and small children. In case a battery is accidentally swallowed, call a doctor immediately as the material inside the batteries can cause serious problems.

TIPS ON CAMERA CARE

Although the FM2 is a tough and durable camera, bear in mind that it is a precision optical instrument, and that careless or rough handling may damage it. Observe the following tips, and the FM2 will always work as perfectly as the day you bought it.




- Don't touch the reflex mirror or the focusing screen to prevent them from getting scratched. Remove dust with a blower-type brush.

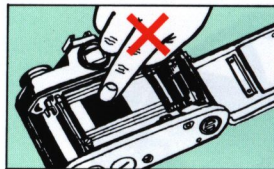

- Do not touch the shutter curtains.



- Clean glass surfaces such as the lens or the finder eyepiece with a blower-type brush; avoid using lens tissue as much as possible. Gently wipe dirt, smudges or fingerprints with soft cotton moistened with a small amount of absolute alcohol, using a spiral motion from center to periphery. Make sure you leave no wiping traces.

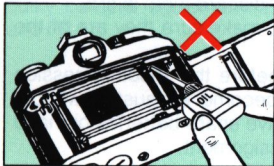


- Generally, the camera does not need lubrication.




- If the camera body is exposed to rain or mist, wipe moisture gently with a soft cloth and dry the camera. After using the camera near salt water, take care that you wipe it with a cloth moistened with pure water to remove possible traces of salt.




- If the inside of the camera body accidentally gets wet, its internal precision parts may get rusty. Take the camera right away to the nearest authorized Nikon dealer for a checkup which may require repair payment.

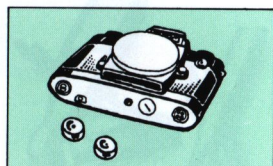

- When not using the camera for a long time, take out the batteries and store the camera away from high temperature, high humidity, naphthaline, or camphor.

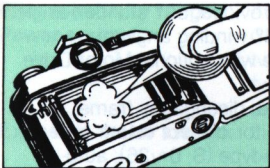

- Clean metallic parts with a blower-type brush or with a dry, soft cloth.

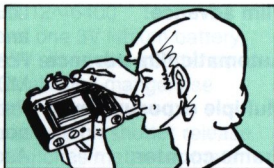


- Before using the camera, it is a good practice to check it thoroughly first.

After-sales service

For your convenience, Nikon offers comprehensive after-sales service:

- All spare parts of the Nikon FM2 will be stocked for approximately 10 years dating to when the model is discontinued. Repairs related to the replacement of spare parts will be conducted as long as there are spare parts.
- Note, however, that even after this period, some parts may have alternates that can be used. It is always best to check with the shop where you bought your camera or with an authorized Nikon dealer.

Note: Cameras deemed totally damaged by flood, fire or severe dropping may be impossible to repair. In all repair cases, an authorized Nikon service facility will determine the extent of damage.

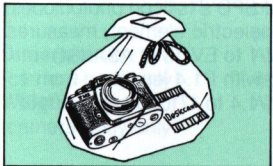

- In a humid environment, it is best to store the camera in a vinyl bag with a desiccant to keep away dust, moisture and salt.



- Note that storing leather cases in a vinyl bag may cause the leather to deteriorate, so exercise due care.

SPECIFICATIONS

Type of camera:	35mm single-lens reflex (SLR) focal plane shutter camera	Film advance:	Lever provided; 30° standoff angle and 135° winding angle
Usable film:	Any cartridge-type 35mm film	Automatic film advance:	Possible with optional Motor Drive MD-12
Picture format:	24mm×36mm	Multiple exposure lever:	Provided, disengages frame counter for correct count
Lens mount:	Nikon F bayonet mount	Frame counter:	Additive type (S, 0~36); automatically resets to S when camera back is opened
Shutter:	Vertical-travel, metal focal plane shutter with titanium curtains	Film rewind:	By crank provided after film rewind button is pressed
Shutter speed settings:	1 sec.~1/4000 sec., X200 (1/200 sec.), B (bulb); 15 fixed settings in all	Flash synchronization:	Built-in hot shoe for mounting flash unit; sync cord terminal also provided; X200 setting for 1/200 sec. sync
Self-timer:	Set/cancel type provided; approx. 10-sec. shutter release delay	Ready-light:	Provided inside the viewfinder
Viewfinder:	Eye-level type, with 93% frame coverage	Exposure meter:	TTL center-weighted full aperture exposure measuring system using a pair of SPD's (silicon photodiodes) as photoelectric element; measures from EV 1 to EV 18 at ASA/ISO 100 and with f/1.4 lens (i.e., from 1 sec. at f/1.4 to 1/1000 sec. at f/16)
Viewfinder display:	Shutter speed, f/number, and LED exposure display for overexposure +, correct exposure ○ and underexposure –		
Focusing screen:	Split-image micropism type (Type K) provided as standard; matte type (B) and matte with horizontal and vertical line etchings (E) optionally available.		
Mirror:	Quick-return type		

- Film sensitivity range:** ASA/ISO 12~6400
- Power source:** Choice of one 3V lithium battery, two 1.55V silver-oxide batteries, or two 1.5V alkaline-manganese batteries
- Exposure meter switch:** Light pressure on shutter release button switches meter on; meter stays on for approx. 30 sec. after finger leaves button, then automatically switches off
- Battery power check:** LED exposure display inside viewfinder lights up when the exposure meter is switched on if there is sufficient power (i.e., the shutter speed dial should be set anywhere except X200 and B)
- Camera back:** Pops open when the film rewind knob as the camera back lock is pushed; detachable; memo holder provided.
- Dimensions:** (camera body only) Approx. 142.5mm(W)×90mm(H)×60mm(D)
- Weight:** (camera body only) Approx. 540g



IMPORTANT!

The Nikon FM2 is an AI-type (Automatic Maximum Aperture Indexing) camera which performs full-aperture metering with AI-type lenses such as the AI-Nikkor and Nikon Series E lenses. The aperture rings of these lenses are fitted with meter coupling ridges (see illustration). Almost all lenses now manufactured by Nikon are the AI type. However, please confirm whether or not your lens is AI before using it with the FM2.

Although almost all Nikkor lenses that have the Nikon F bayonet mount, as well as the Nikon Series E lenses, can be mounted on the FM2, the FM2 cannot be used with Nikkor lenses that have not yet been modified to offer the AI facility and with a few special-purpose lenses because the FM2's meter coupling ridge is fixed, and the FM2 does not have a mirror lock-up mechanism. For particulars, refer to the table below.

Lens	Reason	Remarks
Fisheye-Nikkor 6mm f/5.6	Requires mirror lock-up	Not usable
Fisheye-Nikkor 10mm f/5.6 OP	"	"
PC-Nikkor 28mm f/4	Hits camera's meter coupling lever	Serial No.180901 and higher usable
PC-Nikkor 35mm f/2.8	"	Serial No.906201 and higher usable
Reflex-Nikkor 1000mm f/11	"	Serial No.143001 and higher usable
Reflex-Nikkor 2000mm f/11	"	Serial No.200311 and higher usable
Zoom-Nikkor 200—600mm f/9.5	"	Serial No.300491 and higher usable
Zoom-Nikkor ED 180—600mm f/8	"	Serial No.174167 and higher usable
Zoom-Nikkor ED 360—1200mm f/11	"	Serial No.174088 and higher usable
Focusing Unit AU-1	"	Not usable
Other Nikkor lenses that have not been modified to offer the AI facility	"	Requires AI modification

Note: The modification at reasonable cost of most non-AI Nikkor lenses having a meter coupling prong is available for the convenience of Nikkor lens users. For further information concerning AI lens modification, please contact your local authorized Nikon dealer.

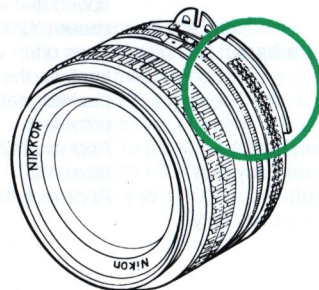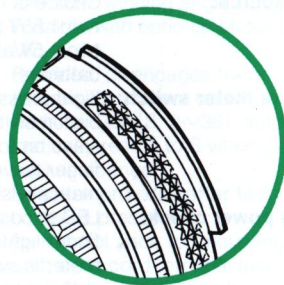



NIPPON KOGAKU K.K.

No reproduction in any form of this booklet,
in whole or in part (except for brief quotation in
critical articles or reviews), may be made without
written authorization from the publishers.

Printed in Japan (82.8.CO) &-5